


Portable Badminton Pitching Machine with Tripod User instruction

Please keep this instruction well

Parts content

The machine only uses Furlihong shuttlecocks

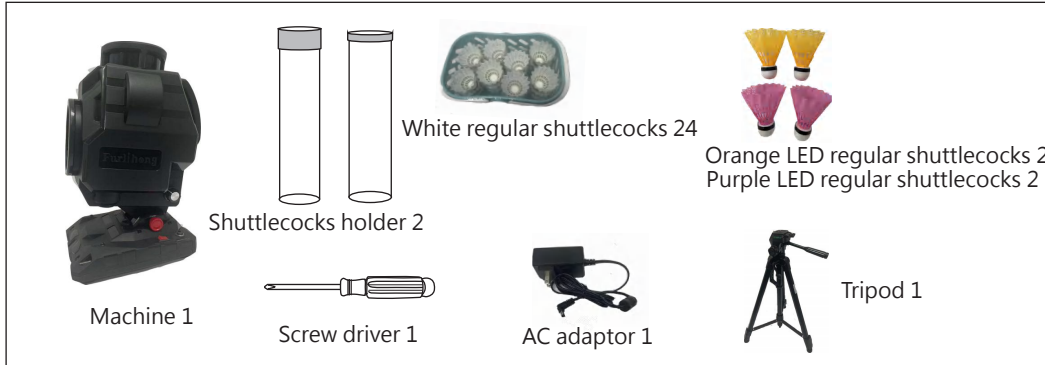

How to assemble

Combine 2 holders as below and attach to the machine



How to adjust angle

4 differences angle



Please use left hand to pull the pin out meanwhile steady the holder by right hand. Push the pin in for the demanding angle.

Shuttlecocks in

Leave all the Furlihong shuttlecocks in the holder, additional accessories can be purchased at our brand store. (Only use Furlihong shuttlecocks)



 
Note



Squeeze gently the leaf if it out of shapes
Please replace by new one if it's broken,

■ How to assemble batteries

- Please assemble the battery according to the positive “+” and negative “-”



- Please slide the door cover back and tighten screws after assembling

⚠ Precautions for battery installation


- The battery installation must be performed by adult.
- Do not mix different types of batteries.
- Remove batteries if not used machine for a long time.
- Please install “+” and “-” properly.

■ Tripod connectivity



Secure the machine on camera tripod.
The screw hole on the bottom of machine.
The machine is compatible with a standard camera tripod.

■ Shuttlecocks launch distance

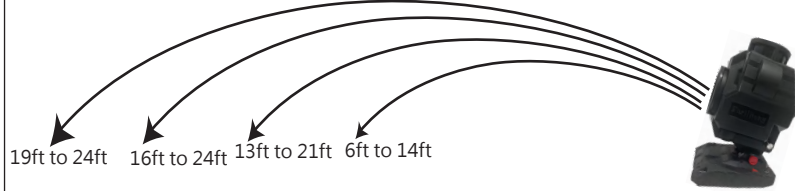

Launch distance vary depending on the battery capacity and AC adaptor.

⚠ NOTE

- Do not use in the rain, or near dust, salt spray.
- Do not wet the machine and battery box, AC adaptor.
- Ensure use the machine in wild space at least 40ft.
- Do not stand in front of the launcher when in operation.
- Do not place heavy object above machine
- Do not use this product for other purposes.
- Wipe and clean machine after finished training session.
- Children must play under adults supervision.
- Do not let face and hands approaching the launcher when in use.
- Do not disassemble this product, may cause malfunction.

MADE IN CHINA