


# Portable Badminton Pitching Machine

User instruction

Please keep this instruction well


## Parts content

The machine only uses Furlihong shuttlecocks

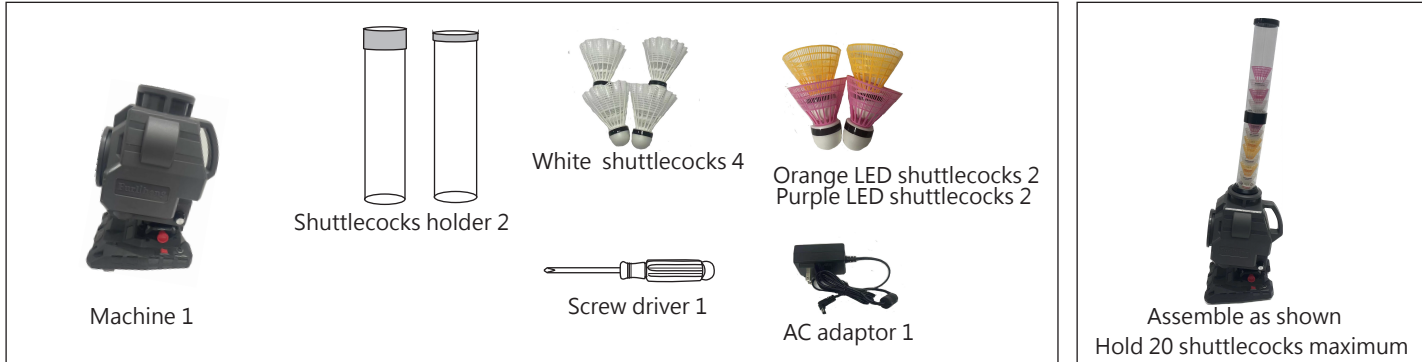

## How to assemble

Combine 2 holders as below and attach to the machine

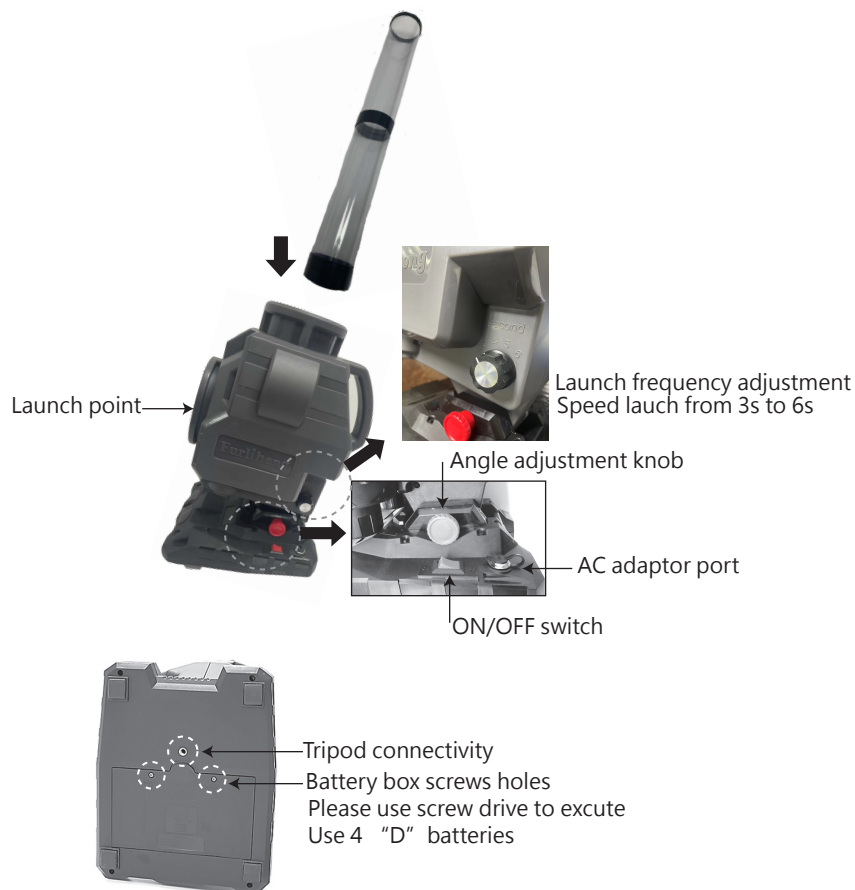

## How to adjust angle

4 differences angle



Please use left hand to pull the pin out meanwhile steady the holder by right hand. Push the pin in for the demanding angle.

## Shuttlecocks in

Leave all the Furlihong shuttlecocks in the holder, additional accessories can be purchased at our brand store. (Only use small shuttlecocks)



 
## Note



Squeeze gently the leaf if it out of shapes  
Please replace by new one if it's broken,

### ■ How to assemble batteries

- Please assemble the battery according to the positive “+” and negative “-”



- Please slide the door cover back and tighten screws after assembling

#### ⚠ Precautions for battery installation

- The battery installation must be performed by adult.
- Do not mix different types of batteries.
- Remove batteries if not used machine for a long time.
- Please install “+” and “-” properly.

### ■ Tripod connectivity



Secure the machine on camera tripod. The screw hole on the bottom of machine. The machine is compatible with a standard camera tripod.

### ■ Shuttlecocks launch distance



Launch distance vary depending on the battery capacity and AC adaptor.

#### ⚠ NOTE

- Do not use in the rain, or near dust, salt spray.
- Do not wet the machine and battery box, AC adaptor.
- Ensure use the machine in wild space at least 40ft.
- Do not stand in front of the launcher when in operation.
- Do not place heavy object above machine
- Do not use this product for other purposes.
- Wipe and clean machine after finished training session.
- Children must play under adults supervision.
- Do not let face and hands approaching the launcher when in use.
- Do not disassemble this product, may cause malfunction.

# MADE IN CHINA