



"Angel" Doll stroller

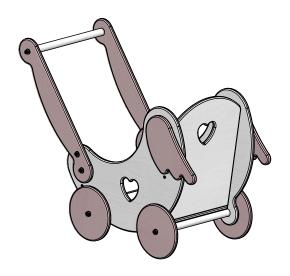


ASSEMBLY DETAILS

1 - Left sidewall	2 - Right sidewall	3 - Base	4 - Front plank
1 pc.	1 pc.	280 1 pc.	1 pc.
5 - Back plank	6 - Long nog	7 - Short nog	8 - Handle
250	278	270	· · · ·
1 pc.	2 pcs.	1 pc.	2 pcs.
9 - Wheel \$\to\$ 150	10 - 5x40 Confirmat	11 - 3 mm Hex key	12 - 4 mm Hex key
	screw		
4 pcs.	12 pcs.	1 pc.	1 pc.
13 - Self-tapping screw 6.3x40	14 - Erickson nut	15 - M6x16 screw	16 - 5 mm Hex key
6 pcs.	4 pcs.	4 pcs.	1 pc.



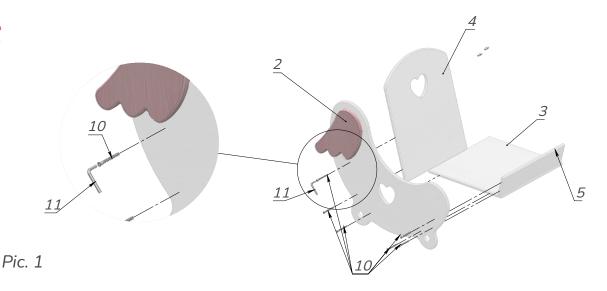


Take the left sidewall (2) and using the confirmat screws (10) and 3 mm hex key (11), attach the base (3), front and back planks (4,5). See Pic.1.

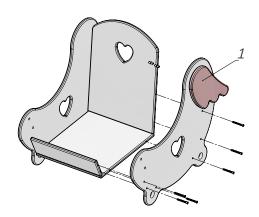


Pic. 2

Take the previously assembled construction and attach the right sidewall (1) using the confirmat screws (10). See Pic.2.

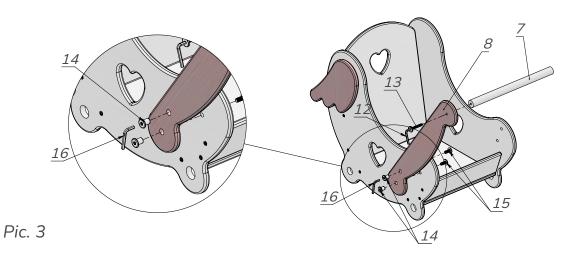


Take the Erickson nut (14), screws (15) and hex keys (12, 16). Screw the handle (8) to one of the sidewalls. Then take the self-tapping screw (13) and attach the short nog (7) to the handle (8) with its help. See Pic. 3.



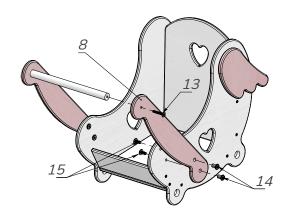


Pic. 4

Attach another handle (8) in a same way. See Pic. 4.

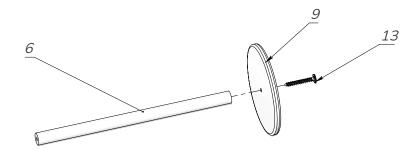

Pic. 5

Assemble the wheels: take the long nog (6) and using the self-tapping screw (13) and hex key (12), fix the wheel (9). See Pic. 5.

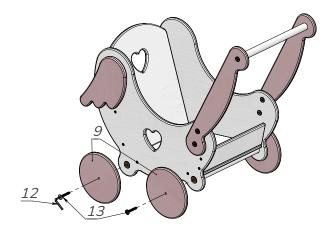

Pic. 6

Install the assembled whhel details onto the main construction and attach the wheels (9) with the self-tapping screws (13) and hex key (12). See Pic. 6.



The products is meant for indoor use only.

To be used for its intended purpose only and under the direct supervision of an adult!

All the responsibility for children's injuries received during games on the furniture lies on adults watching after them.

Always be vigilant during children's games!