

User Manual

Little Shark Pool Vacuum



Please read the instruction carefully before using this product, and keep the instruction for future reference.

WARNING:

 
- This is not a toy. Do not allow children to use it as a toy. Keep away from Children.
- Assembly and operate only by adult, this cleaner is not intended for use for someone with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge unless they have been given instructions concerning the appliance and are under supervision of the person responsible for their safety.
- Do not use if unit is damaged in any way
- This cleaner creates suction, keep hair, fingers, any part of body and any loose part of your clothing from the openings and suction range.
- This cleaner is intended to be used only for the purposes described in the instruction. Do not use your cleaner to clean anything other than your pool and spa
- Submerged the body with indicator light completely in water to operate properly.
- Suitable water temperature: 5°C (41°F) - 45°C (113°F).
- Maximum operation depth in water is 3 meters (10ft).
- Use only accessories and replacement parts specified in instructions.
- Do not use it without filter. Replace filter if damaged.
- Avoid picking up large, hard and sharp objects with the vacuum.
- Never leave cleaner plugged into the main outlet for long term storage
- Never leave cleaner in the water when it is off or has run out of battery power
- This product is designed for routine general maintenance of your pool and spa. Do not use for cleaning cleaning for longer accumulated heavy dirt.
- Do not vacuum chemical sewage, corrosive liquid, toxic substances, flammable or combustible liquids such as gasoline, or operate in the presence of explosive or flammable fumes
- Never insert or drop any object into any opening on the device. Keep all openings free of leaves rocks or anything that may reduce water flow.
- Do not use on or near hot surfaces
- Always turn off and unplugged from the charger before cleaning, filter replacement or any routine maintenance.
- Do not charge the product with wet hands and barefoot, and do not touch the product with wet hands or barefoot while charging.
- Keep the charger with cord, charging port and electrical outlet out of reach of children, especially during charging.
- Use your charger indoors in a clean and dry place. Do not expose charger to water, any liquid, high moisture, or extreme temperature.
- Disconnect charger from power supply after charging , and before any routine cleaning and maintenance. Do not operate the cleaner during charging.
- Keep the cord and charger away from sharp objects or hot surfaces.
- Do not charge cleaner with damaged cord or damaged charger.
- Do not use power extension cords.
- The battery installed is rechargeable lithium polymer batteries. Do not attempt to replace it.
- Do not use cleaner while the pool is being used.
- Do not attempt to disassemble the cleaner and replace the impeller, motor and batteries by yourself
- Extra care when cleaning the stairs.

EN

1

Thank you for purchasing the rechargeable handheld pool vacuum cleaner
The handheld pool vacuum cleaner is a rechargeable cleaner which is easy to use It saves water and reduces chemical consumption in the cleaning process.

It is designed to collect floor and seat debris - it is not a surface skimming device Do not use your cleaner to clean anything other than your pool and spa
This product is designed for routine general maintenance of your pool and spa. Do not use for cleaning for longer accumulated heavy dirt
The product is powered by 5000mAh rechargeable lithium polymer battery, It takes about 4 hours to charge full electricity, use for about 60 minutes after being fully charged

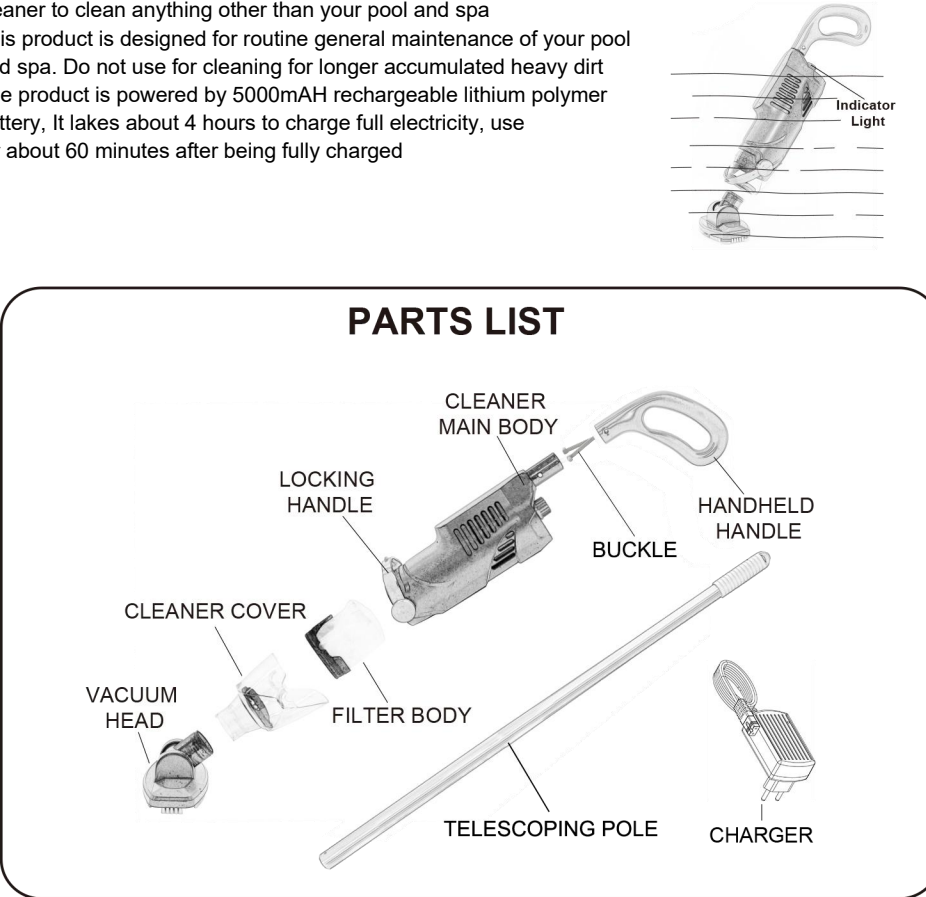

EN

 
2

Do not charge the product with wet hands and barefoot, and do not touch the product with wet hands or barefoot while charging.
Keep the charger with cord, charging port and electrical outlet out of reach of children, especially during charging.
Use your charger indoors in a clean and dry place. Do not expose charger to water, any liquid, high moisture, or extreme temperature.
Disconnect charger from power supply after charging , and before any routine cleaning and maintenance Do not operate the cleaner during charging.
Keep the cord and charger away from sharp objects or hot surfaces.
Do not charge cleaner with damaged cord or damaged charger.


HOW TO CHARGE



1.Find the charging port and check it. If the water enters the charging hole, pour it out and use a dry cloth to clean and dry it.

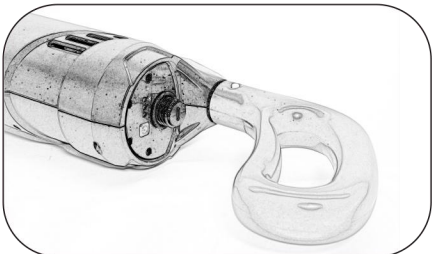

 2.Rotate to the right to open the protective cover of the charging port, the cover can effectively prevent water from entering the charging port, but you need to check for water ingress before use.

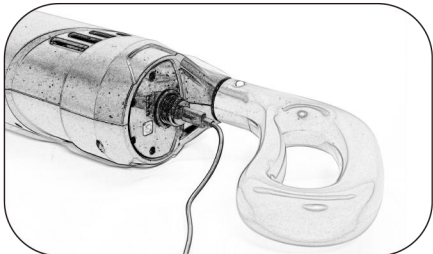

3.While charging, the indicator lights will light up, when all three lights are on and not jumping, the cleaner is fully charged.



 
4.After charging, put the cover back on. Now it is ready to use.

EN


3

OPERATION:


1.With handheld handle.
Attach the hand held handle by pressing spring button and inserted it into the back handle of the main body.

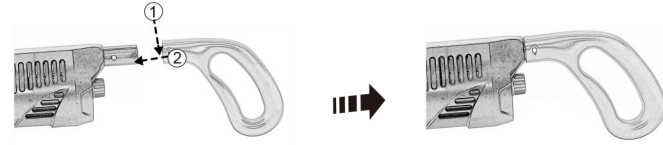

 Make sure cleaner facing downwards when it is placed or removed from pool, otherwise it may bend the pole and damage the pole connectors.

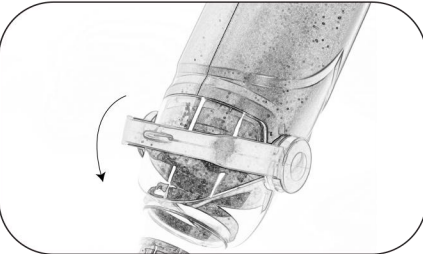

1.Check the locking handle is in front of the cleaner head and make sure it is tightly locked.

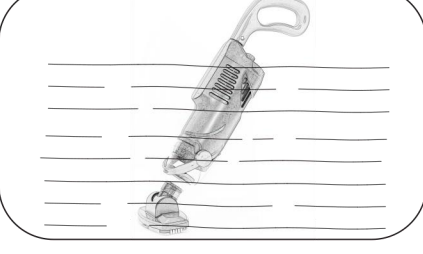

2.It is important to make sure the locking handle into place before placing the cleaner in the water, as shown in the picture above.

3. IMPORTANT NOTE:
The cleaner will not work unless the body is submerged and filled with water.


Turning off the power underwater and standing still for 2s can effectively prevent the problem of sediment leakage when lifting the product.

EN

4

HOW TO CLEAN THE FILTER:

1.Make sure the cleaner is turned off. Turn the locking handle up to back to the main body, take the front head off from the main body.

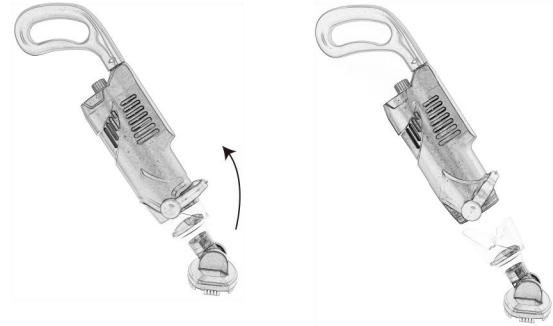


2.Remove the debris. Pull the filter out from the front head gently. Rinse the filter body. Important note Do not to damage the filter screen with sharp tools.



HOW TO REMOVE THE VACUUM HEAD

 
1.Twist the vacuum head to the "INSERT" mark and then pull it out.

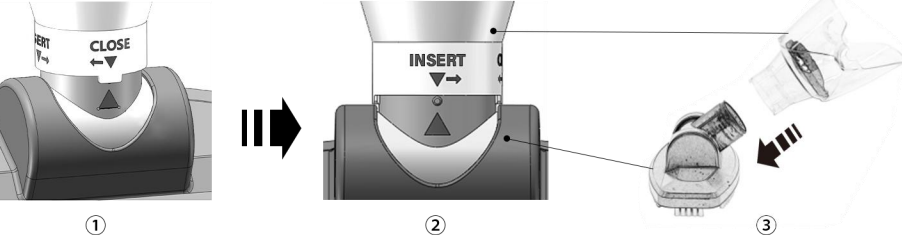

EN

5

 2.Cover back the filter cover with fingers holding the protruding edge of the cover.

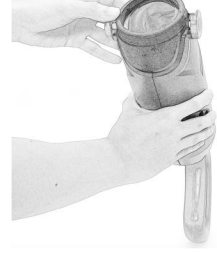

3.Before assembling the filter back, clean the filter surface and main body and body head, remove debris away for easy assembly. Assemble the head with filter back into the main body, turn the locking handle back to lock it, make sure it is in place will not fall off.



EN

6

GENERAL MAINTENANCE:

- 1.After recharging, insert the water-proof plug into the charging port to prevent water from entering the battery part.
- 2.Clean the cleaner with fresh water to prevent chemical damage after every time using. Do not use detergent.
- 3.Never leave cleaner in the water when it is off or has run out of battery power.
- 4.Clean the filter after each time using.
- 5.Never leave it outdoors in sunlight, heat, hot surfaces, rain, high moisture, and pool chemicals.
- 6.Dry and clean the body with dry cloth, Make sure to dry the water from whole unit and accessories, and keep it stored indoors with room temperature.
- 7.Never leave cleaner plugged into the main outlet for long term storage.
- 8.Do not use it without filter or with damaged filter.
- 9.Please fully charge cleaner before long term storage and it should be stored at room temperature For long term storage, battery discharges on its own during storage. Please recharge it when reusing after long term storage.
- 10.You must recharge the battery at least once every three months if it is not frequently used.
- 11.Don't use cleaner when charging.
- 12.Avoid picking up large, hard and sharp objects with the vacuum.
- 13.Never disassemble the main body set without prior consultation with manufacturer.

TOURBLE SHOOTING:

Problem	Solutions
The cleaner doesn't work or low suction	Check if the cleaner has no power because of long time no using. Please fully charge it.
	Check if the impeller is jammed by large debris. If possible, use a small tool to remove it with intensive care.
	Check if the filter is full, please clean the filter.
Debris escapes from the filter	Check if any object was inserted or dropped into any opening on the device Keep all openings free of leaves, rocks or anything that may reduce water flow
	Check if forget to cover back the filter cover, or the cover is loosen from the filter body.
	Check if the filter is damaged. Replace the filter.
Cleaner can't be charged or recharged	Turning off the power underwater and standing still for 2s before lifting the product.
	Make sure it is turned off when you charging it. When charging If you found the indicator be off, please press the product switch to check whether the product is turn off or not, if red light on, then it is in normal charging status.
	The cord or charger is damaged, replace a new one. The charging head is firmly connected with the charging port.
The vacuum head does not move smoothly	Check if the water enters the charging hole, pour it out and wipe it to avoid charging failure.
	Check if the wheels are off or jammed, lift them up and clean wheels and wheel slots. Then push them back and turn them with figures to check if could run smoothly. Check if they are damaged and replace them.

EN

7