



NOTE: Before you can use the printer, you must read the Quick Start Guide and User Manual

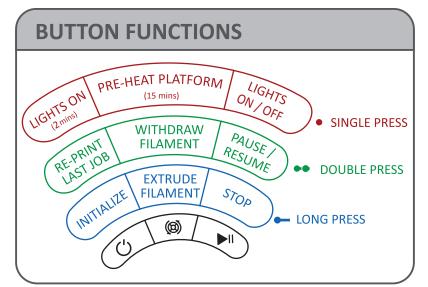

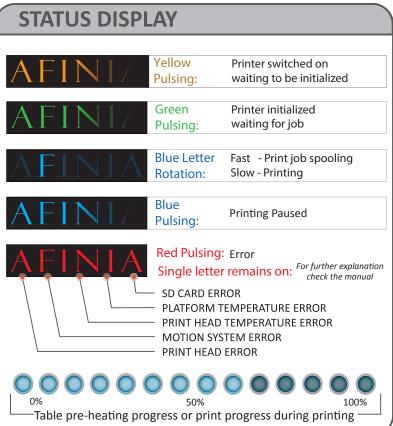

## **SUPPORT**

If you encounter any issues, have any questions, feature requests, or feedback for our support team, please contact your local reseller.

Email Support

support@afinia.com





Phone Support

USA (952) 279-2643 (M-F 8-5 CT)

UK +44 (0)845 230 7800 Japan 03-3561-2266



## PRINTER MAINTENANCE



Lubricate the rails that form the print head gantry system every 4-6 months or as needed.

Refer to the User's Manual for details.

 


Replace the HEPA filter after 300 hours of use or every 6 months, whichever happens first. The filter is inside the round filter cover with the white trim located to the left of the platform . Refer to the User's Manual for details.



 




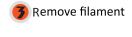 




When printer beeps remove old filament and insert new filament

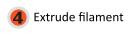



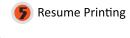



## **WARNINGS**



Warning Hot Surfaces! Never touch the print head or print bed during operation. The unit may be too hot to handle which could result in burns or other personal injury. Always use protection when handling the heated print bed or print head.



**Warning!** Never attempt to remove the nozzle from the print head without first doing a "Withdraw". The nozzle temperature must be above 230c before attempting to remove it. **Always** ensure the "drive cog" is clean before suspecting the nozzle is blocked.



**Warning!** Turn off the printer and unplug the power before performing any service on the printer such as removing parts, cables or covers. Contact Technical Support for instructions.



**Warning!** Always have adult supervision when children are are present. Small printed parts may be choking hazards -- please keep small parts from children.



**Warning!** Tools and parts should be stored at a suitable height away from small children. Tools should be used in conjunction with safety gloves and glasses.



**Warning!** Make sure to tie back loose clothing and long hair while the printer is in operation.