
BETA FOLD CREASE & FOLD ANALYZERS

- REDUCE EXPENSIVE WASTE & REJECTS
- **CONTROL** variations in the cutting & creasing process
- MINIMIZE runnability problems on the packaging line

PAPER STRUCTURES & FOLDING CHANGE WITH


- Fiber lengths, fiber content, and fiber orientation
- Coatings, bond between coatings and paper
- Printed ink & varnish
- Drying conditions that affect the flexibility of the substrate
- Environment humidity in the pressroom



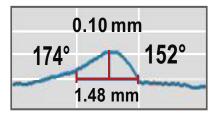


BETAFOLD SOFTWARE

Images & Analyzes Bead
Dimensions & Delamination
for Production Correction

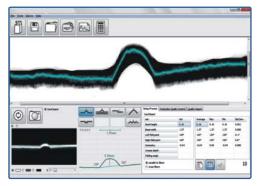

CALCULATE STATISTICS
& CREATE QUALITY REPORTS

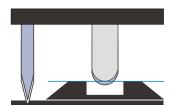

Detect changes in die penetration due to knife wear

THE THEORY

IN PRACTICE












Fiber-fiber bonds between plies are broken to make creased areas behave like a hinge






Insufficient delamination Bead Binding, Extensive Tension Spine fracturing or crease end splitting

A crease is a double fold!

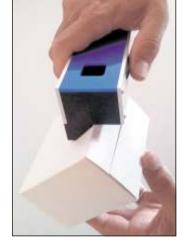


Bead symmetry is driven by the folding point sharpness

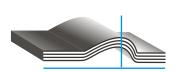




Folding carton
On the press
After gluing
In the QA Department

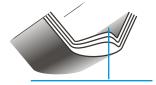

Measure

Bead Crease Folding angle

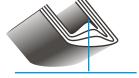

Verify

Bead height, Crease depth Bead width, Symmetry Left fold point Right fold point

Symmetrical Edges to Insure Your Products High Quality Look

Document

Quality Reports in PDF Format, establish Statistical Database


Free 10-Day Trial

BETAFOLD ADVANCED




BETAFOLD ADVANCED SOFTWARE supports networking for multiple users where a variety of different box types are in production. BETAFOLD ADVANCED also supports several multi-user client installations working with the central server database and network.

CREATE CUSTOMIZED BOX LAYOUTS Betafold ADVANCED offers a Box Editor that enables you to copy any existing Box layout from a PDF or a JPG file or load one of the pre-defined box layout from the box library. You can add or remove measurement positions for [A], [B], [C], or [D] type creases. After saving the new layout this will be available in the list of selectable box layouts in the reference Window.

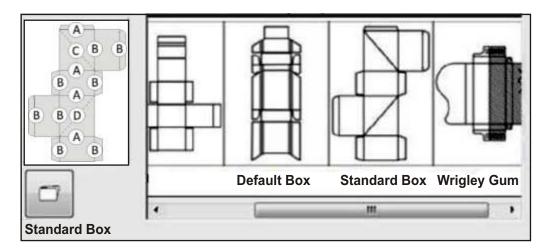

USING CUSTOMIZED BOX LAYOUTS To simplify when use a large number of boxes, the ADVANCED software stores box layouts graphically with their reference numbers. When a reference number is selected, the box's graphic image is loaded and displayed with it's measurement positions. The final report prints the customized box layout with the measurement data.

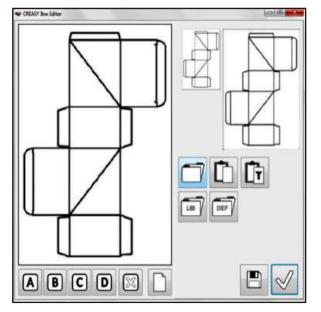

MULTIPLE USER INSTALLATIONS & NETWORKS

BETAFOLD ADVANCED offers interfaces for networks with several installations all connected to the server.

Three levels are offered by the software:

- NONE: only the Standard Database is shared by the client installations, but no additional communication takes place between clients and server.
- TCP-IP: The clients are using a common Database.

The Server application lists all connected clients including the actually used reference and job ID and can send messages to the clients. The clients can retrieve the next job and reference from the server application.

• HOTFOLDER: This interface is offered for customer specific integration of the Betafold into existing work flows. Communication is realized by means of a Hot Folder.

UPGRADING BETAFOLD STANDARD TO BETAFOLD ADVANCED Betafolds can be upgraded to the ADVANCED version via Upgrade codes. An initial software version of v1.3.0.0 or later is required.

BETACORR

Corrugated Analyzer

CONTROL CHARACTERISTICS IN HIGH **END CORRUGATED FLUTE DIMENSIONS &**

ESSENTIAL TO PRODUCE THE LINERS **HIGHEST QUALITY PRODUCT FOR** POP DISPLAYS APPAREL, WINE, GIFT

ELECTRONICS & MORE







CREASE PROFILES

WASHBOARD EFFECT