

BRAKE BEAVER



STUD SUCKER

1-844-960-6060
info@brakebeaver.com
www.brakebeaver.com
@brakebeaver

HEAVY DUTY BRAKE JOBS MADE EASY!

The Brake Beaver Stud Sucker is a heavy duty stud cleaner designed to clean the lug stud threads and well as the hub mating surface. This tool is designed with internal and external abrasives to tackle the dirtiest of hubs and studs. Using this tool effectively will help with proper mating of the Brake Beaver OTL-360 to the hub while machining, and proper wheel torquing once mounting the wheel assemblies back on to the hub.



Attach the StudSucker to any power driven tool (pneumatic, electric or battery) capable of accepting a 1/2" square drive. Maximum 4000 RPM.

Designed only to be used for right-hand drive rotation on and off of the stud.
DO NOT REVERSE!
Designed and manufactured in the USA.

BRAKE BEAVER

STUD SUCKER

1-844-960-6060
 info@brakebeaver.com
 www.brakebeaver.com
 @brakebeaver



Brake Beaver Stud Sucker
 Cleaning Head Refill Kit
 25 Pack Of Cleaning Heads
 SKU:BB-SS-CH25



Brake Beaver Stud Sucker
 Inner Brush Refill Kit
 25 Pack Of Inner Brushes
 SKU:BB-SS-IB25

ORDER ONLINE AT WWW.BRAKEBEAVER.COM



CLEANING HEAD INSTALLATION

1. Align large diameter slots on cleaning head with head of retaining bolts.
2. Rotate clockwise after contacting bottom of cleaning head with face of body.
3. Align, Push Down, Rotate Clockwise to Lock.



INTERIOR BRUSH INSTALLATION

1. Curl replacement inner cleaning brush to form a tube.
2. Push replacement brush into the main tool body.
3. Align ends of the brush with the Anti-Rotate pin.