



Please read and follow these usage and safety guidelines to maximise the life of your Decor product

CARE AND USAGE GUIDE

The Decor Cook® 3L Glass Mix, Seal & Store Bowl with Lid provides an all-in-one-solution that allows you to serve and then store all from the one bowl.



CARE

- Before use, remove labels and hand wash the product.
- Airtight and leak-proof lid
- Premium borosilicate glass base won't stain or absorb flavours
- Perfect for taking salads and sauces on-the-go
- Keeps food fresher for longer
- Steam release lid vent button for microwave
- Freezer safe
- Microwave safe
- Dishwasher safe (top rack only)
- Its leakproof & airtight seal means no spills & optimum freshness



realseal™


FOR AIRTIGHT & LEAK-PROOF SEAL



APPLY LID



RELEASE AIR

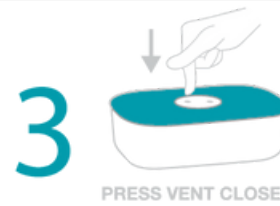

PRESS VENT CLOSED

TO REMOVE LID OPEN VENT

© 2020

WARNINGS

- Avoid sudden or severe temperature changes.
- Do not heat an empty or nearly empty storer in the microwave.
- Not suitable for cooking popcorn or for use with special browning papers.
- Use minimum cooking time and monitor regularly.
- After microwaving, contents and glass bowl may be very hot. Use oven mitts to prevent risk of burn injury.
- Do not handle glass bowl with anything wet.
- Do not place a hot glass bowl on a cold or wet surface, we recommend using a heat mat.
- Do not add cool or room temperature liquid to a hot glass bowl.
- Do not use on hotplates, stovetops, in a toaster oven, under a grill or over flames.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.