

CARE AND USAGE GUIDE

- Reusable cutlery set
- 3 piece cutlery set – knife, fork, spoon
- Slimline cover case – for hygienic protection on the go
- Dishwasher safe cutlery (case is not dishwasher safe).



CARE

- Before use, remove labels and wash the cutlery set.
- Do not use abrasive materials when washing; applying a paste of baking soda and water then rinsing thoroughly can reduce discolouration and food stains.
- Ensure cutlery is completely dry before adding back to your case to avoid potential mould build up.



Please read and follow these usage and safety guidelines to maximise the life of your Decor product

WARNINGS:

- Not suitable for oven, freezer or microwave use.
- Cutlery is dishwasher safe. Case is not dishwasher safe.
- Not suitable for children under 36 months old.
- If product is damaged, discontinue use.

