



4 Compartment Bento Box

CARE AND USAGE GUIDE

- Includes 1 sheet of stickers for customisation
- Airtight lid seal and secure clips to keep lunch fresh
- Four snack compartments
- Hinged lid
- Removable tray
- Dishwasher safe
- All parts are top rack dishwasher safe for easy clean up
- BPA free, food safe



CARE

- Before use, remove labels and wash components thoroughly.
- Do not use abrasive materials when washing; applying a paste of baking soda and water then rinsing thoroughly can reduce any discolouration and stains.
- Ensure components are completely dry before putting back together to avoid any potential mould build up.
- Before applying customisable stickers, ensure your bento is clean with no signs of food or moisture to maximise the life of your dishwasher safe stickers.

WARNING

- Not suitable for children under 36 months.
- Dishwasher safe (top rack only). Separate tray from case before dishwashing
- Ensure bento box is properly closed to avoid accidental opening
- Do not place hot foods in bento
- Do not use in microwave or freezer
- If product is damaged, discontinue use.
- Not recommended for any foods that produce liquids.
- Food high in oil, fat, tomatoes, curries etc may cause staining.

Please read and follow these usage and safety guidelines to maximise the life of your Decor product