

# Food Fresh™

## CARE AND USAGE GUIDE

- Decor Food Fresh™ Containers are perfect for the pantry, fridge or freezer with handy screw top lids to seal in freshness. Food Fresh Containers all stack together neatly to save space and have smoothly rounded bases for easy cleaning. They can also be handy for storing items in the workshop, craft room, shed or garage.
- BPA Free
- Australian Made



## CARE

- Before use, remove labels and wash the storer.
- Do not use abrasive materials when washing; applying a paste of baking soda and water then rinsing thoroughly can reduce discoloration and food stains.
- After freezing storer let it rest for a few minutes before removing lid as freezing makes lid stiff and difficult to remove.
- Freezer, microwave reheat and dishwasher safe (top rack only)



**microwave  
safe**




**dishwasher  
safe**



**freezer  
safe**



**bpa free**

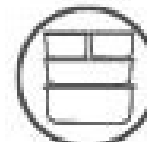

**stackable**

## WARNINGS:

- Overheating foods, particularly foods high in oil, fat and sugar may cause product to melt and cause burn injury. Decor recommends checking food every 30 seconds during microwaving.
- Use minimum cooking time and monitor regularly.
- Suitable only for microwave reheat, not suitable for ovens or microwave ovens
- Do not use on hotplates, stovetops, in a toaster oven, under a grill or over flames.
- After microwaving, contents and storer may be very hot.
- Always use oven mitts to prevent risk of burn injury
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.