



Fresh Seal CLIPS

CARE AND USAGE GUIDE

- Stylish design featuring a seamless single colour
- Modular and stacking design to maximise even the smallest storage space
- Leak resistant seal lid
- Microwave reheat only. For microwave use, rotate clips fully open to release lid
- Fridge, freezer, microwave and dishwasher safe (top shelf only)



CARE

Please read and follow these usage and safety guidelines to maximise the life of your Decor product

TO USE FRESH SEAL CLIPS IN A MICROWAVE:

Place lid on the storer base loosely so that steam can escape around the lid.

AFTER FREEZING:

Let the plastic storer rest for a few minutes or run water over it before removing the lid as freezing makes the lid stiff and difficult to remove.

TO REMOVE LID:

Open clips and rotate clips fully open to release the lid seal away from the base.

CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.



WARNINGS:

DO NOT USE FRESH SEAL CLIPS PRODUCTS:

- In conventional ovens or toaster ovens.
- In combination microwave ovens (unless in microwave only mode).
- On hot plates, stove tops or under a grill.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.
- Always use oven mitts to prevent risk of burn injury.

CAUTION

- Microwave reheat only. Overheating foods, particularly foods high in oil, fat or sugar, may cause the product to melt. If the product melts, it may cause a burn injury if handled. Decor recommends checking food every 30 seconds during microwaving.
- Never cook popcorn in Fresh Seal Clips products as doing so may melt the product.
- After microwaving, contents and storer may be very hot