

décor[®]

REFILLABLE OIL sprayer

CARE AND USAGE GUIDE

The Decor Cook™ Refillable Oil Sprayer is the ideal cooks companion for light and healthy cooking. Perfect for barbecuing, baking, dressing salads, frying, grilling, roasting, and more. The unique easy spray action produces a superfine light mist without the use of aerosol gases. It allows you to apply a thin even coat of oil, as opposed to pouring a thick heavy layer. So use your favourite oils in the healthiest way possible for all your cooking needs.



CARE

- Fill the bottle with lukewarm water and a drop of detergent.
- Shake, spray and rinse.
- Repeat the process until there are no more soap suds.
- Hand wash only.
- Airtight for longer oil life
- Non aerosol & propellant free
- Easy spray action.
- Works with all oils and vinegars
- Wipe the spray nozzle after each use as oil can start to air dry causing a blockage.

USAGE

- Before use, remove labels and hand wash the product.
- Simply fill up with your favourite oil and spray on your cookware, bakeware or food as required. No shaking needed.
- Best used with more than 100ml of oil.
- Pull trigger with intention for an even spray.
- To achieve a mist, completely compress the trigger in a quick motion.
- To achieve a jet like spray, compress the trigger in a slow light motion but not all the way down

WARNINGS

- Avoid sudden or severe temperature changes.
- Do not place oil sprayer close to heat as this will cause product to warp or melt.
- Do not use on hotplates, stovetops, in a toaster oven, under a grill or over flames.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.



Frying



BBQ-ing



Baking



Dressing
Salads



BPA free



Roasting

Please read and follow these usage and safety guidelines to maximise the life of your Decor product