



Reusable Bags

CARE AND USAGE GUIDE

- Flat bag available in snack, sandwich & medium sizes.
- Stand up bag available in medium size only
- Perfect for on-the-go snacks, travel, baby, toiletries, accessories and more!
- Freezer safe.
- Secure double seal.
- Perfect for portion sizing.



CARE

- Hand wash before use and after each use. Hand wash with warm soapy water, rinse and leave to dry upside down on a drying rack or upside down over a bottle.
- Not dishwasher safe, hand wash only.
- Do not use abrasive materials when hand washing.
- Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.
- Do not overfill the reusable bag as this can damage the seal.
- Suitable for recycling.

USAGE

- To ensure the bag is secure, pinch and slide the seal from one side to opposite side.

FREEZING GUIDELINES

- When freezing, do not fill more than 50% capacity as frozen contents can expand.
- After freezing: place in hot water while keeping product upright and not exposing the seal to heat to defrost contents or store in the refrigerator for 12-24 hours prior to use.
- Product can withstand up to 80°C water temperature for thawing frozen contents.

WARNINGS

- Do not leave unattended around small children.
- Not suitable for dishwashers or microwaves.
- Not suitable for hot food or reheating food.
- Not suitable for any liquids.
- Excessive heat exposure can cause product to warp.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.