

CARE AND USAGE GUIDE

Thermoglass™ Baking Dish is made from premium heat-resistant borosilicate glass making it strong and oven safe. The dishes, without the lids, can be used in a conventional oven. The realseal lid, which has a steam/air release vent, allows use of the Thermoglass™ dishes in the microwave for convenient cooking and reheating. The soft silicone seal in the lid makes the dishes airtight and leakproof, so prepared meals or leftovers can be stored in the fridge and freezer.




Please read and follow these usage and safety guidelines to maximise the life of your Decor product

USAGE

- Before use, remove labels and hand wash the product.
- Seal is removable for easy cleaning, hand wash only.
- Base is microwave, dishwasher and oven safe (remove lid before use). Lid is not oven safe. Remove lid before putting glass base into the oven. Lid and glass base are fridge safe. After removing glass storer from microwave or oven, allow the base and its contents to cool before covering with the lid. Glass storers are breakable and must be handled with care to avoid personal injury or property damage. Cease use if glass is chipped, cracked or has significant scratches.
- Premium heat-resistant borosilicate glass.
- Steam/air release vent.
- Airtight and leak-proof.
- Dishwasher safe.
- Freezer safe.
- BPA Free.

realseal™

FOR AIRTIGHT & LEAK-PROOF SEAL

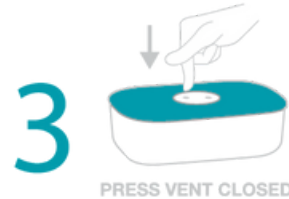

TO REMOVE LID OPEN VENT

© 2020

WARNINGS

- Avoid sudden or severe temperature changes.
- Do not heat an empty or nearly empty storer in the microwave or oven.
- Not suitable for cooking popcorn or for use with special browning papers.
- Use minimum cooking time and monitor regularly.
- After microwaving or oven cooking without lid, contents and glass storer may be very hot. Use oven mitts to prevent risk of burn injury.
- Do not handle glass storer with anything wet.
- Do not place a hot glass storer on a cold or wet surface, we recommend using a heat mat.
- Do not add cool or room temperature liquid to a hot glass storer.
- Do not use on hotplates, stovetops, in a toaster oven, under a grill or over flames.
- Do not nest glass storer whilst hot from the dishwasher.
- Do not place the lid on base while base or contents are hot.
- Do not use the lid as the heat mat for the base.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.