

CARE AND USAGE GUIDE

- Microwave reheat, freezer and dishwasher safe (top rack only).
- Oven safe (remove lid before oven use).
- To use in the oven, remove lid entirely.
- After removing glass storer from oven, allow to cool before covering with lid.

Please read and follow these usage and safety guidelines to maximise the life of your Decor product



TO USE VENT&SEAL™ IN A MICROWAVE:



Place lid on the storer base and click the steam release vent to the open position. Microwave. After removing from microwave, leave vent open while food is hot. Close vent for storage after cooling. To remove lid click vent open.

TO REMOVE LID:


Let the glass storer rest for a few minutes. Must avoid extreme temperatures as it is glass. Warm water over the top of the glass storer may crack the glass base.

AFTER FREEZING:

Let the glass storer rest for a few minutes. Must avoid extreme temperatures as it is glass. Warm water over the top of the glass storer may crack the glass base.

CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.

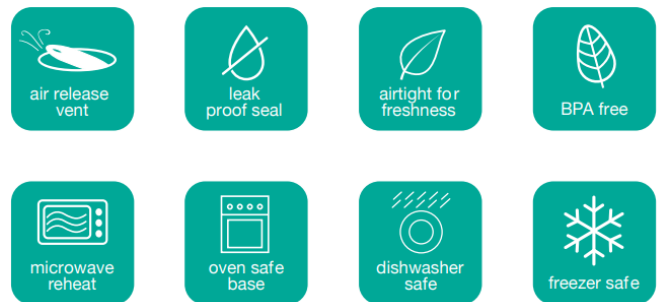

WARNINGS:

- Avoid sudden or severe temperature changes.
- Do not use lid in a conventional oven or in a combination microwave oven on any setting other than microwave.
- Do not heat an empty or nearly empty storer in the microwave.
- Not suitable for cooking popcorn or for use with special browning papers.
- If melting fat, do not microwave past the point of melting.
- Use minimum cooking time and monitor regularly.
- After microwaving or oven cooking, contents and glass storer may be very hot.
- Glass storers are breakable and must be handled with care to avoid personal injury or property damage.
- Cease use if glass is chipped, cracked or has significant scratches.
- Use oven mitts to prevent risk of burn injury.
- Do not handle glass storer with anything wet.
- Do not place a hot glass storer on a cold or wet surface, we recommend using a heat mat.
- Do not add cool or room temperature liquid to a hot glass storer.
- After freezing, let the glass storer rest for a few minutes before removing the lid and thaw to room temperature before using in microwave or oven.
- Do not use on hotplates, stovetop, in a toaster oven, under a grill or over flames.
- Do not nest glass storer whilst hot from the dishwasher.
- Not suitable for children under 48 months old.
- If product is damaged, discontinue use.