

QUICK START GUIDE

- Before use, ensure that the battery is installed properly with the positive pole of the battery inward and the negative pole outward.
- Press and hold the Power button for 3 seconds to turn on the device.
- Rotate the focus ring of the objective lens to focus on the target.
- Short press the Power button to calibrate the image.
- Push the joystick left to adjust the palette mode, push joystick right to adjust the brightness of the screen, push joystick upward to the adjust the magnification, push joystick downward to take a photo, push and hold joystick downward to start and end a video.
- Short press the joystick inward to enter the shortcut menu to set reticle color (pushing joystick up), reticle type (pushing joystick down), zeroing distance (pushing joystick left), and engaging the laser and specified distance (pushing joystick right).
- Long press the joystick inward to enter the main menu interface for more function settings.
- Hold down Power button until "Standby" is displayed and then release power button to engage sleep mode. Short press power button to wake up unit.
- Hold down Power button until timer counts down from 3 to 0 to fully power down the unit.

MELPFUL MINTS

- Thermal does not work through glass (will show only reflection).
- Thermal does not work through glass. The glass will reflect the thermal image.
- Make sure to use an object with a heat signature or reflectivity when sighting in the device. (do not list this for our thermal monoculars)
- Always make sure to turn the device completely off when not in use.
- Completely power down the device before removing or changing out the battery.
- When cleaning the thermal sensor, do not scrub with chemical solvents.
 Scrubbing the lens frequently may damage the coating of the lens and avoid touching the surface of the lens as acid materials on skin can damage the coating.

