

Model 101-2018

Full product specifications: [www.humancentric.com/101-2018](http://www.humancentric.com/101-2018)

Need help? Contact support: [support@humancentric.com](mailto:support@humancentric.com)


### COMPATIBILITY INFORMATION

**Weight capacity:**  
10kg (22lbs)

**Maximum Dimensions:**  
Width: 3.5" to 8" (88mm to 203mm)  
Height 12" to 21" (300mm to 533mm)

### PARTS INCLUDED

*Note: Not all parts will be used in the installation. Multiple configuration options are provided to fit different TVs, and different parts are used for different configurations.*

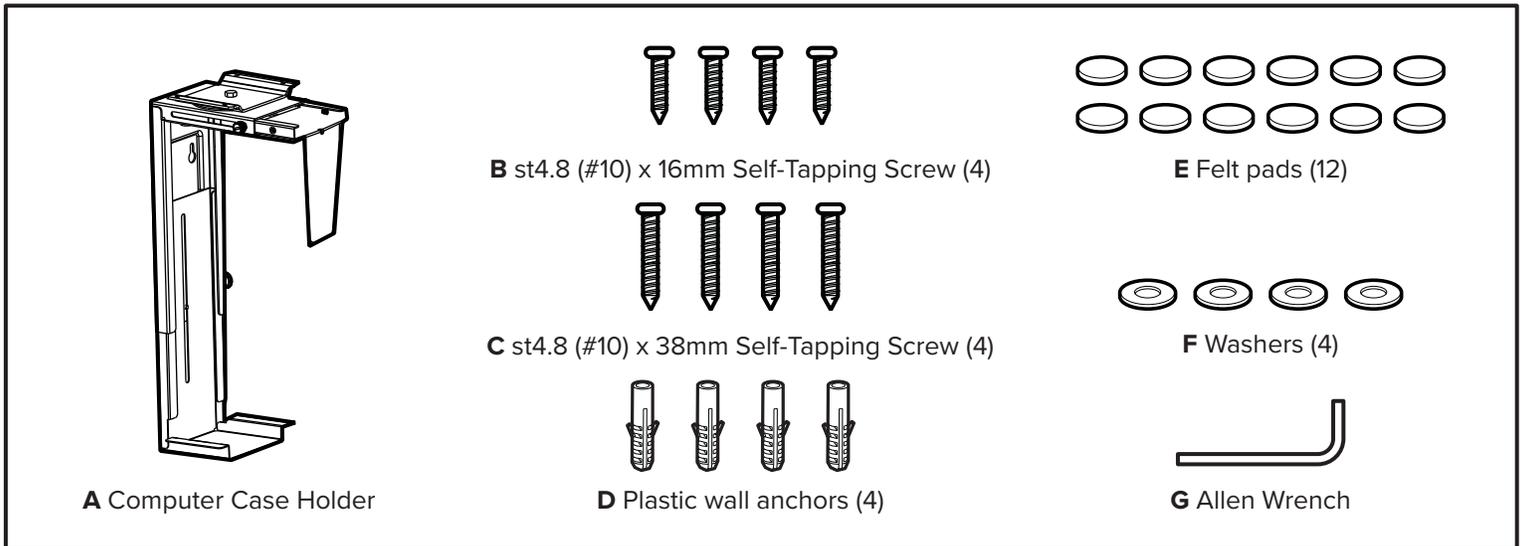

### ADDITIONAL TOOLS REQUIRED

Phillips Head Screwdriver  
Flat Head Screwdriver  
Adjustable Wrench

*For wall mounting :*

Power drill with 1/4" (wood stud) or 1/8" (concrete wall or block) drill bit  
Level  
Marking Pencil




### WARNING



To reduce the risk of injury to persons, read all instructions carefully. HumanCentric assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


1. Read all instructions carefully.
2. Incorrect installation may lead to damage or serious injury. Ensure the product is secured before use.
3. When mounting it, ensure it can support the combined weight of the bracket and any mounted devices.

## 1. APPLY FELT PADS TO MOUNT

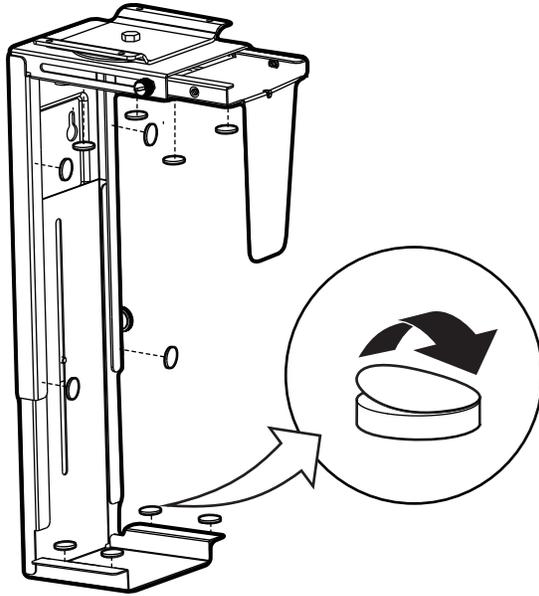

Apply the 12 felt pads to the mount in the positions shown below.

## 2. ADJUST MOUNT TO FIT COMPUTER

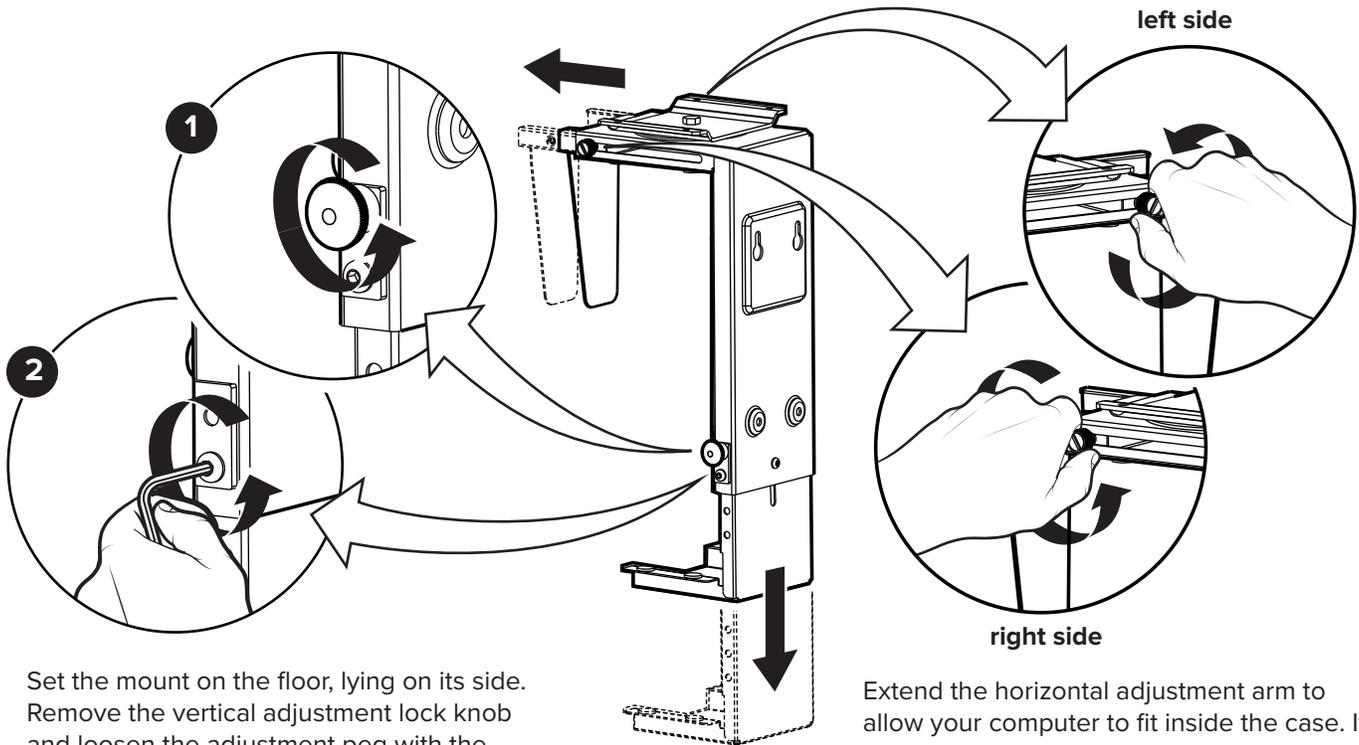


left side

right side


Set the mount on the floor, lying on its side. Remove the vertical adjustment lock knob and loosen the adjustment peg with the allen wrench. Then slide the lower end to the fully extended position.

Extend the horizontal adjustment arm to allow your computer to fit inside the case. If you reach the full length and it is not wide enough, move the adjustment screw from position A to position B.

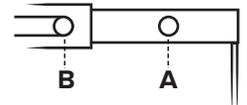

## 2. ADJUST MOUNT TO FIT COMPUTER

Place your computer inside the case and make the vertical adjustment as tight as possible (there may be a small gap between the top of the computer and the case).

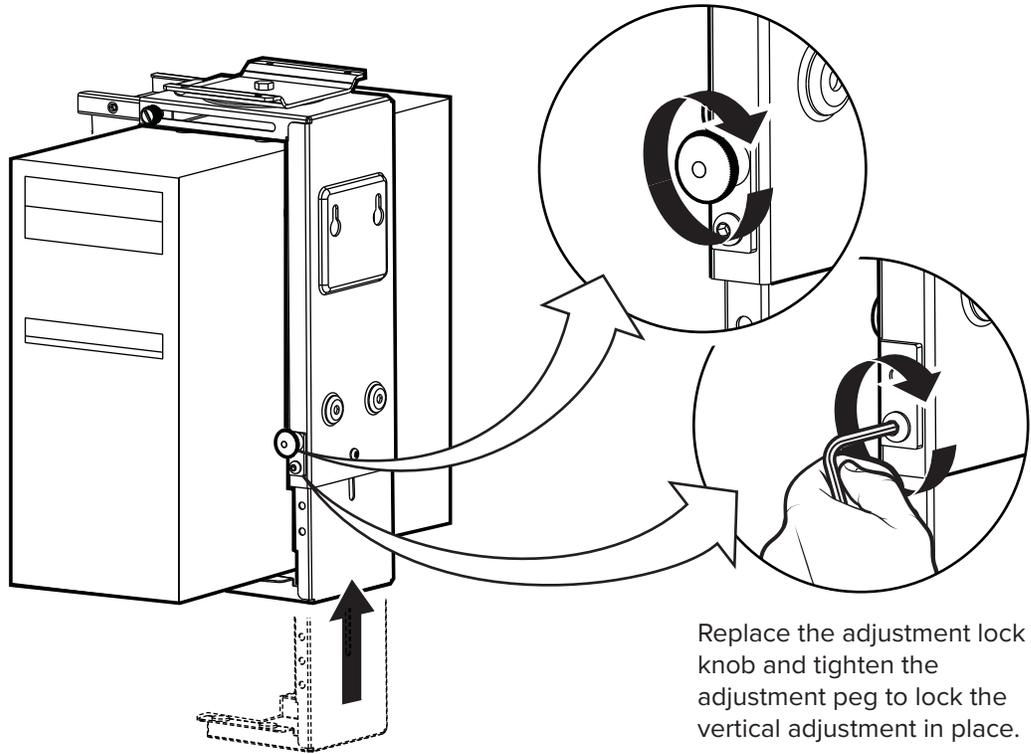


Replace the adjustment lock knob and tighten the adjustment peg to lock the vertical adjustment in place.

## 3. ATTACH MOUNT

### Option 1: Attach Mount Under Desk

Use the self-tapping screws (B) and washers (F) to attach the mount to the bottom of a desk.

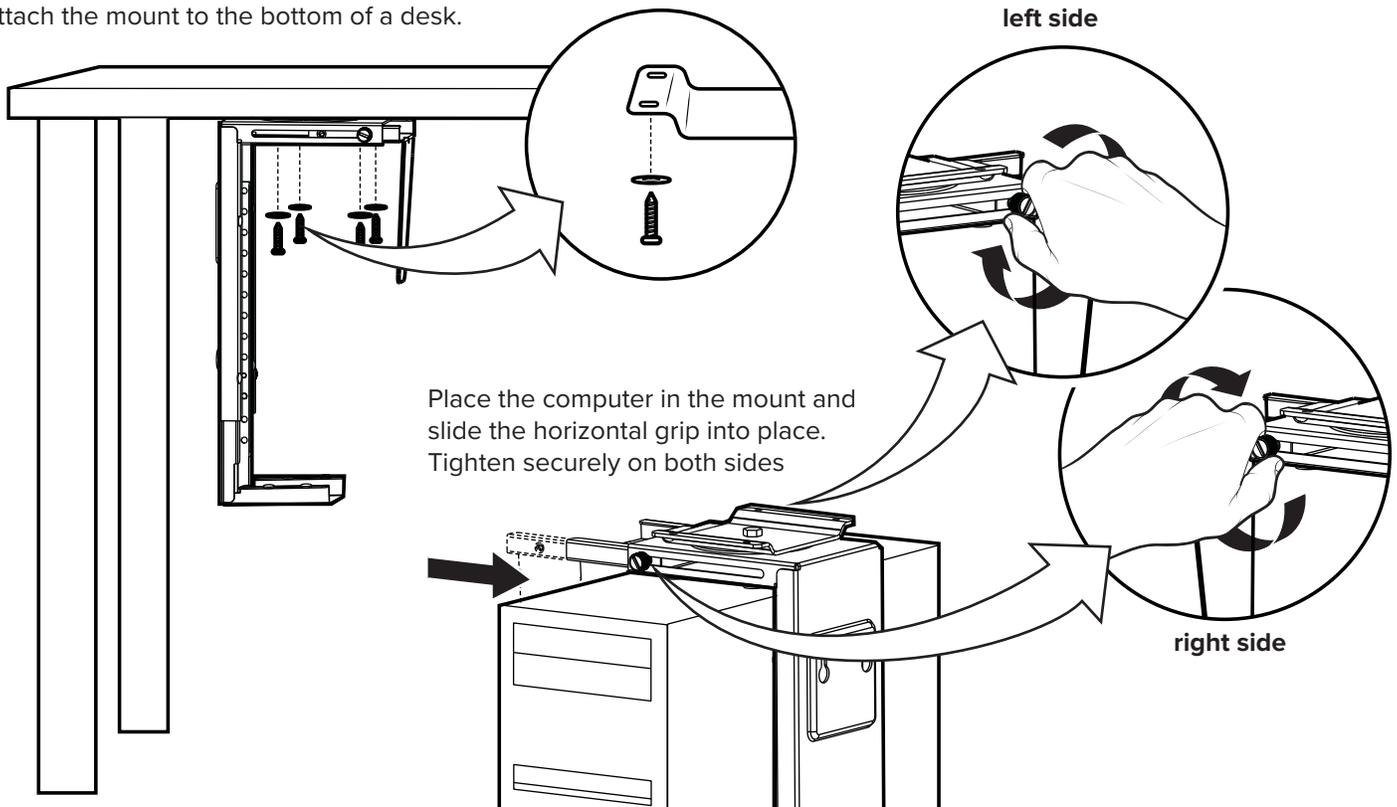

Place the computer in the mount and slide the horizontal grip into place. Tighten securely on both sides

left side


right side

### 3. ATTACH MOUNT

#### Option 2: Attach Mount To Wall


Extend vertical adjustment until all four holes are visible, and hold mount up to wall in desired location. Check placement with a level, and then mark each hole with a marking pencil.

Use the drill to make the appropriate holes for your application:

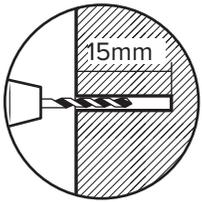



#### Wooden Walls and Surfaces

Use a 1/8" (3.5mm) drill bit to make four 0.6" (15mm) deep holes in the wall.

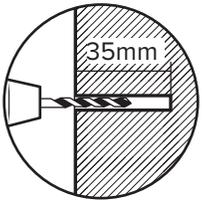

#### Concrete Walls (use wall anchors)

Use a 1/4" (6mm) drill bit to make four 1.2" (35mm) deep holes in the wall.

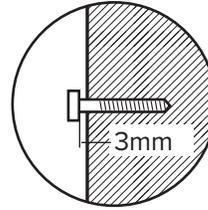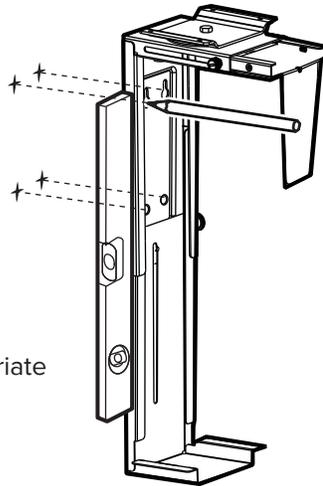


Insert the top two screws, leaving 3mm of thread length exposed to hang the mount.

#### Wooden Walls and Surfaces



#### Concrete Walls (use wall anchors)

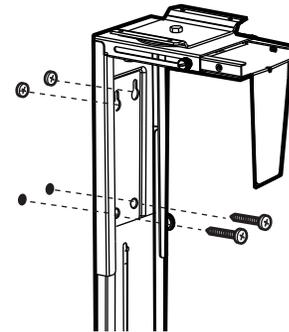

Hang the mount on the top two screws. Then tighten all four screws to secure the mount in place.



### WARNINGS



- The wall must be capable of supporting five times the weight of the device (such as a TV) and mount combined
- Mounts must be attached as specified in the instruction manual. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by those with the necessary skills to install the hardware. If you do not have the necessary skills, installation should be handled by a professional.
- Use the mounting screws provided and do not over-tighten the mounting screws
- This product contains small items that can be a choking hazard if swallowed. Keep these items away from children.
- Do not use this product for any purpose not explicitly specified by manufacturer
- This product is intended for indoor use only. Using this product outdoors could lead to product failure or personal injury.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.
- Check that the mount is secure and safe to use at regular intervals (at least every three months).

HumanCentric intends to make this manual accurate and complete. However, HumanCentric makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. HumanCentric makes no representation of warranty, expressed or implied, regarding the information contained herein. HumanCentric assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.