


FULUPET STROLLER OPERATING MANUAL

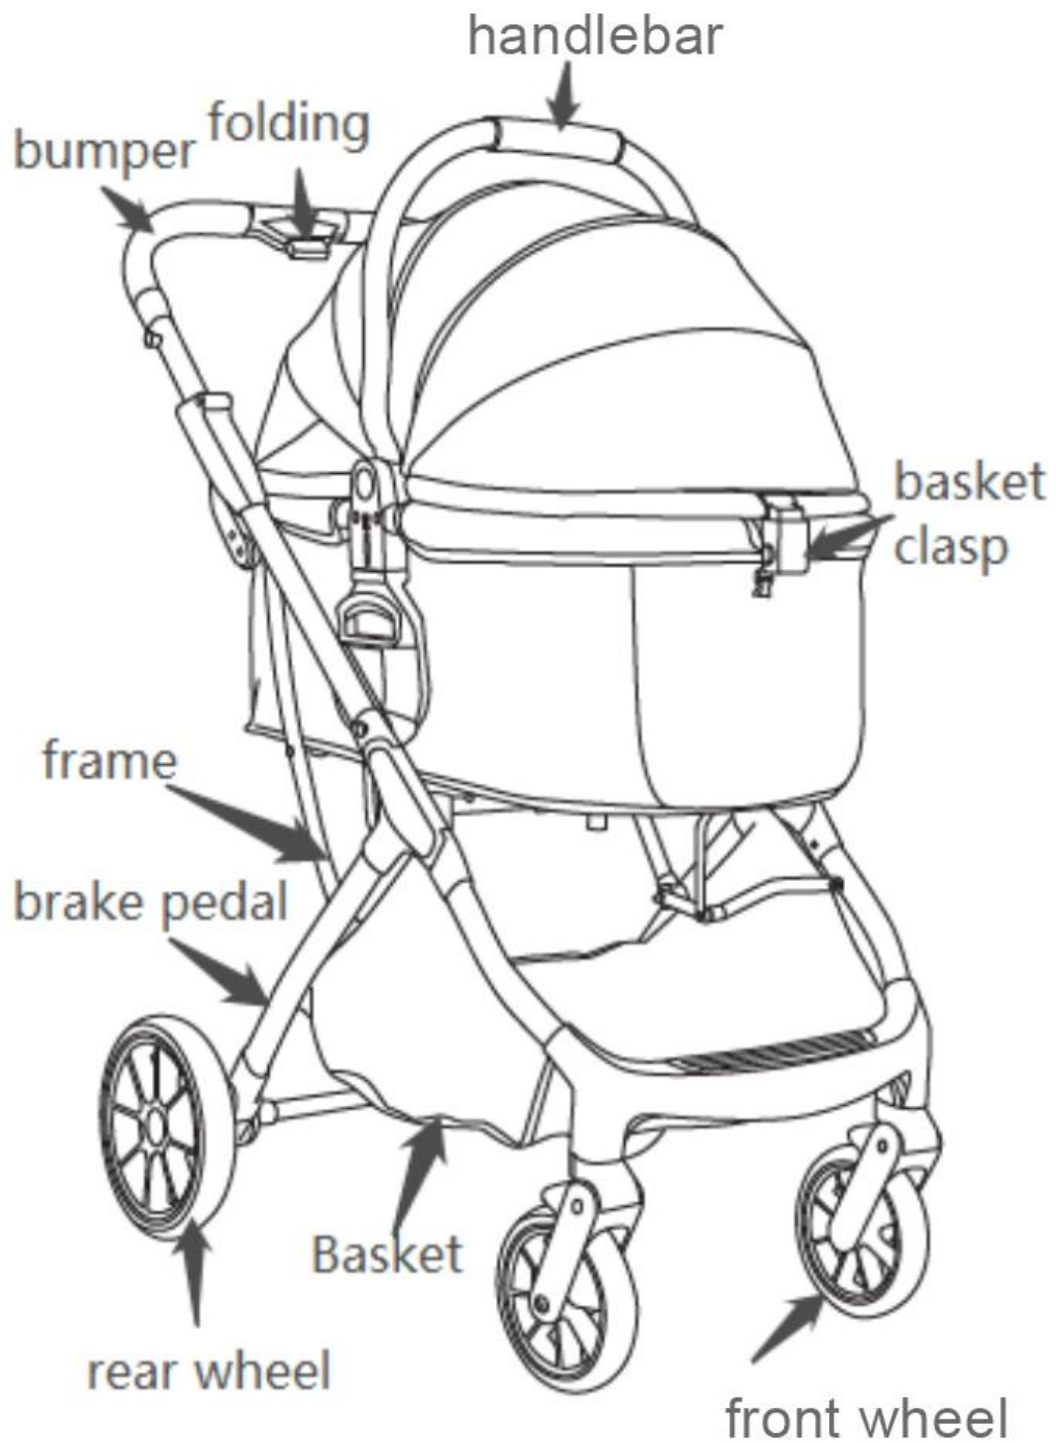

Be sure to read before use

1. Safety precautions

In order to use this product correctly and prevent injury and damage to customers and others, please be sure to follow the precautions here. In addition, according to the degree of hazard and the size of the damage, the items classified as "warnings" and "attention" are safety-important content.

2. Warning

The maximum load tolerance of this product is 20 KG. Do not load more than 20 KG of pets, which may cause damage.

Do not disassemble, process, or transform this product.

Please do not allow small children to use this product.

Before use, please check whether the screw shaft is loose or the parts are damaged.

If there is any abnormality, please stop using it. Please contact the customer service center of the sales store or the company's after-sales service.

3. Precautions

Do not use it for other purposes.

When using this product, please do not run, fall, and contact with others, etc., which will become the cause of the accident.

Please pay full attention to use on bad roads such as gravel roads.

Front wheel installation/removal

1. Installing the front wheel

Align the holes and insert the front wheel vertically upwards, while a "click" will be heard.



2. Removing the front wheel

Push the button and pull the front wheel out vertically.



Rear wheel installation/removal

1. Installing the rear wheel

Insert the wheel axle into the wheelbase axle hole until the wheel clicks, then install the rear wheel. Repeat the same operation for the other control panels. Pull on the wheel to ensure proper installation.



2. Removing the rear wheel

To remove, pull down the rear metal button upward to remove the wheel from the stroller.



Unfold the frame



1. Place the frame according to the picture, with the rear wheel under and the handlebars on top.

2. Hold the handle of the cart and pull it upward.



3. Once the cart stands up, gently pull the handle away from the stroller until it makes a snapping sound.

4. Push the handle gently to make sure the body does not fold.

Fold The Frame



1. Slide the double lock button on the right to left handle to unlock, and then press the back button.

2. The platform folds slowly forward leaning direction.

3. Fully folded state.

Use pet stroller



1. The brake pedal can be unlocked only when the cart is running forward. Make sure the brake pedal is fully unlocked when moving the cart back and forth.

2. When parking, please press the brake pedal down to the end before parking. When leaving, please confirm whether the brake pedal is completely locked down.

Instructions for carrying baskets



1. Lay the pet carrier flat, pull the inner iron handle to both sides and fix it in the plastic card point fixing support. Please check that the card point is fixed in place before use.

2. Press the ceiling door buckle and lower door buckle downward to close the ceiling.

Please check whether it is completely fixed in place when using.



1. When closing, please support the two sides of the handle iron to the middle of the folding basket.

2. Press the buttons on both sides in the direction of the arrow to the center to unlock the ceiling latch.



1. Press the buttons on both sides in the direction of the arrow to the center to unlock the ceiling latch.

2. Open state.



1. Buckle the basket clip in the direction of the arrow to the lower fixing pipe clamp in place.

2. To unlock the device, pull the hook backward in the direction of the arrow.