
# **Connection Method**

### **Single Connection Methods**

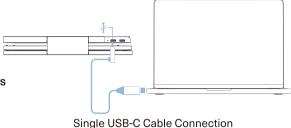


After the display driver is installed, at least 5V/3A of sustained power is required for the FLEX monitor to receive signal.



### Cable Connection Methods if Additional Power is Required

#### Note

If your laptop or device does not support an output of 5V/3A, an external power is required.

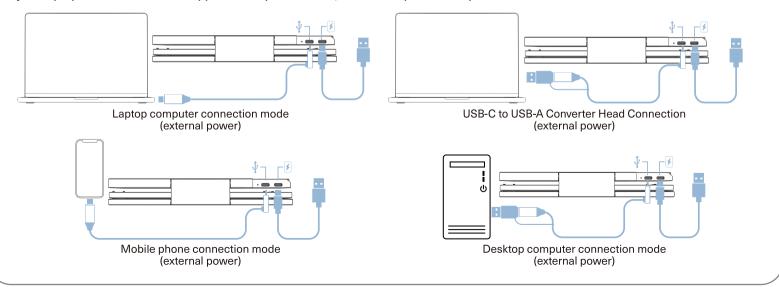


# Set It Up

### Note

The correct sequence should be performed to avoid any damage to the device.


### **Unfolding Sequence**

Please open the right display screen first and then open the left display screen.

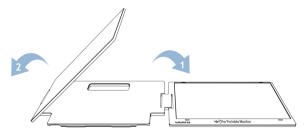

## **Storing Monitor**

Please fold the left display screen first and then fold the right display screen.

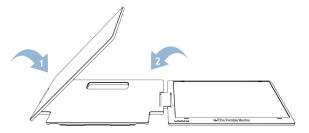


### **Adjustable Stand and Monitor**

Adjust the stand angle according to your need.



Landscape Mode

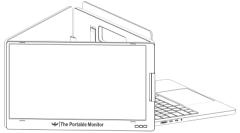

Triangular Mode



Single Portrait Mode