

Timer Explanation



This Mechanical DeFrost Timer is used in CAB FABY, SPM, Sencotel, GBG, FSM and UGOLINI Slush Machines

Timer

Note: The timer starts the night function (Cold Drink) of the machine. Machine will not defrost product.

How to Use Timer

1. Turn on the Machine
2. Rotate timer left ways till the white inner row triangle is set to the right local time. Please note AM – PM signs. *(Do not rely on center analog clock, just for display purpose only. Without the correct time setting, the timer will not work properly.)*
See *Picture 1* set at 9:00 AM with slush mode operating 24 hours a day.

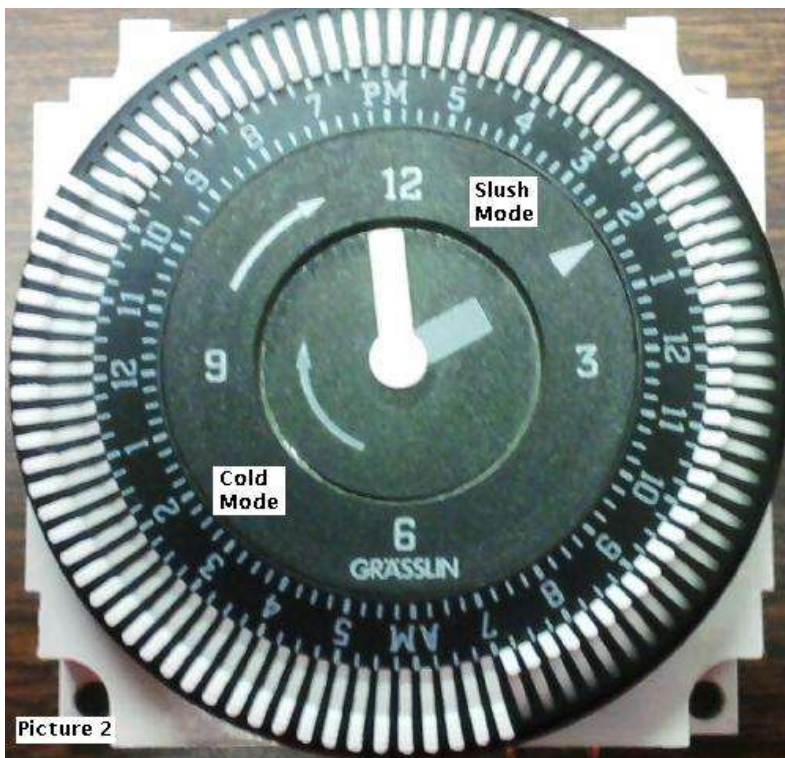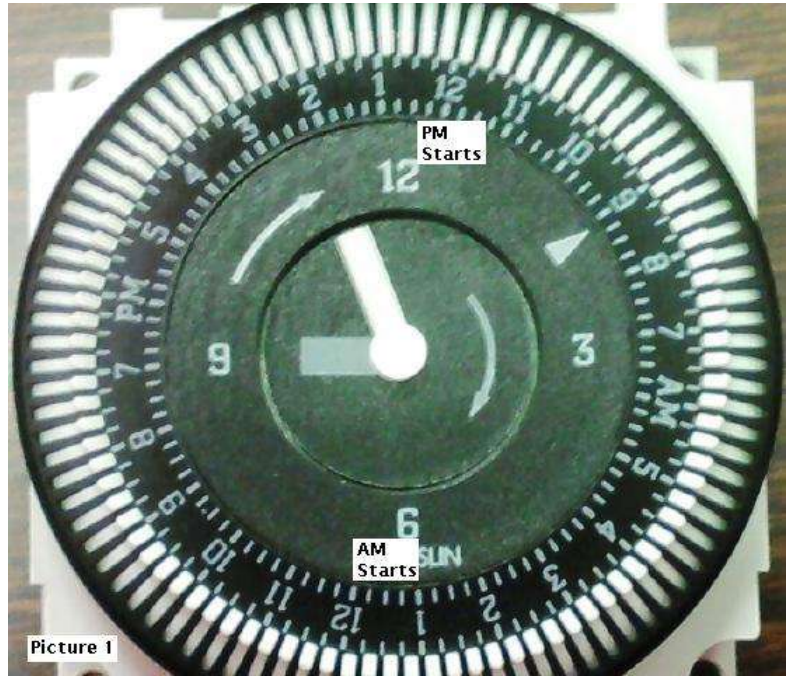

3. Push white outer segments outwards for cold drink and inwards for slush drinks. **See *Picture 2* set at 2:00 PM with cold drinks operating at 10:00 PM to 6:59 AM and slush from 7:00 AM to 9:59 PM**

4. Do not turn off machine at night. You do not have to turn off freezing mode. Auger should continue to operate in night mode.

www.PartsGuru.com