



# USER MANUAL

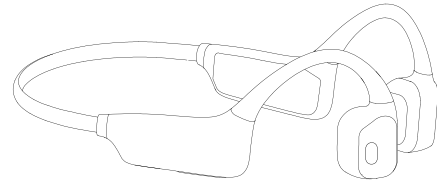


M200


## Quick Start

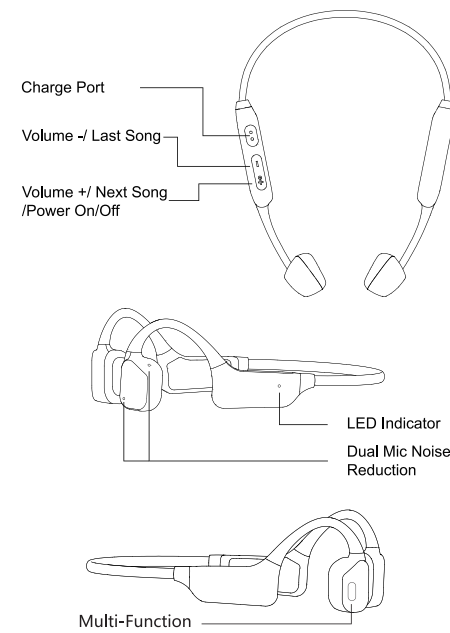


## Correct Wearing

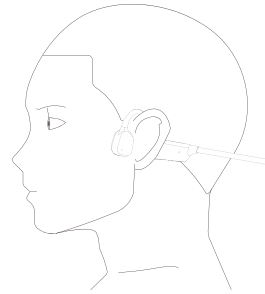

## Principle

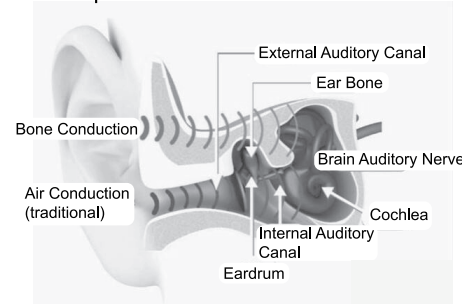

## 1. Power On/Off

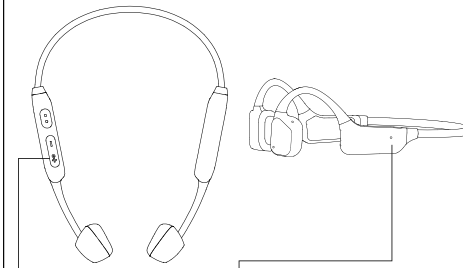


### Power On

① Long Press 4ss Blue Light Flashes Thrice power on

### Power Off


① Long Press 4ss Red Light Flashes Twice power off

## 2. Connect with Mobile Phone

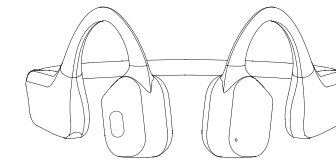

a. After powered on, the headset will go into pairing mode

- Blue and red light flashes alternately
- Pairing

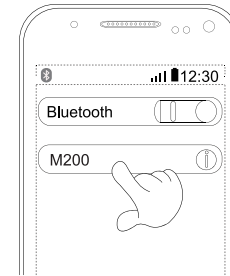


b. Turn on the Bluetooth function on mobile phone

- Blue breath light flashes once every 10 seconds


Connected

## 3. Connect with Two Mobile Phones


a. Turn off the Bluetooth function of the first mobile phone which was paired with "M200" already.

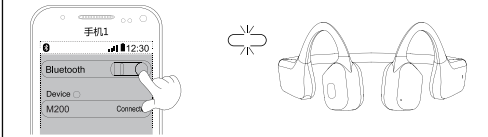


b. Turn on the second mobile's Bluetooth function and search "M200" for pairing.

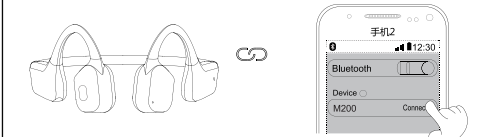

c. Turn on the first mobile's Bluetooth function. Search and connect the "M200" paired before.

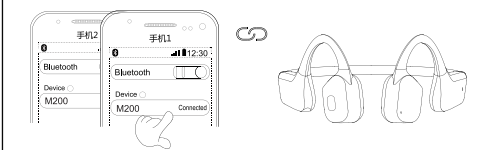


## 4. Playing/ Pause

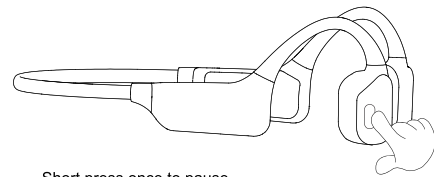

Short press once to pause  
Short press once again to play

When playing music blue breath light flashes every 10 seconds

## 5. Next/ Last Song & Volume Adjustment /Mic Mute

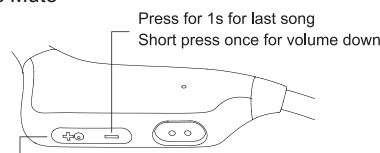


Press for 1s for last song  
Short press once for volume down

Press for 1s for next song  
Short press once for volume up

Long press the "volume -" button 2ss to mute microphone during call. "Toot" tone will be heard every 10ss during microphone muted.

Toot

## 6. Call Management

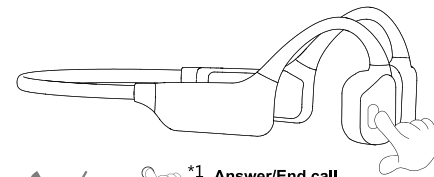

\*1 **Answer/End call**  
Short press once

\*1 **Reject call**  
Long press 2ss

\*2 **Dial the last call**  
Short press twice

\*1 Short press to end current call and meanwhile answer the new call.


\*2 **Answer the second call**  
Short press twice

\*2 **Switch from the current call to the first call**  
Short press twice

\*1 Long press 2ss to reject new call for continuing the current call.


When call is coming, red light flashes every 3 seconds  
 During call, blue light flashes every 10 seconds

## 7. Voice Assistant

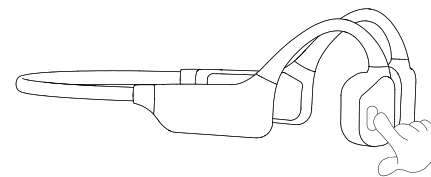

Available to wake up voice assistant by touch the multi-function button for 4ss when connected with cell phone.

## 8. Factory Reset

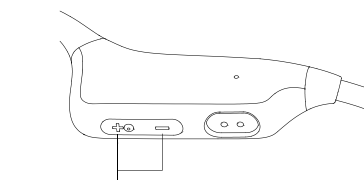


Long press "+" and "-" together for 3ss

Blue and red light flashes alternately

toot toot

## 9. Charging

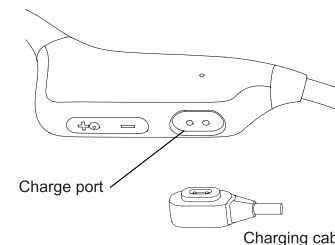

Use the supplied charge cable to charge the headphone

Red light flashes when battery low

Prompt tone "didi" every 10 seconds

Solid red light when charging, solid blue light when fully charged

## Accessories

Headset	-----	1
Charge Cable	-----	1
User Manual	-----	1
Silicone Earplugs	-----	2
Velvet Bag	-----	1

## Specifications

Model No.: M200  
Bluetooth Version: 5.2  
Bluetooth Protocol: A2DP, AVRCP, HFP, AAC, etc.  
Transmission Distance: 30m(without obstacle)  
Weight: 28g  
Audio Channel: Stereo  
Speaker Frequency: 50HZ-20KHZ  
Sound Quality: APTX-HD/no distortion  
Microphone: CVC8.0 dual mic noise reduction technology  
Standby: 200H  
Music Time: 8H(70% volume)  
Charge Time: 1.5H  
Charge Voltage: 5VDC(≤24V)  
Charge Port: Magnetic charge  
Battery Capacity: 180mAh  
Working Temperature: -10℃~60℃  
Battery Charge Time: >1000  
Waterproof Level: IP67

## Note:

- The correct wearing position of the bone conduction speaker of this headset is the cheek bone in front of the ear. Please do not put speaker into ears.
- Listening to high volume music for long time may cause hearing loss. Please try to listen at moderate level volume.
- Avoid dropping from high which causes damage to sound quality. Keep away from fire and high voltage equipments.
- Please store the headset in a dry and ventilated place. When the headset is not used for a long time, charge it every two months
- If the headset is stained with water or sweat after exercising, please use a clean cloth to wipe it for long-term use.
- Please reset the headset if it cannot work well.
- Please check the charging port before charging to make sure there are no water stains or foreign matters.

## Warranty Card

Customer Name		Phone No.	
Product Name		Product No.	
Customer Address		Date of Purchase	
Dealer Name		Phone No.	
Date of Repair		Defective Status	
Repair Result			

## Warranty Coverage

Button failure, no sound from speaker or microphone, call not work, unable to charge normally

## Out of Warranty service

Damage caused by negligence.  
Damage caused by unauthorized disassemble and modification.  
Damage caused by charging with high voltage or manual abuse.

CHECK OUT CARD	Checker:	
----------------	----------	--

