



POWERPULL INSTRUCTIONS

Thank you for investing in the ProMAXX® PowerPull™ series fuel injector removal tool for the Ford® 6.7L Power Stroke™ diesel engine! This device eliminates the unnecessary step of bolting the tool to and from the cylinder head. Precision machined from hardened steel to eliminate creep, bending, cracking, or failure of the tool.

PowerPull™ Lift Kit Remove fuel line(s) and connections from the fuel injector(s) as well as the injector hold-down bolt and fork. Slip the ProLift™ knurled pad into the valve cover where the fuel injector hold-down passes through. Place the PowerLift™ assembly fork under the fuel injector and push it toward the injector until it seats and aligns with the PowerPad indent. Using a 3/8" drive ratchet with hex socket attached, turn clockwise until the injector lifts free.



PowerHammer Kit (Consists of Hammer, Slide, Acorn Nut, Impact Washer, ProAdapter™)

The ProAdapter™ portion of the PowerHammer assembly shown above is designed to be used by itself to remove the injector. Simply slip a small pry bar under the ridge of the ProAdapter™ and apply leverage to remove as shown in the middle photo to the right. For a difficult injector removal, attach the ProHammer slide assembly to the ProAdapter™ as shown in the photo to the right and use quick action to remove the injector. For even more challenging injector removal, utilize both LIFT to add tension, and ProHammer to shock the injector free.



SAFETY PROCEDURE: ALWAYS USE APPROPRIATE SAFETY EQUIPMENT INCLUDING OSHA APPROVED SAFETY GLASSES/GOGGLES AND PROTECTIVE GLOVES WHILE USING THIS DEVICE AND PERFORMING THIS OPERATION.

**NEED HELP?
WE LOVE HELPING OUR CUSTOMERS!
DIAL 724-941-0941
We are only successful when you are.**



For video instruction, check out the QR code to the left! Simply hover your phone camera over the image and it will connect you to our fast, easy Youtube tutorial.



1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241



(724) 941-0941



www.promaxxtool.com

V. 1, 4-22

