



INSTRUCTIONS

OIL SEAL EXTRACTOR




Thank you for purchasing the ProMAXX® Oil Seal Extractor. It is precision machine turned from stainless steel engineered with a unique, replaceable screw tip, which will bite into a damaged oil seal, locking itself for extraction.

1. To begin, simply line up the screw tip on the steel surface of the oil seal you wish to extract. Strike the handle with the palm of your hand or a plastic hammer.
2. Screw the extractor clockwise into oil seal.
3. Using the ProMAXX Slide Hammer, simply strike the hammer against the rear handle to remove the oil seal.

To replace worn screw tips, use an Allen wrench and 10mm wrench combo to release and replace the set screw within the oil seal extractor.



NEED HELP? WE LOVE HELPING OUR CUSTOMERS!
DIAL 724-941-0941
We are only successful when you are

 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241
 (724) 941-0941
 www.promaxxtool.com

