



## POWERPULL INSTRUCTIONS

**Thank you for investing in the ProMAXX® PowerPull™ series fuel injector removal tool for the Ford® 6.7L Power Stroke™ diesel engine!** This device eliminates the unnecessary step of bolting the tool to and from the cylinder head elongating the extraction process. This new 200 Series kit also utilizes four methods to remove the injector. Lift Kit PLK200 provides walk-free tension, the optional PLH100 Hammer Kit that attaches directly to the fuel inlet line, and with the PWP200PRO kit option, both in. Can be used in combination for more difficult injectors. New with the 200 is the added benefits of Harmonic Vibration for loosening seriously stubborn fuel injectors. Precision machined from hardened steel to eliminate creep, bending, cracking, or failure of the tool.

Check out [www.promaxxtool.com](http://www.promaxxtool.com) for more powerful Power Stroke tools to help you put more power into your repairs

### **PowerPull™ Lift Kit PLK200:**

Remove fuel line(s) and connections from the fuel injector(s) as well as the injector hold-down bolt and fork. Slip the PowerPull™ Pad into the valve cover where the fuel injector hold-down passes through.

Place the PowerLift™ assembly fork with the jack screw fully retracted and push the lift fork toward the injector until it straddles the injector and fully aligns with the PowerPad indent. Using a 3/8" drive ratchet with hex socket attached, turn clockwise until the injector lifts free.



### **PowerPull™ Slide Hammer Kit:**

The ProAdapter™ portion of the PowerHammer assembly shown above is designed to be used by itself to remove the injector. Simply slip a small pry bar under the ridge of the ProAdapter™ and apply leverage to remove as shown in the middle photo to the right. For a difficult injector removal, attach the ProHammer slide assembly to the ProAdapter™ as shown in the photo to the right and use quick action to remove the injector. For even more challenging injector removal, utilize both LIFT to add tension, and ProHammer to shock the injector free.

**SAFETY PROCEDURE: ALWAYS USE APPROPRIATE SAFETY EQUIPMENT INCLUDING OSHA APPROVED SAFETY GLASSES/ GOGGLES AND PROTECTIVE GLOVES WHILE USING THIS DEVICE AND PERFORMING THIS OPERATION.**

### **Air Hammer Powered PowerPull Lift Kit New 200:**

For the most difficult injector extraction, insert the punch into your air hammer that has been connected to the air hose. Place the end (curved end of the optional LT1910-11) of the punch into the divot on the PowerPull™ Fork (As Pictured). Toggle the air hammer on with light pressure, the power of Harmonic Vibration to loosen the extractor. The hammer inserted in the PowerPull Fork will aid in removing the injector free without much effort.



See more info and videos for the Ford 6.7L Fuel Injector Removal Kit by Scanning the QR Code

📍 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241

📞 (724) 941-0941

🌐 [www.promaxxtool.com](http://www.promaxxtool.com)

V. 1, 7-23





## Ford 6.7L Power Stroke Repair Kits



**Ford 6.7L Power Stroke  
Fuel Injector Hold Down Bolt Repair Kit  
PMXO200PRO**



**Ford 6.7L Power Stroke  
EGR Repair  
PMXN200PRO**



**Ford 6.7L Power Stroke  
Fuel Injector Seat Repair  
PMXRBY300PRO**



**Ford 6.7L Power Stroke  
Broken Exhaust Manifold Repair  
PMXP200PRO**



Scan the QR Code  
to See More Ford  
6.7L Power Stroke  
Repair Kits & Videos

📍 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241  
📞 (724) 941-0941  
🌐 [www.promaxxtool.com](http://www.promaxxtool.com)

