
4-in-1 Joystick Switch #7301

USER'S GUIDE

SPECIAL NEEDS
COMPUTERS 
1-877-724-4922



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Need to activate more than one switch? Our joystick is great for the user who needs to access multiple switch adapted devices or a single device with multiple switch inputs such as our adapted TV remote module (#5150). Can also be used to teach directionality – left, right, up, down. Size: 5¾"D x 4½"H. Weight: ¾ lb.

1. Connect up to four cords to external switch enabled toys or devices via the four 1/8-inch jacks on the side of the Joystick. If you need to use 1/4- to 1/8-inch adaptors, they must be mono adaptors, not stereo.
2. To operate a toy or device connected to the first jack, push the Joystick in the corresponding direction for that toy/device. To activate any additional connected toys/device repeat as before.
3. The toy/device will only remain activated while the Joystick is being actuated in one of the four directions. Once you release the Joystick, the toy/device will turn off.

Troubleshooting:

Problem: The 4-in-1 Joystick switch does not activate your toy/device.

Action #1: Make sure that the 4-in-1 Joystick switch is on a flat surface (not tilted or vertical). This provides for optimal functioning.

Action #2: Make sure that the connection between the 4-in-1 Joystick switch and your toy/device is plugged in all the way. There should be **no** gaps. This is a common error and an easy fix.

Action #3: Try a different switch with your toy/device to rule out the 4-in-1 Joystick switch as the source of the problem.

Action #4: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The 4-in-1 Joystick switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.