

Swopper® Care

Guidelines to keeping your product in the best condition.



Wool

- Gently vacuum the cover regularly with a soft vacuum nozzle.
- Always remove stains as quickly as possible. Most types of stains are easily removed with lukewarm water, possibly with the addition of a pH-neutral cleaning detergent. Always use a clean cotton cloth.
- Press a colourless paper towel against the fabric to absorb moisture and dirt.

Microfiber

- Optimum care is ensured by using water and pH neutral soapsuds. Stains containing oil and fat should be treated beforehand with ethyl alcohol.
- After each cleaning action you should rinse with clear water. Never use chlorinated detergents. Apply only small amounts of the cleaning detergents.
- The seat must only be treated damp, not wet, otherwise the materials used under the fabric may be damaged.
- To avoid edges, please always treat from the edge to the middle.

Faux Leather

- Wipe damp, if needed, use a liquid detergent containing 50% water and 50% alcohol.
- Never use leather care products, stain removers, solvents or disinfectants.

Base

- Abrasion marks on the base from shoe soles are best removed with a soft eraser.



We're here to help.

SPECIAL NEEDS
COMPUTERS 
1-877-724-4922

Call us at 877-211-5814 or email us at customer care@ergify.com for support.

