

## MagniTouch™

### 3x "Touch Activated" LED Lighted Loupe

Congratulations on selecting your new MagniTouch! In order to achieve optimum performance, please follow instructions for proper use and care.



#### PRODUCT SPECIFICATION

Magnification:	3x	Dimensions:	3.8" x 3.8" x 2.2"	Accessories:	Zip Case and Microfiber Cloth
Weight:	0.47 lbs	Batteries:	2 CR2016		

#### INSTRUCTIONS FOR USE

1. For steady light, move switch to middle position (marked ON). For "Touch-Activation," position switch to "AUTO". While holding loupe base, touch silver ring to activate the light (see Figs. 1-2).
2. Once you have selected your light setting, place loupe on top of subject to be magnified.
3. Focus magnifier by rotating the top portion of the loupe until viewing image is clear and sharp (see Fig. 3).

Fig.1

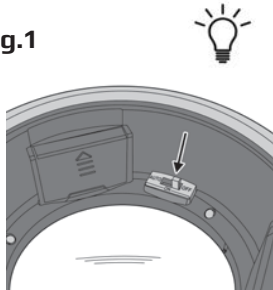 


Fig.2

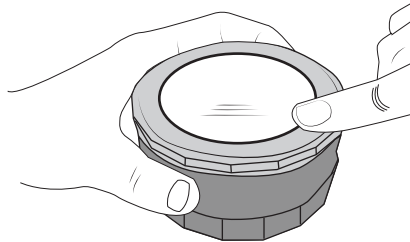 


Fig.3



#### CAUTION:

Fire Hazard: Keep magnifier away from direct sunlight to prevent accidental fire. Do not stare directly at LED lights as this might damage your eyes.

#### REPLACING BATTERIES

1. With Loupe in one hand, pull battery door in direction of arrow (see Fig.4). Then flip battery door up to expose batteries. (see Fig. 5).
2. Insert two new CR2016 coin cell batteries. Make sure positive side of battery is facing outward.
3. Slide battery door back into place until you hear a click.

**Please note:** there are two battery compartments. The compartment closest to the light switch is the one that powers the item. The other battery compartment is used to store extra batteries.

Fig.4


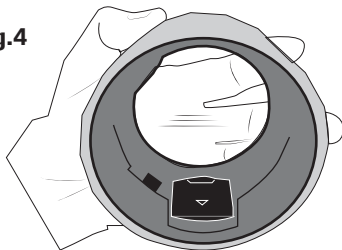 


Fig.5

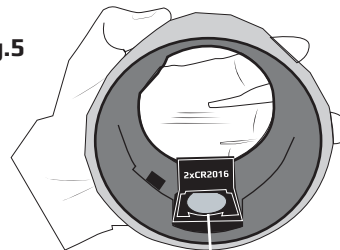 


#### BATTERY WARNING

Batteries: Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Discard coin cell batteries carefully. Keep coin cell batteries away from children.

## CARE AND MAINTENANCE

1. Clean lens with a soft, clean microfiber cloth, rubbing gently in a circular motion.
2. Moisten lens cloth with water if necessary.
3. Do not use harsh chemicals, solvents, or abrasives as they may damage the lens.
4. Always store loupe in included protective case when not in use to avoid damaging lens.

 **Customer Service:** If you experience any difficulties, please contact us and we will be happy to help you.



✉ [info@carson.com](mailto:info@carson.com)



✉ [uksupport@carson.com](mailto:uksupport@carson.com)



✉ [eusupport@carson.com](mailto:eusupport@carson.com)

**For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)**

**[www.carson.com](http://www.carson.com)**

**Carson Optical • 2070 5th Ave, Ronkonkoma, NY 11779 | 631-963-5000**