

# Quick Start Guide for RM-4000P/4010P/4015P/4100S/4110S

## Getting Familiar with the Device



1 Primary microphone	16 F2 (Function 2) button
2 Recording three colour LED (red, green and blue)	17 F3 (Function 3) button
3 Insert index mark	18 F4 (Function 4) button
4 NEW LED (blue)	19 F1 LED (blue)

5 INS/OVR LED (red)	20 F2 LED (blue)
6 NEW button	21 F3 LED (blue)
7 Insert / Overwrite button	22 F4 LED (blue)
8 Rewind button	23 Built-in speaker
9 Record button	24 USB cable
10 Play/Pause button	25 Secondary microphone
11 Fast Forward button	26 Back button
12 Trackball	27 Slide Record/Stop/Play/Review
13 Left button	28 A (Function a) button
14 Right button	29 B (Function b) button
15 F1 (Function 1) button	30 C (Function c) button