

Quick-Start Guide to setting up Scanning Remote.

1

Make sure Scanning Remote battery is charged or is powered from wall adapter. Press Function to make sure the unit is awake.





Fill out the Configuration Chart (overleaf) with your required button functions.

3

Pair each button with its receiver by pressing Pair on the receiver and then BOTH Pair/Learn and the relevant touch button on Scanning Remote.





4

Once the 'P' appears on the display, press any further buttons you may wish to form part of the same pairing group. You can add these until the P is extinguished.



5

Now set the function of each button by pressing Function to select and Pair/Learn to change.

