

Computer keyboard language settings with TiPY

TiPY always uses the most efficient language with the most possible signs and letters. Striving for the best efficiency.

Windows:

- DE – German (Germany) / (Austria)
- FR – French (France)
- EN – English (United Kingdom)
- IT – Italian (Italy)
- ES – Spanish (Spain)
- DA – Danish (Danish)
- NO – Norwegian (Bokmål)
- SV – Swedish (Sweden)
- FI – Finnish (Finnish)
- NL – Dutch (Netherlands) United States-International
- PT – Portuguese (Portugal)
- IS – Icelandic (Icelandic)

MacOS:

- DE – German (Germany) / (Austria)
- FR – French (France)
- EN – English (US International – PC)
- IT – Italian (Italy)
- ES – Spanish (Legacy)
- DA – Danish (Danish)
- NO – Norwegian (Bokmål)
- SV – Swedish (Sweden)
- FI – Finnish (Finnish)
- NL – Dutch (Netherlands)
- PO – Portuguese (Portugal)
- IS – Icelandic (Icelandic)

TiPY Shortcuts

 
The special keys with multiple language characters are activated with the keyboard language setting in each case. The other language characters are therefore inactive. Example: With the German setting, only the German special characters ÄÖÜ are active.

@ is created with ALT and @.

TiPY FAQ



Second characters are used with Shift and third characters with ALT.

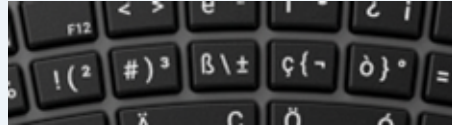

TiPY has no extra Apple and Windows keys, but many of these functions are available with the CTRL key.

Of course, all the usual combinations with Shift, Control and ALT such as “Copy Paste” are possible.

TiPY extra key combinations

Fn + Fx – Sends the marked special function e.g. “Volume Up”, “Volume Down”, “Mute”,

Fn + Delete – call up Windows task management or logon screen

Fn + 3; Fn + 4; Fn + 5 – MAC: Screenshot functionality

Fn + End “Roll”, “Scroll Lock” – is activated / deactivated.

Fn + Home – “Pause” is activated

Fn ++ – The language and operation selection mode is activated for 5s.

Windows Print – Screenshot – Screen Snippets

Windows has disabled the “Print” key. To enable this, please go to settings and search for:

“Using the Print Screen key to launch screen snippets”

Enable Print Screen Link.

Now a screenshot works simply via the “Print” button on your TiPY.

[Y Z and other character mix-ups](#)

Y and Z or switched keys is an easy fix.

It means that your computer has the wrong KEYBOARD language setting.

This explanation mainly concerns the English keyboard setting, but also others like German and French.

Source: <https://tipykeyboard.com/en/faq-en/?v=fa868488740a>

TiPY FAQ

The screenshot shows the TiPY website interface. At the top, there is a navigation bar with the TiPY logo and links for One Hand Keyboard, TiPY Trainer, Shop, Reseller, News, and social media icons. Below the navigation bar, there is a section titled "Choose the language of your exercises" with a dropdown menu set to "English". A green circle highlights this section and the language selection options. Below the dropdown, there is a note: "Keyboard language setting on your computer: TiPY always uses the most efficient language with as many characters and letters as possible, regardless of the country." Underneath, there are two columns of language options: "Windows:" and "MacOS:". The Windows options are: EN: English (United Kingdom), DE: German (Germany/Austria), and FR: French (France). The MacOS options are: EN: English (US International - PC), DE: German (Germany/Austria), and FR: French (France). To the right of these options, there is a link for "Additional assistance: Print the TiPY layout from HERE (includes both, left and right)". Below the language selection, there is a "Warm Up - Getting Started" section with four numbered steps: 0.1 Place your hand, 0.2 First steps, 0.3 Finger exercise, and 0.4 Finger exercise. To the right of these steps is a video thumbnail for "TiPY Keyboard Trainer Wo...". Below the warm-up steps, there is a section titled "Let's begin to type with TiPY!" with a row of six star icons, where the third icon is highlighted with a black underline.

You have correctly set TiPY (operating system and language). Now when you please also set the “KEYBOARD language” on your computer. TiPY is based on languages and not countries. The idea is to minimize all the variations of english US, english UK, english India, etc. The same with many german and french variations.

Your correct setting for English:

 
 
Windows:

- EN: English (United Kingdom) Keyboard


MacOS:

- EN: English (US International – PC) Keyboard

TiPY FAQ

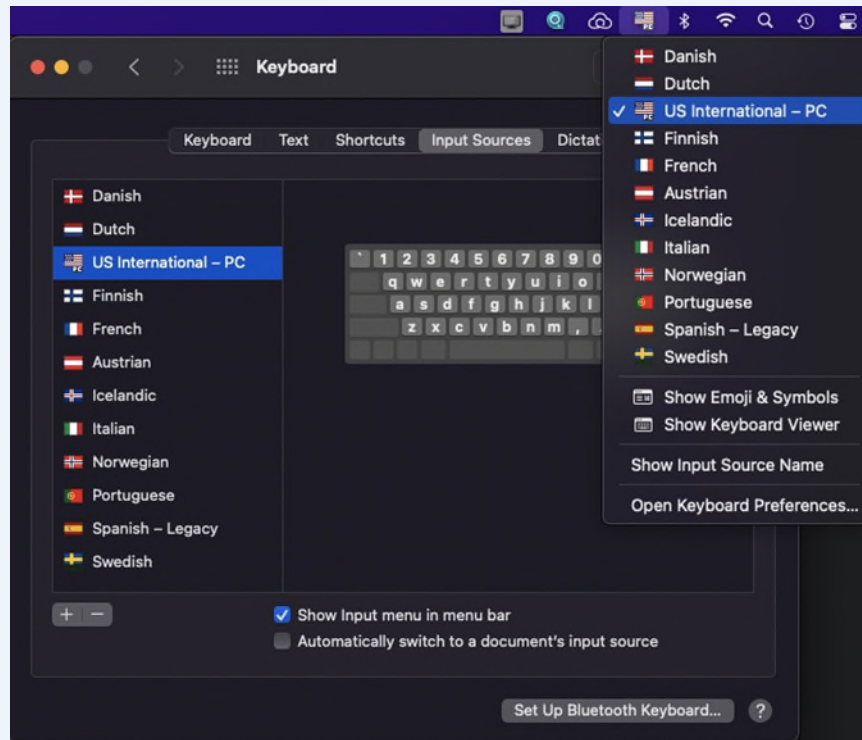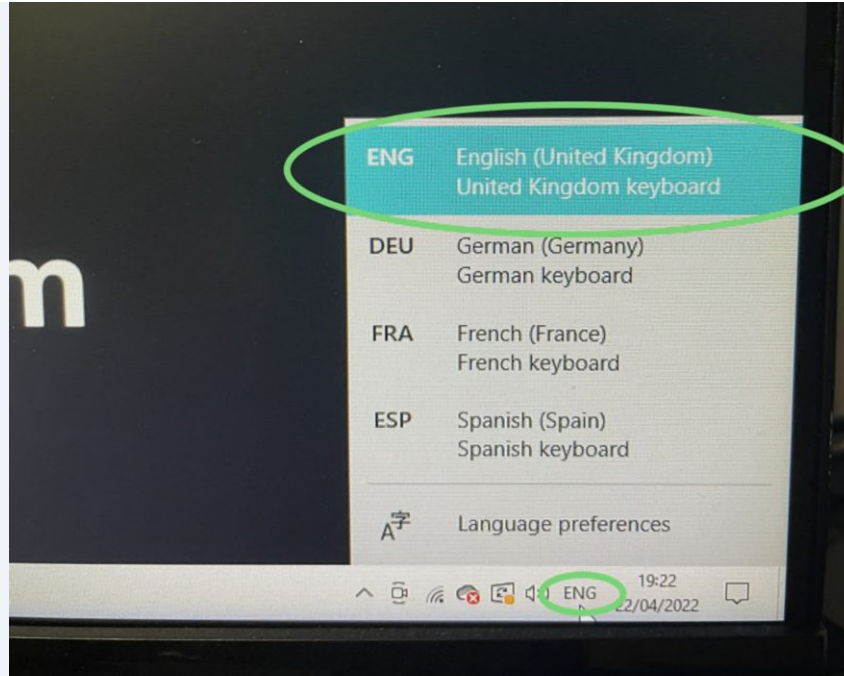

 Source: <https://tipykeyboard.com/en/faq-en/?v=fa868488740a>

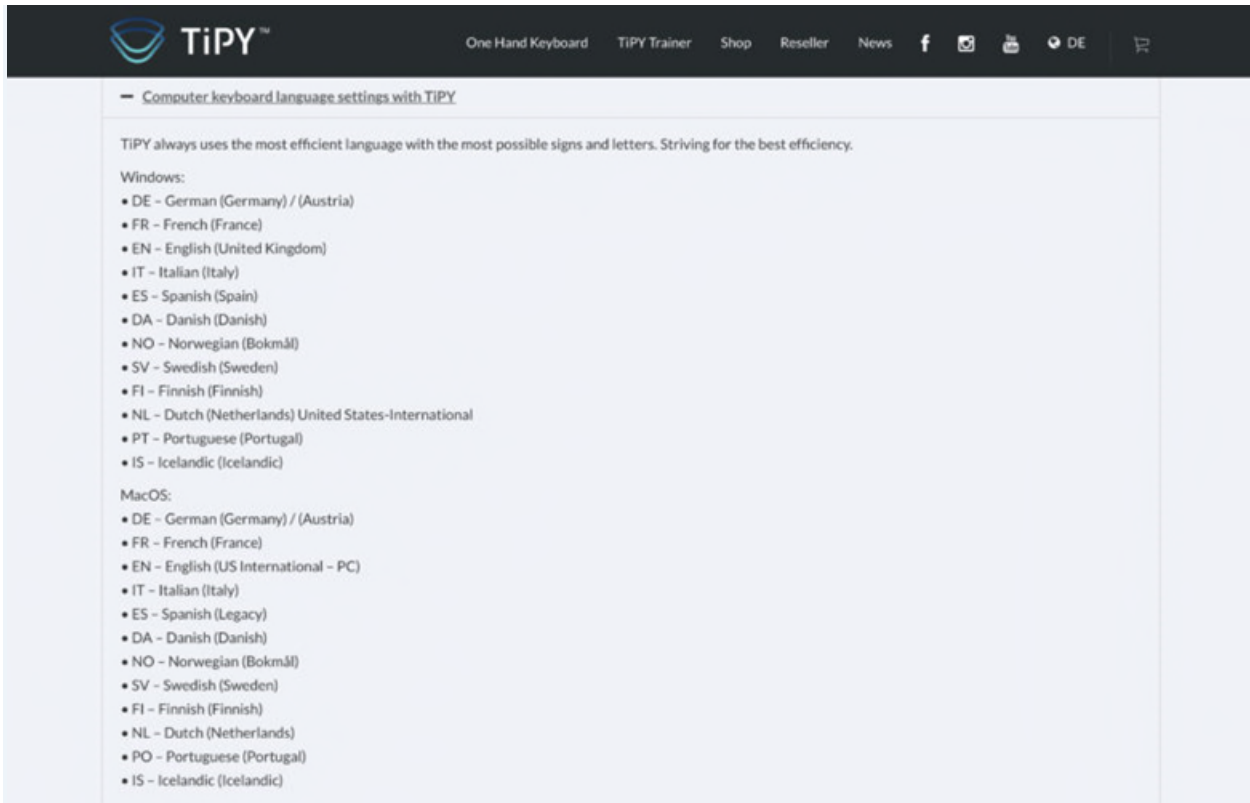

[TiPY writes other letters and characters or is not reacting?](#)

Check, as indicated in the operating instructions, whether TiPY is set to the correct operating system.

Check, as indicated in the operating instructions, whether TiPY is set to the same language as your computer.

Please also check the keyboard language settings on your computer. Especially English and languages with multiple country variations. (See FAQ Computer keyboard language setting)

[Which operating systems does TiPY support?](#)

All operating systems, Mac, IOS, Windows, Linux, Android

 
The operating instructions show the respective setting.

[Can I reset the TiPY to the factory settings?](#)

Yes, TiPY has a reset button under the handpad. Press lightly with a tip once and the TiPY is reset.

After a reset, TiPY must be connected to a computer as described in the operating instructions and set up again.

TiPY FAQ

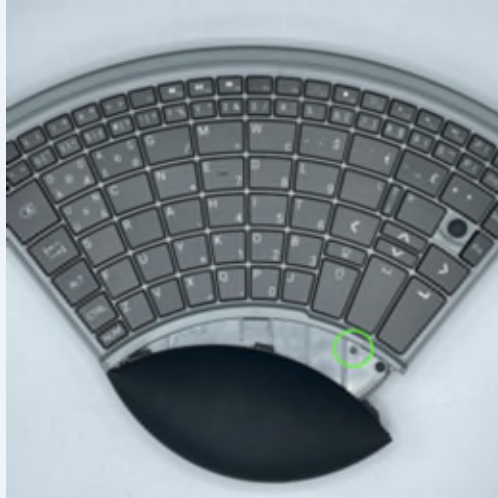

[TiPY cannot establish a Bluetooth connection?](#)

TiPY must be connected to a computer once, when it is used for the first time or after a reset using the supplied or a similar cable. Only then is the Bluetooth activated on the TiPY and can be set up on the computer.

The small number keys are used to enter numbers.



[How many Bluetooth connections can TiPY save?](#)

TiPY can save 3 Bluetooth connections.

[How can I delete the Bluetooth connections?](#)

Bluetooth connections can only be deleted on the respective computer.

 
After a TiPY reset, the saved Bluetooth connections are deleted.

[How do I activate the left or right keyboard of TiPY?](#)


A sensor automatically detects which side is on top and is active.

Keyboard Type MAC

TiPY FAQ

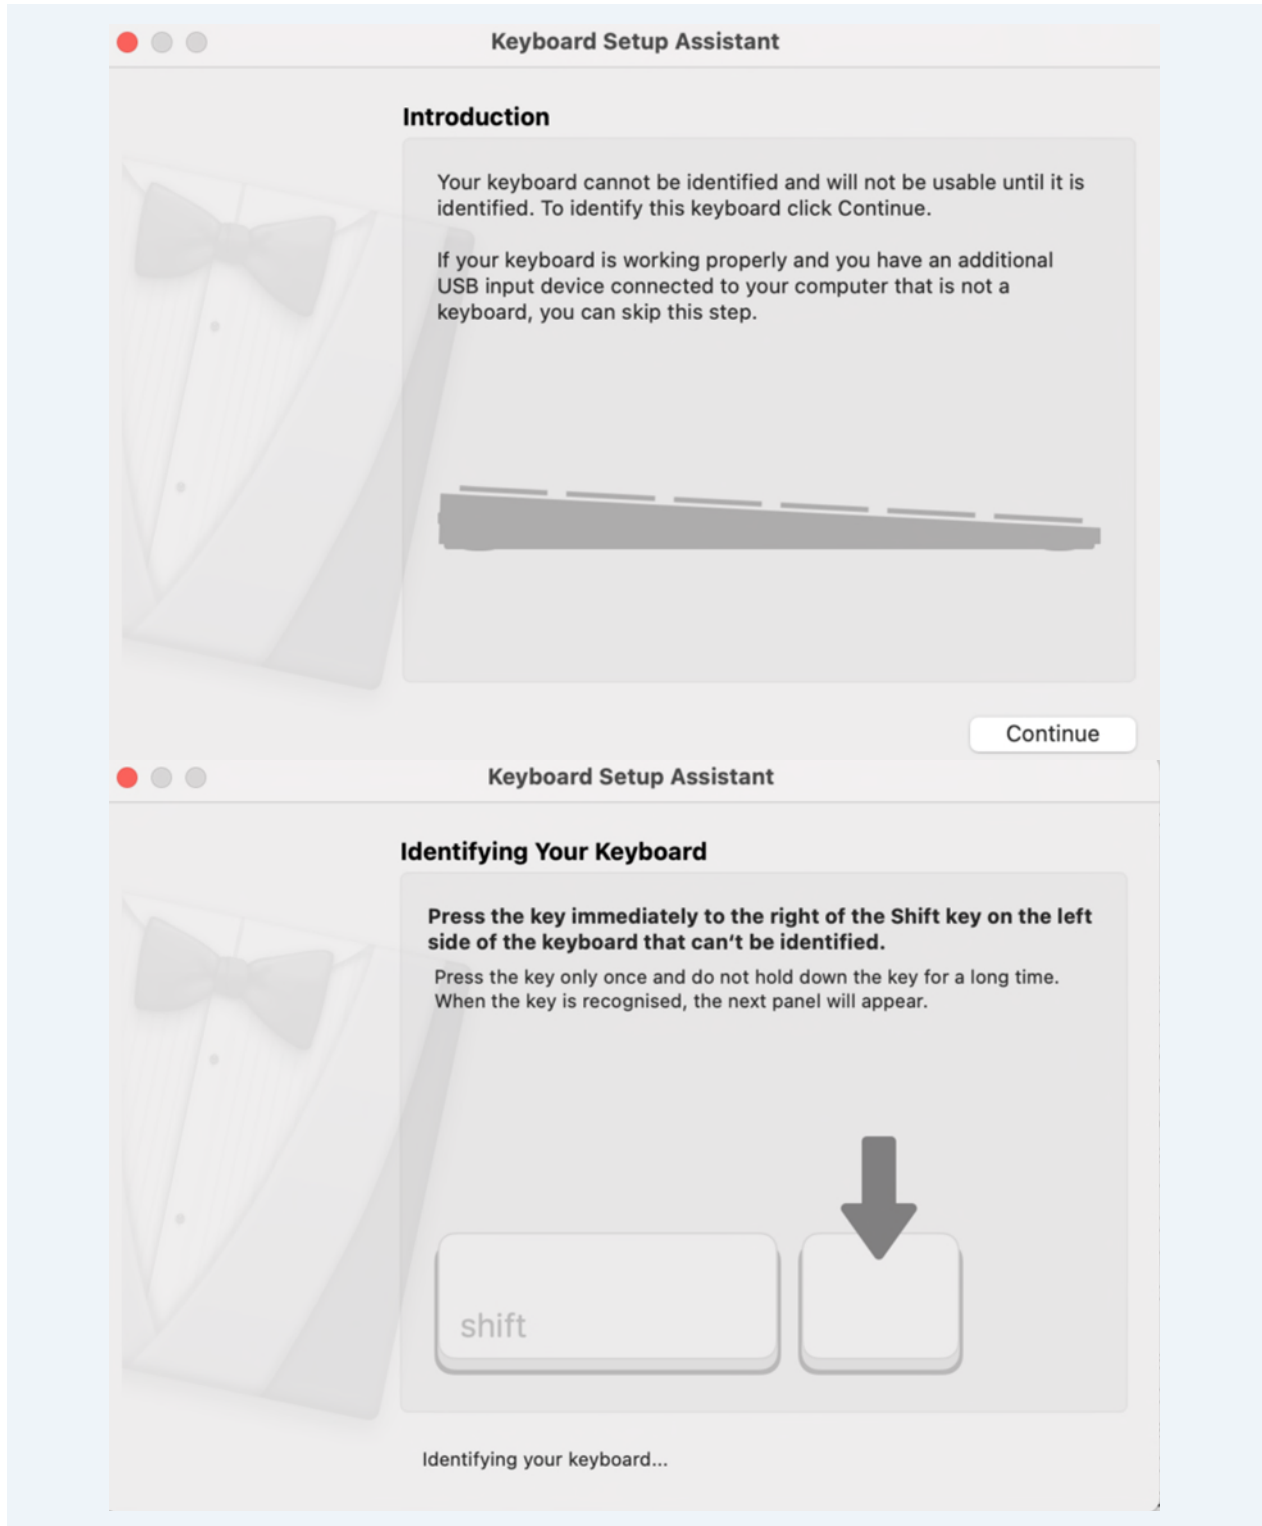

TiPY FAQ

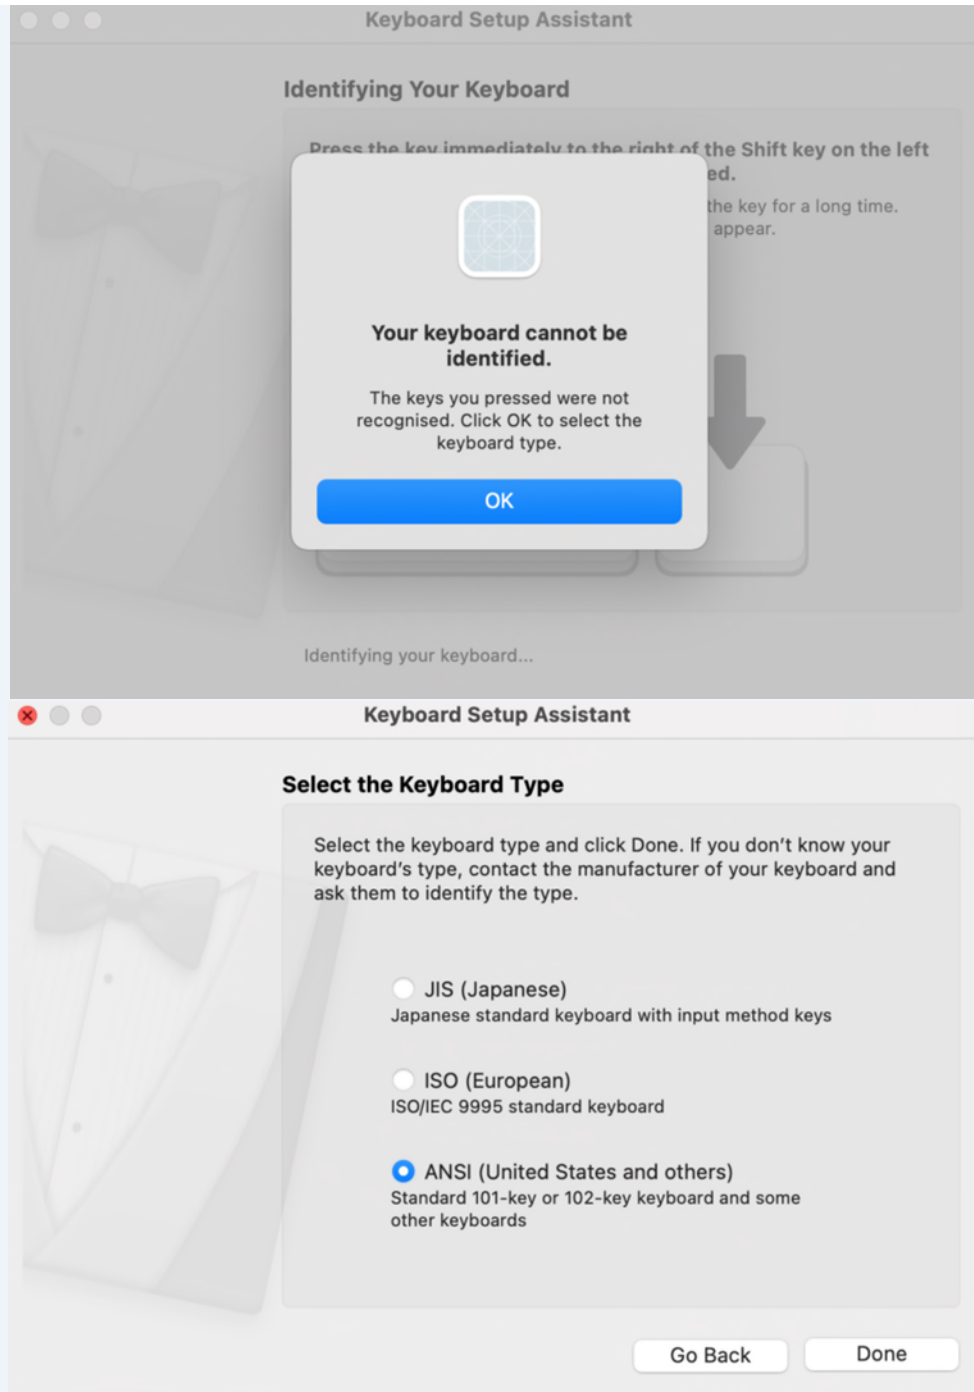 

[My computer does not have an integrated Bluetooth. Which USB Dongle is suitable?](#)
Each Low Energy USB 4 Bluetooth stick is compatible.

Source: <https://tipykeyboard.com/en/faq-en/?v=fa868488740a>