

User Guide



www.bjliveat.com

BJ Adaptaciones

C/ Mare de Déu del Coll, 70, Bajos
08023 Barcelona, Spain
Phone: +34 93 285 04 37
Fax: + 34 93 553 56 34
e-Mail: info@bjliveat.com



SPECIAL NEEDS
COMPUTERS 
1-877-724-4922

BJ-321 Adapted Wireless Personal Alarm

This product is used to give an emergency alert through an adapted control. Just click on the transmitter button or pressing the switch to generate the warning through an alarm melody.

Instructions

Connect 23AE 12V battery in the transmitter (included with the product) taking into account the polarity (see Figure 1).

Connect three AA batteries of 1.5 V in the back compartment of the alarm taking into account the polarity of the three batteries. Close the battery compartment.

To turn on the alarm activate the control button or connect a switch to the switch input and activate it.

The LED indicates that the transmitter has been activated will turn on during a seconds to indicate that the call has been done.

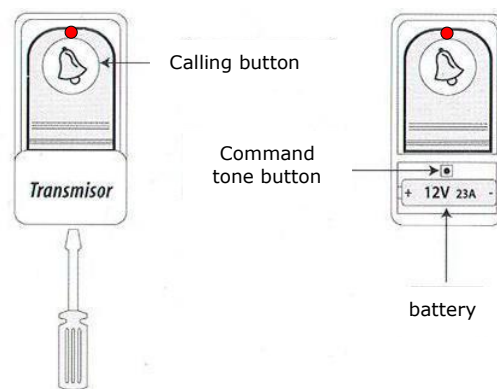


Figure 1. Transmitter details.

If you want to change the alarm tone, press the red button inside the control battery compartment. When activating it the new alarm melody will sound.

Features

- Reaches 70 meters in free space, lower in places with obstacles.
- 16 different sounds.
- Includes plug and screw for ring installation.
- High sound alarm.

Maintenance and precautions

- Clean the product with a cloth slightly dampened with water.
- Avoid impacts on both the control and the ring.
- Do not connect switches that can apply voltage to the input switch.

Suggestions

- See our list of switches to see which best fits your needs.
- Check with our technical team if you want to match more than a one transmitter or ring together.

Manufactured by Electro DH, S.A.