


# DELUXE TALKING PHOTO ALBUM

Talking Photo Albums can be used for many different applications. They make a perfect gift for family and friends, they can be used as a learning resource in a school classroom and also to create talking memory books for independent living. You can record and playback a single voice message on each of the 20 pages and/or download your own sound files from a Computer.

**Product Code:**  
TPA-DX2-20BK

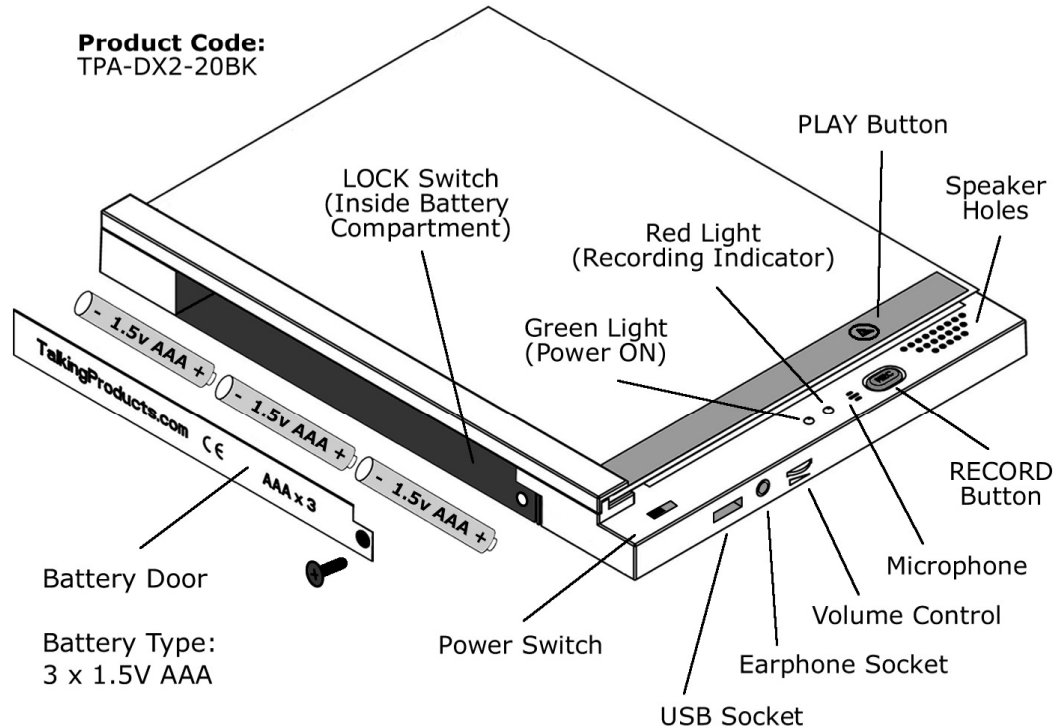

Battery Type:  
3 x 1.5V AAA

## Safety Information

Do not mix old and new batteries.  
Do not mix different types of batteries.  
Batteries must be fitted with the correct polarity.  
The power supply terminals must not be short-circuited.  
Exhausted batteries must be removed from the battery compartment.  
Non-rechargeable batteries must not be charged.  
Rechargeable batteries must only be charged under adult supervision.  
Rechargeable batteries must be removed from the battery compartment before being charged.

This product is not suitable for children under 36 months. Choking Hazard.



Talking Products Ltd  
Unit C8 The Premier Centre  
Abbey Park Industrial Estate, Romsey  
Hampshire, SO51 9DG, ENGLAND

Tel: +44 (0)1794 278327

Email: [info@TalkingProducts.com](mailto:info@TalkingProducts.com)



## More products in our range

Recordable Greetings Cards  
Multiple Message Recorders  
Talking Motion Sensors  
Talking First Aid Kits  
Talking Hearts  
Talking Tiles  
Digital Voice Recorders  
Sound Chip Modules  
Voice Pads

Please visit our web site for more details...

[www.TalkingProducts.com](http://www.TalkingProducts.com)

## How to record and playback a message

You can record a single voice message on each of the 20 pages. Any combination of message lengths can be recorded across the 20 pages with a total recording time of over 2 hours, (actual 130 minutes).

1. Slide the Power Switch to the ON position. The Green light will illuminate to confirm.
2. Press the RECORD button once and the Red light will begin to flash to indicate that recording is ready to start.
3. Press the PLAY button on one of the pages once to start the recording onto that page. The Red light will change from flashing to constant to indicate that recording is in progress. Speak clearly approximately 4 to 6 inches, (10 to 15cm), from the Microphone.
4. If you wish to pause the recording at any time press the play button once. The red light will flash to indicate recording is paused. To continue recording press the play button once. You can pause and restart the recording as many times as you wish.
5. When you wish to finish recording, press the PLAY button once to pause and then press the RECORD button once to save your recording to the memory.
6. Each time the PLAY button is pressed, your message will begin to playback. You can pause the playback at any time by pressing the PLAY button and then press it again to continue.

**NOTES:** The message on each page can be re-recorded as many times as you wish. A new recorded message on the same page will replace the old one. If you press the RECORD button by mistake at any time then simply press the RECORD button again to cancel.

## Message Protection

It is possible to protect your recorded messages from accidental erasure. Locate the small LOCK switch hidden inside the battery compartment and slide it to the left position. This will disable the recording function. You will still be able to play messages, but not record.

## Earphone Socket

A 3.5mm Phono Socket is included. This will allow you to connect Earphones for personal listening or you could connect the Album to an external Loud Speaker to increase the playback volume.

## Power Save Mode

To save battery power, the Album will go into 'Auto-Sleep' mode if it is left unused for 15 minutes. To restart, switch the power OFF and then ON.

## How to transfer sound files to and from a Computer

Your voice recordings for each page are stored on the internal memory. (Memory Size 128MB). This feature allows you to save and transfer your recordings to a Computer using the Micro USB Socket. Please read and follow the steps carefully, and keep for future reference.

1. Ensure the Power Switch is in the OFF position.
2. Locate the USB socket and use the USB cable supplied to connect the Album to a spare USB port on your Computer. The first time the Album is connected to a Computer, it may install the drivers and may also require the Computer to be rebooted depending on your operating system.
3. The Computer will recognise the Album as a USB storage device and will appear named as a 'Removable USB Drive' within the file explorer window.
4. Your voice recordings are saved as MP3 format files, (128kbps Mono). Each page recording is located inside a separate sub-folder. The recording for Page 1 will be saved as a file named **REC00001.MP3** and located in a folder named **Page01**. The recording for Page 2 will also be saved as **REC00001.MP3** and located in a folder named **Page02** and so on up to **Page20**.
5. You can drag and drop the folders or individual MP3 sound files from the Album onto the hard disc of your Computer.
6. If you wish to pre-record the pages of your Album with sound files taken from your Computer, simply download your sound files onto the internal memory by drag and drop method. For a file to play on a particular page you must locate the file inside the correct folder for each page. For a file to play on Page 1 you must save the file inside the folder named **Page01**. For a file to play on Page 2 you must save the file inside the folder named **Page02** and so on. Each page will then playback your sound files correctly.

## Important Notes

Before you transfer an MP3 file onto your album, you must rename the file to **REC00001.MP3**. The file name must be the same for each file that is transferred into each page folder. The album will not play files that have not been renamed.

The Album will only play sound files that are saved as MP3 file format. WMA, WAV, MOV and MP4 formats are not supported. You are limited to a maximum of 130 minutes of recording, or a total of 128MB, spread across the 20 pages in the Album. For example the equivalent of 6.5 minutes of recording on each page, or any combination for each page adding up to a total of 130 minutes.

We recommend AUDACITY software for editing and converting sound files. Please visit: [www.audacityteam.org](http://www.audacityteam.org) for more information.