 


step by step

QUICK START GUIDE

Box Includes:


- 1 Dream Wiper
- 2 Refillable Microfiber Pads

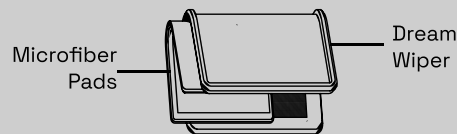


Care Instructions:



Hand Wash

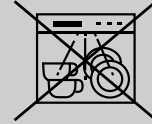

Not Dishwasher
Safe

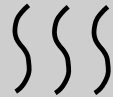

Air Dry

step

01

Remove the Microfiber Pad and rinse under cold water. Squeeze dry until it is slightly damp.

step

02

Flex open the sides of the Dream Wiper and attach the Microfiber Pad using the hook fastener.

step

03

To use the Dream Wiper, squeeze the wiper with a steam wand inside and gently wipe with an up and down motion.

step

04

Purge the steam wand immediately after cleaning.

step

05

To keep the Dream Wiper clean, rinse with soap and water after each use. Wash plastic parts of the wiper by hand.

step

06

The Microfiber Pad is machine-washable under cold water. Replace when required.