

OPERATING INSTRUCTIONS WAHL HOT LATHER MACHINE

INSTRUCCIONES DE WAHL HOT LATHER MACHINE

MODE D'EMPLOI DES WAHL HOT LATHER MACHINE

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions are required to always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
(this appliance)

DANGER

To reduce the risk of death or injury by electric shock:


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use while bathing or in a shower.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not reach for an appliance that has fallen into water. Unplug immediately from receptacle.
- Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet at the end of each day.
- Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Close supervision is required when this appliance is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids.
- Use this appliance only for its intended use as describe in this manual.
- Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never operate this appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where it is possible for the air openings to be blocked. Keep the air openings free of lint, hair, and similar objects.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- To disconnect, turn all controls to "OFF" then remove plug from outlet.
- Use only on a level surface.
- Unplug this appliance before filling. Do not fill past the fill line on the bottle. See fill instructions section in this manual.

SAVE THESE INSTRUCTIONS

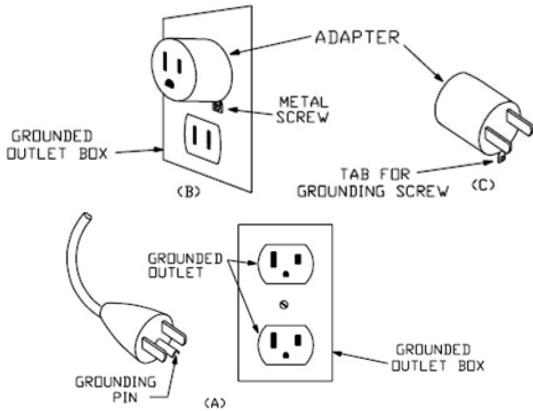

GROUNDING INSTRUCTIONS

This appliance should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper use of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat-blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes in the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-V circuit, and has a grounding plug that looks like the plug illustrated in sketch A of the figure below. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green-colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet-box cover. Whenever the adapter is used, it must be held in place by a metal screw.

HOT LATHER MACHINE PARTS

- Machine Base
- Liquid Bottle
- Liquid Pump
- Hot Lather Machine Lid
- Indicator light
- Switch



OPERATING INSTRUCTIONS

Fill Instructions



First make sure Hot Lather Machine is turned off and unplugged. Do not fill the liquid bottle inside of the Hot Lather Machine. Remove lid and liquid bottle out of the Hot Lather Machine and unscrew the pump. Use only Wahl '19 Liquid Lather as it has been specially formulated for this machine. Other lathers may clog your pump and you may not have the same results. Do not fill the bottle past the fill line marked on the bottle. After filling, place liquid pump in plastic bottle and tighten. Place the bottle assembly in the machine base and set the lid onto the machine base and plug in. Allow 50 minutes for the lather to heat to recommended temperature before use.

Heating Instructions

While heating the indicator light will be red in color. When the lather is at the peak temperature, the indicator light will turn blue.

Troubleshooting

- Pump will not push down?
Pump has a lock and will only push down when turned to the correct position
- Lather will not come out?
 - Bottle is empty and needs to be refilled.
 - Pump is clogged and needs to be cleaned. (see cleaning instructions)
- Lather not warm?
Make sure unit is plugged in and light is blue. If light is red it needs more time to heat. If light is blue and lather is not warm, discontinue use and see #4.
- If you still encounter problems with your unit, ship your unit pre-paid, to our factory with a note explaining the problem: Attn: Repair Dept. – Wahl Annex – 3001 North Locust – P.O. Box 578 – Sterling, IL 61081

Cleaning the Hot Lather Machine Base

To clean the Hot Lather machine base, turn the unit off and unplug. Wipe unit with a damp cloth and dry.

Cleaning the Liquid Pump

To clean the pump if it is clogged place it in warm soapy water for 15 minutes to soak. After 15 minutes pump water through the pump to clean it out.

Store unit in a cool dry place when not in use.

GARANTIA LIMITADA POR UN (1) AÑO

Si su producto no llegará a operar satisfactoriamente en el período

de un (1) año, desde el fecha de la compra original o de haberlo

recibido como regalo, Wahl lo reparará o reemplazará, a su criterio

no y se lo enviará GRATIS Nuestra garantía garantiza no cubrir

las hojas, las cuales son partes desmontables. Por favor envíe su

producto con frangente pagado a Wahl Clipper Corporation, 3100

N. Locust St., Sterling, Illinois 61081, Atención: Reparar

Department, acompañe d'una nota describiendo el defecto e indicando

la fecha inicial de recepción o el momento en que el defecto se produjo

de reparación, con una nota describiendo el defecto y con el recibo

de compra original o el recibo como regalo (si aún está bajo

garantía). Los productos fuera de garantía serán reparados a

nuestros precios originales de reparación.

Esta garantía no es válida y no se hará ninguna reparación o

reemplazo si el producto:

1. Ha sido modificado en cualquier manera.

2. Ha sido reparado por otro que no sea Wahl Clipper

Corporation.

3. Ha sido sometido a una utilización inadecuada.

Esta garantía le brinda derechos legales específicos y usted puede

adquirir otros derechos, los cuales varían de un estado a otro. No se

brinda ninguna otra zaratana expresa escrita. Cualquier garantía

implícita incluyendo cualquier garantía mecánica la al podra surgir por

la compra o la utilización, está limitada al período de un año

proporcionado en esta garantía expresa. Algunos estados no

permitirán tal limitación, por o tanto tal vez no se aplique a usted.

No se asumená ninguna responsabilidad por daños accidentales o

consecuenteles de cualquier tipo o por la utilización de dispositivos

no autorizados. Algunos estados no permitirán tal exclusión o

limitación, por lo tanto tal vez no se aplique a usted. Garantía válida

solamente en Estados Unidos de Norteamérica.

LIMITED 1 (ONE) YEAR WARRANTY

If your Wahl product fails to operate satisfactorily within one (1)

year from the date of original purchase or receipt as a gift, Wahl

will let our option repair or replace it to you FREE

OF CHARGE. Please mail your product prepaid to Wahl Clipper

Corporation, 3100 N. Locust St., Sterling, Illinois 61081, Attention:

Repair Department, with a note describing the defect and the date

of original purchase or receipt as a gift (if in warranty). Products

not of warranty will be repaired at our standard paid charge.

This warranty is void and no repair or replacement will be made

under this warranty or otherwise if:

1. The product is modified in any other manner than Wahl

Clipper Corporation

3. The product has been subject to unreasonable use.

This warranty gives you specific legal rights and you may also

have other rights which may vary from state to state. No other

written express warranty is given. Any implied warranty including

any warranty of merchantability, which may arise from purchase

may not apply to you. No responsibility is assumed for incidental

or consequential damages of any type, or for the use of unauthor-

ized attachments. Some states may not allow the exclusion or lim-

itation of incidental or consequential damages, so the limitation or

United States.

U.S. and Foreign

Patents Pending

Les ETAS-UNIS et les brevets

étrangers Pending

GARANTIE LIMITÉE D'UN AN

Si le produit Wahl cesse de fonctionner de façon satisfaisante en

de un (1) an, à compter de la date d'achat initiale ou de réception en

cadeau, Wahl s'engage, à son gré, à le réparer ou à le remplacer, et

à le retourner SANS FRAIS à l'expéditeur. La garantie ne couvre pas

les lames, les brosses ou d'autres pièces durs. Le produit

défectueux doit être envoyé, port payé, à Wahl Clipper Corporation,

3100 N. Locust St., Sterling, Illinois 61081, Attention: Répar

Department, accompagnant d'une note décrivant le défaut et indiquant

la date initiale de réception ou le moment où le défaut s'est produit

de réparation, avec une note décrivant le défaut et avec le rec

de achat original ou le reçu comme cadeau (s'il est couvert par

garantie). Les produits hors de garantie seront réparés à

nostres prix originaux de réparation.

Esta garantía no es válida y no se hará ninguna reparación ni

reemplazo si el producto:

1. Ha sido modificado en cualquier manera.

2. Ha sido reparado por otro que no sea Wahl Clipper

Corporation.

3. Ha sido sometido a una utilización inadecuada.

Esta garantía le brinda derechos legales específicos y usted puede

adquirir otros derechos, los cuales varían de un estado a otro. No se

brinda ninguna otra zaratana expresa escrita. Cualquier garantía

implícita incluyendo cualquier garantía mecánica la al podra surgir por

la compra o la utilización, está limitada al período de un año

proporcionado en esta garantía expresa. Algunos estados no

permitirán tal limitación, por o tanto tal vez no se aplique a usted.

No se asumená ninguna responsabilidad por daños accidentales o

consecuenteles de cualquier tipo o por la utilización de dispositivos

no autorizados. Algunos estados no permitirán tal exclusión o

limitación, por lo tanto tal vez no se aplique a usted. Garantía válida

solamente en Estados Unidos de Norteamérica.

2900 Locust St. • Sterling, IL 61081 • (815) 625-6525 • Fax: (815) 625-6590

WAHL CLIPPER CORPORATION

WAHL®

www.wahlpro.com

Printed in CHINA

120V~60Hz 42W

