 


# cosihome<sup>®</sup>

## INSTRUCTION MANUAL

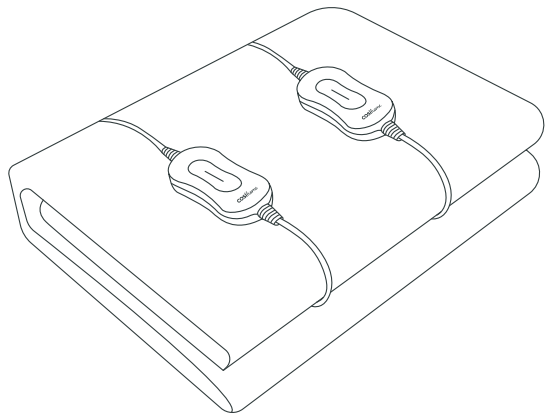

---

MODELS CH-EB-D04 | CH-EB-K04

Dual Zone Electric Blanket

IMPORTANT INSTRUCTIONS – RETAIN FOR FUTURE USE

# CONTENTS

**EN** **Safety Instructions.....Page 3**  
**Specification ..... Page 6**  
**Symbols Explained .....Page 7**  
**Parts..... Page 8**  
**Fitting Instructions..... Page 8**  
**Using Your Electric Blanket..... Page 8**  
**Cleaning Your Electric Blanket ..... Page 9**  
**Recycling and Disposal ..... Page 11**

Thank you for choosing to purchase a product from Cosi Home. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

## SAFETY INSTRUCTIONS

### PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- ⚠ WARNING: KEEP THE APPLIANCE AWAY FROM FIRE OR FLAMMABLE MATERIALS.**
- ⚠ WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE ALWAYS MAKE SURE THE APPLIANCE IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING OR CLEANING IT.**
- ⚠ CAUTION: PROLONGED USE OF THE APPLIANCE AT A HIGH TEMPERATURE SETTING COULD LEAD TO SKIN BURNS. DO NOT USE FOR EXTENDED PERIODS OF TIME.**
- ⚠ CAUTION: IF YOU FEEL UNWELL WHILE USING**

### THIS APPLIANCE, TURN OFF THE APPLIANCE IMMEDIATELY.

- Do not use by persons insensitive to heat and other very vulnerable persons.
- Use the electric blanket under the body only. Do not wrap the body with the blanket or use in any other way.
- Use the attached cords to secure the product to the bed.
- This product must only be used as an underblanket and secured to the mattress correctly to ensure it does not move.
- Do not use on an adjustable bed, or ensure the blanket or cord do not become trapped, stretched, rucked or creased.
- This blanket is not to be used by young children, unless the controls have been pre-set by a parent or guardian, or

unless the child has been adequately instructed on how to operate the controls safely.

- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always unplug the appliance when not in use.
- Do not use the appliance when folded or creased.
- Do not tuck the blanket under the mattress.
- Do not cover or trap the controller under a pillow, mattress or blanket.
- Do not place the controller under the appliance whilst in use. Heat can damage the controller.
- Only operate the appliance with the detachable controller supplied.
- Do not use the appliance on sofa beds or inflatable beds.
- Do not immerse the appliance in water.
- Do not use a hot water bottle at the same time as using this appliance.
- Not intended for medical use in hospital.

- If you have any medical conditions or concerns, consult your doctor before using this appliance.
- If you experience persistent muscle or joint pain please inform your doctor. Persistent pain can be a symptom of illness.
- If you experience any pain or discomfort while using the appliance, stop using it immediately.
- The appliance can be used by children older than 3 years and younger than 8 years under constant supervision and with the control always set to minimum temperature value. Children older than 3 years and younger than 8 years should not plug in, regulate and clean the appliance or perform user maintenance.
- Keep the appliance out of reach of children and pets.
- Do not leave children alone or unattended in the area where the appliance is in use.
- ALL OTHER: Children must be supervised not to play with the appliance.
- Children of less than

3 years must NOT use this product due to their inability to react to overheating.

- Cleaning and user maintenance shall not be made by children unless continuously supervised.
- The appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Never leave the appliance unattended while in use. Always turn the appliance off and disconnected from the power supply when not in use.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- Do not wipe or wash the electric blanket with chemical solvents. Prior to cleaning ensure the device is off and that the batteries have been removed.
- Ensure that the mains supply (including voltage,

frequency and power) complies with the appliance's rating label.

- Do not use the appliance when it is wet or damp.
- Do not operate the appliance with wet hands.
- Do not use this appliance near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the appliance where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- This appliance is intended for indoor household use and similar applications. Never use outdoors.
- To avoid a circuit overload when using this appliance, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Avoid using extension leads where possible as they may

overheat and cause a risk of fire.

- Do not use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the appliance by the power cord.
- Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the appliance.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the manufacturer for further information.
- Do not operate the appliance if there are













any signs of damage to the appliance or accessories supplied.

- Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.
- Do not insert pins or sharp objects into the appliance.
- Always ensure the appliance is completely dry before connecting the controller and using the appliance.

#### SPECIFICATION


- Model: CH-EB-D04
- Voltage: 220-240V~
- Frequency: 50-60Hz
- Power: 60W x 2
- Product Dimensions: 160x137cm
- Net Weight: 1.85kg
- Gross Weight: 2.22kg
  
- Model: CH-EB-K04
- Voltage: 220-240V~
- Frequency: 50-60Hz
- Power: 60W x 2
- Product Dimensions: 160x150cm
- Net Weight: 2.05kg
- Gross Weight: 2.39kg

#### SYMBOLS EXPLAINED

SYMBOL	EXPLANATION
	For indoor use only.
	Read instruction manual.
	Equipment complies with the applicable UK safety requirements and regulations.
	Equipment complies with the applicable EU safety requirements and directives.
	Gentle cycle at a maximum of 30°C.
	Do not dry clean.
	Do not tumble dry.
	Do not bleach.
	Do not insert pins.
	Do not use folded.
	Do not iron.
	Not to be used by children ages 3 or younger.

## PARTS

1. Remote
2. Electric Blanket
3. Plug
4. Power Inlet
5. Elastic Fixing Straps

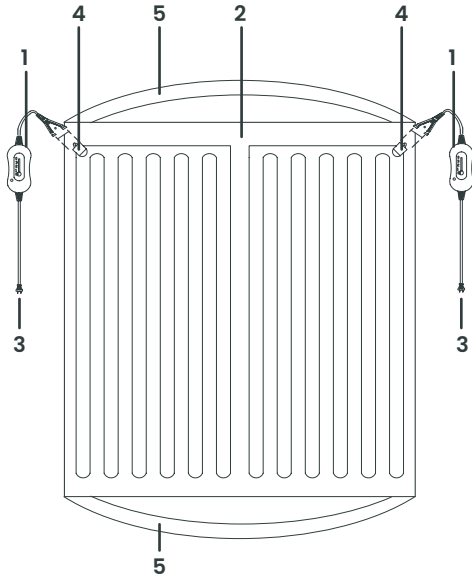

## FITTING INSTRUCTIONS

Always ensure the blanket is covered during use to retain heat.

1. Unfold the blanket and lay it on the bed above your mattress.
2. Align the blanket so the leads and controller sockets are by the pillows.
3. Use the elastic fixing straps to secure the electric blanket to the head and foot of your mattress.
4. Once the blanket is secure, connect the controller to the mattress by plugging it into the sockets.
5. Place the mattress protector and bottom sheet OVER the electric blanket. (For best results, electric blankets should be covered to retain heat).

**NOTE:** To accommodate your pillows, there will be a deliberate gap between the top of the electric blanket and the headboard of your bed.


## USING YOUR ELECTRIC BLANKET

Once the blanket has been securely fitted to the bed, plug the power lead into the closest socket at the pillow end. Use an extension lead where necessary to ensure the power cord is not stretched and cannot be tripped over.

Your electric blanket comes with two controllers. Each one controls two heating zones:

**Left side controller:** controls the heating zone for the left side of the bed.

**Right side controller:** controls the heating zone for the right side of the bed.

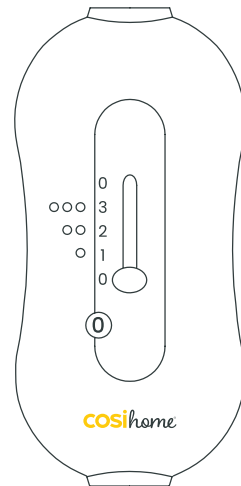

### Controller:

1. The number on the controller represents the following heat settings:

0 = OFF

1 = LOW HEAT

2 = MEDIUM HEAT

3 = HIGH HEAT

Move the slider on the controller to the desired heat setting to preheat your bed.

2. The blanket will start to heat after a few minutes providing it is covered with a duvet or blanket.
3. Allow 15-20 minutes for the blanket to begin warming up and approximately 60-90 minutes for the blanket to reach maximum temperature. This time will vary depending on the temperature of the room, the type of bedding used, and the thickness of the covering blanket or duvet.

**NOTE:** If using the blanket all night, use only low-level setting 1. This will provide a safe and comfortable temperature for all-night use.

## CLEANING YOUR ELECTRIC BLANKET

### Washing:

**WARNING: ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND ALLOW THE APPLIANCE TO COMPLETELY COOL DOWN BEFORE HANDLING OR CLEANING.**

**CAUTION: DO NOT CONNECT THE APPLIANCE TO THE POWER SUPPLY IN ORDER TO DRY IT. DO NOT DRY**

**THE APPLIANCE IN THE SUN OR USE AN IRON TO DRY IT AS THIS WILL DAMAGE THE INSULATION LAYER OF THE APPLIANCE.**

**CAUTION: ALWAYS DISCONNECT THE CONTROLLER AND THE POWER LEAD FROM THE APPLIANCE BEFORE WASHING. DO NOT ALLOW WATER OR OTHER LIQUIDS TO COME INTO CONTACT WITH THE REMOTE CONTROL OR THE MAINS POWER PLUG.**

**CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.**

- Prior to washing, it is essential to measure the blanket to ensure it has returned to its original size after washing.
- When hand washing, use a mild washing powder or detergent and warm water. Soak for 5 minutes and gently wash and rinse thoroughly in clean water.
- Always disconnect the controller and power lead from the appliance before washing.

- Do not attempt to clean the electric blanket in any other way than that detailed by the manufacturer.
- For machine washing wash as wool at 30°C.

## Drying

- We recommend air-drying your electric blanket.
- Do not peg on the wired areas of the blanket as this will damage the internal circuit.
- Always ensure the blanket is 100% dry and has returned to its original size before use.
- Never wring the blanket.

## Storage



- When storing the appliance allow it to cool down before folding.
- Do not crease the appliance by placing items on top of it during storage.
- Do not expose the controller or power lead to any moisture.
- The appliance is equipped with a detachable controller. Ensure the controller is

disconnected from both the mains power and the appliance and left in a safe, dry place, out of reach of children.

- To store your product, we recommend using the original or a similar sized box.

## RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators, and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	<b>Waste Electrical and Electronic Equipment (WEEE)</b>	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	<b>The Mobius Loop</b>	This symbol indicates that the product or packaging is capable of being recycled.

### Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit [www.cosihome.com](http://www.cosihome.com)

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

**cosi**home®

One Retail Group, Ryland House,  
24a Ryland Road, London, NW5 3EH, United Kingdom

EU Authorised Representative: Brandrep Limited,  
The Black Church, St Mary's Pl N, Dublin, D07 P4AX, Ireland

[www.cosihome.com](http://www.cosihome.com)

© Copyright 2023