 


cosihome®

INSTRUCTION MANUAL

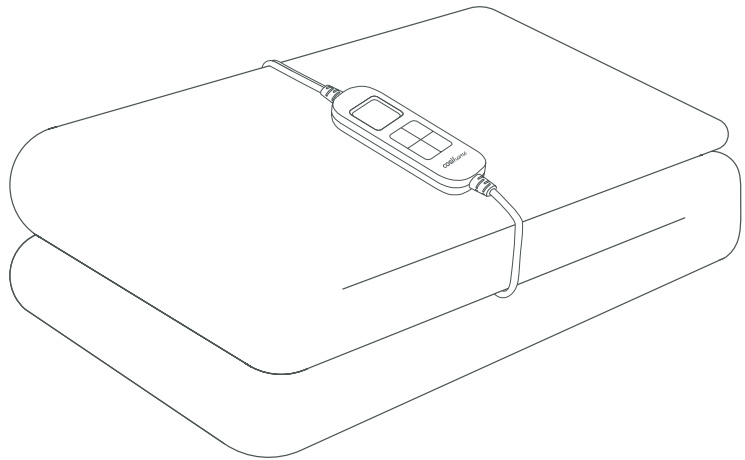

MODEL CH-HT-D06

Heated Throw

IMPORTANT INSTRUCTIONS
- RETAIN FOR FUTURE USE

CONTENTS

EN	Safety Instructions.....	Page 3
	Specification.....	Page 6
	Symbols Explained	Page 6
	Controller	Page 7
	Using Your Throw	Page 8
	Cleaning Your Heated Throw	Page 8
	Frequently Asked Questions.....	Page 9
	Error Codes.....	Page 10
	Recycling and Disposal.....	Page 11



Thank you for choosing to purchase a product from Cosi Home. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

If you have any issues with this product, please contact our customer service, help@cosihome.com

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

WARNING: Keep your heated throw away from fire or flammable materials.

WARNING: To avoid the risk of electrical shock, fire, or injury to people, always make sure the appliance is unplugged from the electrical outlet before relocating, servicing, or cleaning it.

CAUTION: Prolonged use of the heated throw at a high-temperature setting could lead to skin burns. Do not use for extended periods of times.

CAUTION: If you feel unwell while using your heated throw, turn off the appliance immediately.

- Use the appliance only as described in this instruction manual.
- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- This appliance is suitable for indoor use only.
- This appliance is not a toy. Never leave unattended around children or pets.
- This appliance can be used by children aged from eight years above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and all parts out of the reach of children.
- This appliance is not suitable for children under the age of 3. Children under the age of 3 must not use the appliance as they are unable to react in the event of overheating.

- Do not operate the appliance with wet hands.
- Do not pull the power cable or the appliance itself to remove the plug from the socket or to turn the appliance off.
- Do not unplug the appliance until it has been switched off.
- Do not place the controller under pillows or between bed sheets or bed covers when the appliance is connected.
- Do not tuck the appliance in.
- Do not use a hot water bottle at the same time as using the appliance.
- Do not use the appliance to keep animals warm.
- Do not insert pins or needles.
- Do not leave the appliance unattended whilst connected to the power supply.
- Do not modify the appliance or use any accessories other than those supplied.
- Ensure that the mains supply (including voltage, frequency and power) complies with the rating label of the appliance.
- The appliance is only to be used with the power adapter provided. Do not use other chargers or power adapters as this may damage the product and battery.
- Examine the appliance frequently and return to the supplier if has been misused or damaged.
- Do not place or use the appliance, power cord, or any accessories in a bathroom, wet, or damp place.
- Do not cover the appliance whilst in use.
- Do not use pressurised containers (e.g. aerosol cans) or other flammable substances near the appliance.
- Do not use the appliance near petrol, flammable gases, ovens, or other heating sources.
- Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.
- Do not operate the appliance if there are signs of damage to the appliance, power cord, or any of the accessories.
- Do not wipe or wash the appliance with chemical solvents. Prior to cleaning ensure the appliance is turned off and unplugged from the power supply.
- Do not dry clean the appliance.
- The appliance must be used solely with the types of controller supplied with the appliance and indicated on the label.
- Avoid pressing creases into the appliance.
- Avoid placing the power cord in areas where it can become a tripping hazard.
- Avoid using extension leads where possible as they may overheat and cause a fire risk.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the power supply.

- Using this appliance over extended periods of time can result in skin irritation or burns.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not use by persons insensitive to heat and other very vulnerable persons.
- Do not use folded or rucked.
- Do not use if wet.
- Do not crease the appliance by placing items on top of it during storage.
- Examine the appliance frequently and prior to use after storage.
- Not intended for medical use in hospital.
- Always unplug the appliance when not in use.
- Do not immerse the appliance in water
- Do not use this appliance on any parts of the body that are swollen, injured or inflamed.
- If you have any medical conditions or concerns, consult your doctor before using this appliance.
- If you experience persistent muscle or joints pain, please inform your doctor.
- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that excess ties and electric cords shall be arranged in a safe way.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Never leave the appliance unattended while in use. Always turn the appliance off and disconnected from the power supply when not in use.
- Do not use the appliance when it is wet or damp.
- Do not use this appliance near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the appliance where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- Do not use the appliance while sleeping or place it near a person who is sleeping.
- This appliance is intended for indoor household use and similar applications. Do not use outdoors.
- To avoid a circuit overload when using this appliance, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the appliance by the power cord.

- Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the appliance.
- Do not operate the appliance if there are any signs of damage to the appliance or accessories supplied.

SPECIFICATIONS


- Model: CH-HT-D06
- Voltage: 220-240V~
- Frequency: 50Hz
- Power: 120W
- Product Dimensions: 150 x 200cm
- Net Weight: 1.75kg
- Maximum Temperature: 50°C

SYMBOLS EXPLAINED

	For indoor use only		Please read instruction manual and retain for future use
	Equipment complies with the applicable UK safety requirements and regulations		Equipment complies with the applicable EU safety requirements and regulations
	Gentle cycle at a maximum of 40°C		Do not tumble dry
	Do not dry clean		Do not bleach
	Do not iron		Do not insert pins
	Not to be used by children ages 3 or younger		Do not use folded
	Class II Double Insulated / Reinforced Insulation Equipment		


CONTROLLER

 This heated throw is designed to keep you warm using the heat control and timer settings on the controller.

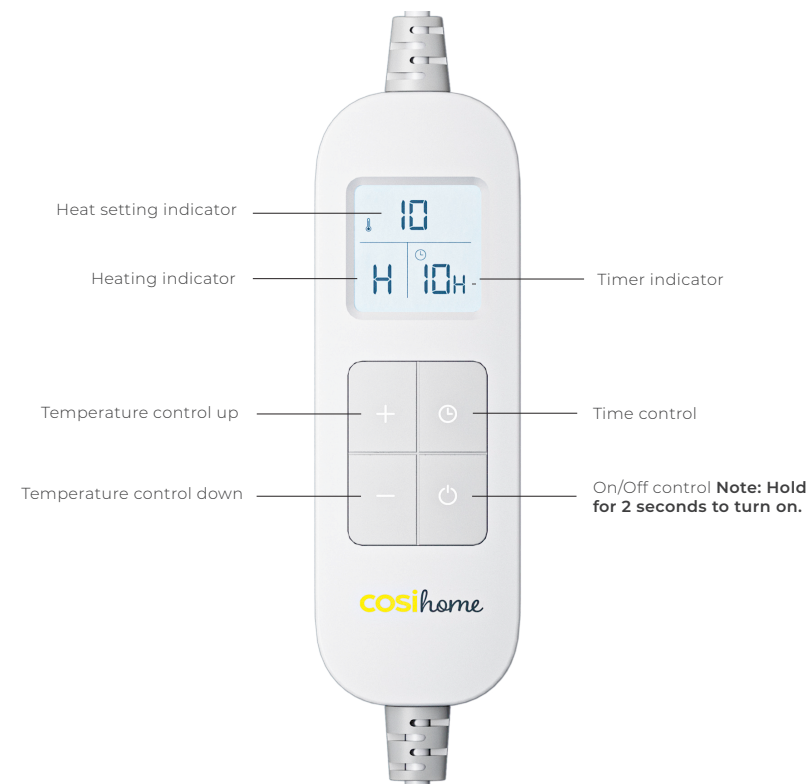


WARNING: DO NOT leave the remote control underneath the throw, wrapped in the throw or on the throw while it is turned on.

 You heated throw is fitted with overheat protection. If your controller gets too hot, the heated throw will turn off and the remote will display 'C'. Turn the remote control off. Place the remote so that no part of it touches the blanket and wait for it to cool down. When the blanket and remote control have cooled down you can turn the product back on again.

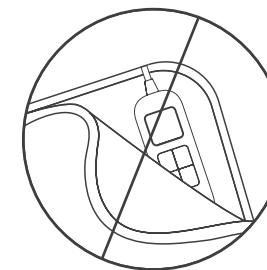

USING YOUR THROW

 Getting Started

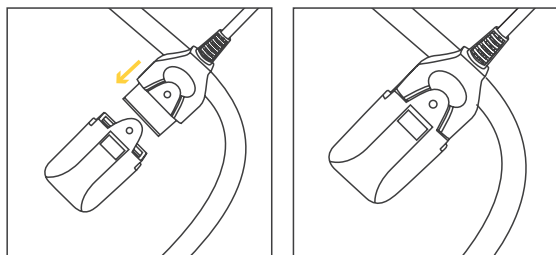

Ensure the remote connector is securely connected to the heated throw. (As shown above).

Note: Make sure the remote is connected to the throw before plugging it into a socket. If you see a 'P' error on the remote, unplug the throw from the socket, connect the throw to the remote as shown above, then plug it back in.

Turning on

1. Plug the power lead into the closest socket.
2. Hold the On/Off Button down for **two seconds** to turn the heated throw on. The timer and heating number will illuminate.
3. Press the Temperature up and down buttons to choose your preferred heat setting.

Preheating

It is recommended for the heated throw to be preheated for at least 30 minutes before use.

Setting the correct temperature

Press the Temp button, the heat settings will change on the left of the controller display. Keep pressing the Temp button until you reach the desired heat setting. The temperature settings range from '1' being the lowest to '10' being the highest.

NOTE: If the heated throw runs on heat settings 5-10 for 3 hours it will automatically change to heat setting 4.

Setting a timer

When the heated throw is turned on it is automatically set on a 1-hour timer.

Press the Time button to set a timer for up to 10 hours. By continually pressing

the Time button you will cycle through the time options in 1 hour increments. Once you have reached your desired time setting, the controller will start the timer.

After the desired time has elapsed, the heated throw will switch to standby mode, show '- -' on the screen and stop generating heat.

To restart the heated throw after the timer has elapsed, press the On/Off button once to turn the unit off. Then hold down the On/Off button for 2 seconds to turn the unit on.

CLEANING YOUR HEATED THROW

WARNING: Always turn the appliance OFF, unplug the power cord from the electrical outlet and allow the appliance to completely cool down before handling or cleaning it.

CAUTION: Do not connect the appliance to the power supply in order to dry it. Do not dry the appliance in the sun or use an iron to dry it as this will damage the insulation layer of the appliance.

 
CAUTION: Do not use any abrasive cleaners or solvents, as this can damage the appliance.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.

Important note: The Cosi Home heated throw can be washed but NEVER dry cleaned.

Washing:

- ALWAYS DISCONNECT THE CONTROLLER AND POWER LEAD FROM THE HEATED THROW BEFORE WASHING.
- When hand washing, use a mild washing powder or detergent and warm water. Soak for five minutes and gently wash and rinse thoroughly in clean water.
- For machine washing, wash on a gentle cycle at a maximum of 40°C.

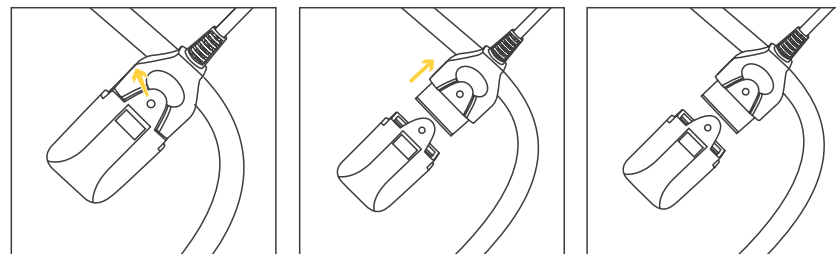

Drying:

- We recommend air-drying the heated throw.
- Do not peg on the wired areas of the heated throw as this will damage the internal circuit.
- Never wring the heated throw out.
- Always ensure the heated throw is 100% dry and has returned to its original size before use.

Storage (For long term storage):

 
- Remove the power cable from the power socket.
- Remove connector two from connector one.
- Allow the heated pad to cool down before folding.
- Do not crease the heated pad by placing items on top of it during storage.
- Cover the heated pad, heated pad cover, controller and power cable with a water proof covering.
- Store in a safe, dry place, out of reach of children.
- Examine the appliance frequently and prior to use after storage.
- To store your product, we recommend using the original or a similar-sized box.

FREQUENTLY ASKED QUESTIONS

Can I leave my throw to heat up before I use it?

- Yes, you can leave your throw to heat up before use. If you leave your throw at any point while it is turned on, please leave it completely open on a flat surface.

CAUTION: Do not leave your throw folded or crumpled, whilst it is turned on.

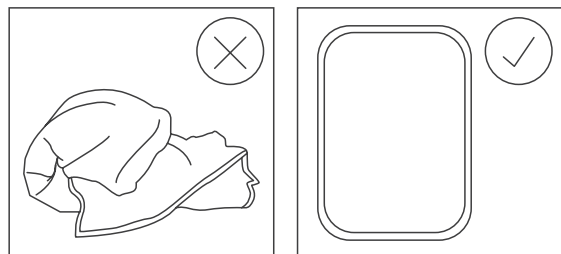

My throw's remote control is displaying 'C', 'E', or 'P', what does this mean?

- Please refer to the 'Error Codes' section of this manual.

My heated throw got wet, what do I do?

- Disconnect the controller and power lead from the heated throw. Refer to the 'Cleaning Your Heated Throw' section of this manual.

ERROR CODES

ERROR CODE	CAUSE	SOLUTION
C	The controller has been placed under the throw and it has overheated. As a safety measure, the heated throw has turned off.	Turn the controller OFF, unplug the heated throw, lay it down completely flat and leave to cool down.
E	The throw has been used while folded or crumpled and it has overheated. As a safety measure, the heated throw has turned off.	Turn the controller OFF, unplug the heated throw, lay it down completely flat and leave to cool down.
P	The controller is not properly connected to the throw.	Unplug the throw from the socket, make sure the remote connector is properly connected to the throw (see getting started section), and then plug the throw back into the socket.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.



The Mobius Loop

This symbol indicates that the product or packaging is capable of being recycled.



Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.cosihome.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

cosihome®

One Retail Group, Ryland House,
24a Ryland Road, London, NW5 3EH, United Kingdom

EU Authorised Representative: Brandrep Limited,
The Black Church, St Mary's Pl N, Dublin, D07 P4AX, Ireland

www.cosihome.com

© Copyright 2023