
















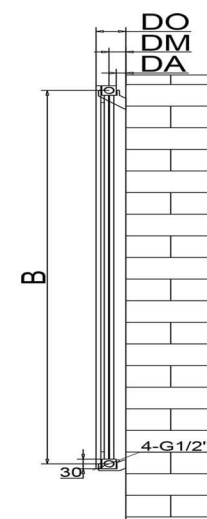 
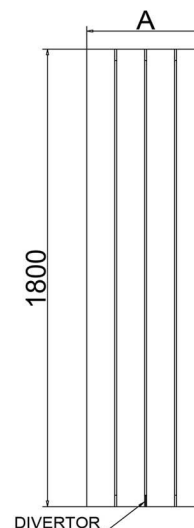 


PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

Description	Illustration	Qty
Radiator		1
Top Bracket		2
Bottom Bracket		2
Fixing Screw		4
Spacer		4
Air Vent		2
Vent cover		2

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropriate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	



This picture represents appearance look of a radiator.

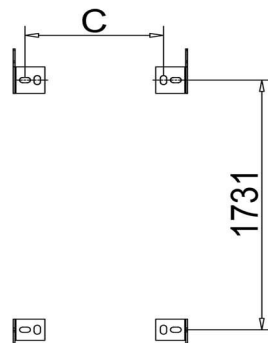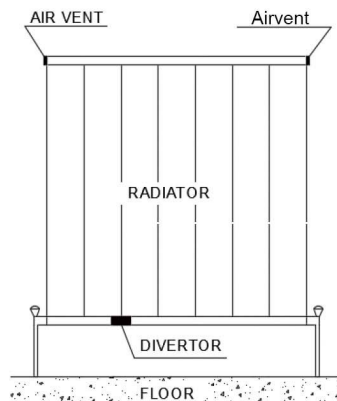  

NAMES		A	B	C	TUBE QTY	DA	DM	DO
A-PTO180029SA	1800	295	1770	112.5	4	20	35	62
A-PTO180029SW	1800	295	1770	112.5	4	20	35	62
A-PTO180037SA	1800	370	1770	187.5	5	20	35	62
A-PTO180037SW	1800	370	1770	187.5	5	20	35	62
A-PTO180044SA	1800	445	1770	262.5	6	20	35	62
A-PTO180044SW	1800	445	1770	262.5	6	20	35	62
A-PTO180052SA	1800	520	1770	337.5	7	20	35	62
A-PTO180052SW	1800	520	1770	337.5	7	20	35	62
A-PTO180059SA	1800	595	1770	412.5	8	20	35	62
A-PTO180059SW	1800	595	1770	412.5	8	20	35	62




GENERAL RECOMMENDATION


- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-9,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.

PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

Description	Illustration	Qty
Radiator		1
Top Bracket		2
Bottom Bracket		2
Fixing Screw		4
Spacer		4
Air Vent		2
Vent cover		2

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropriate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	

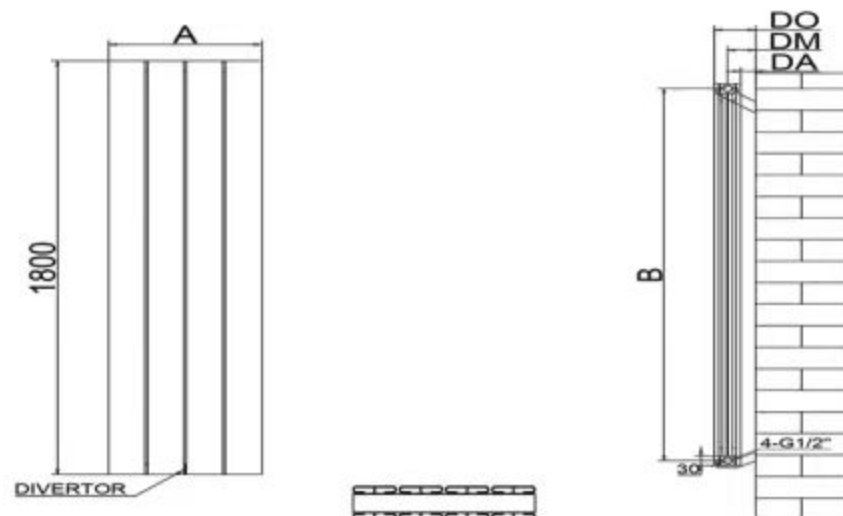 

This picture represents appearance look of a radiator.

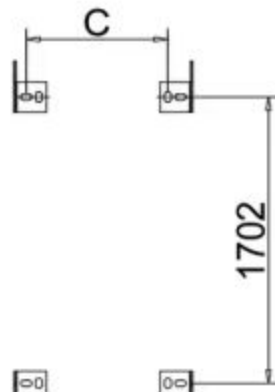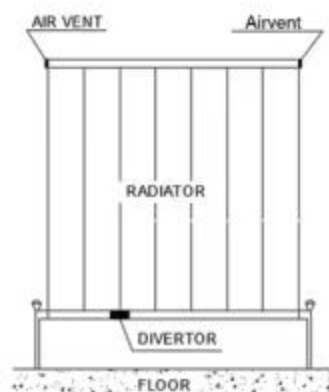  

NAMES		A	B	C	TUBE QTY	DA	DM	DO
A-PTO180029DW	1800	295	1770	112.5	4	30.5	57	83.5
A-PTO180029DA	1800	295	1770	112.5	4	30.5	57	83.5
A-PTO180037DA	1800	370	1770	187.5	5	30.5	57	83.5
A-PTO180037DW	1800	370	1770	187.5	5	30.5	57	83.5
A-PTO180044DA	1800	445	1770	262.5	6	30.5	57	83.5
A-PTO180044DW	1800	445	1770	262.5	6	30.5	57	83.5
A-PTO180052DA	1800	520	1770	337.5	7	30.5	57	83.5
A-PTO180052DW	1800	520	1770	337.5	7	30.5	57	83.5
A-PTO180059DA	1800	595	1770	412.5	8	30.5	57	83.5
A-PTO180059DW	1800	595	1770	412.5	8	30.5	57	83.5

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-9,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 90°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.