

# P2V ULTRA Firmware Update

- 1 First, download the Firmware file here and save it to your desktop




sf\_IMX258\_I  
PVEO\_v0017  
\_20240220.e  
xe


↓ Click Here

- 2 Connect P2V ULTRA to Windows PC or laptop via USB cable (DO NOT support MAC )


- 3 Open the FW file and click Update, until the Success appears, indicating that the update is complete.

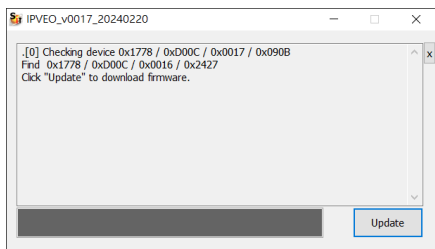

Open the file and run it.

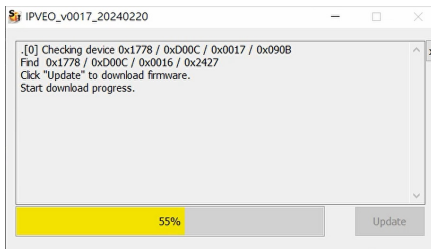

In progress

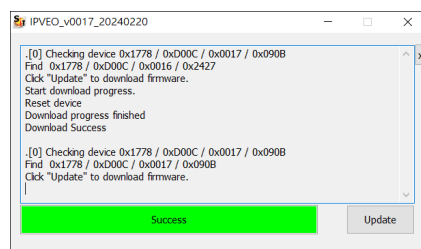

Update complete

- 4 Check FW version with IPEVO Visualizer application.

