PRIME X CRITICAL

PRIME TO BE TO SERVICE TO SERVICE

WWW.PRIMETATTOOSUPPLY.COM

@PRIMETATTOOSUPPLYCO

VIDEO TUTORIAL

SCAN QR CODE FOR VIDEO LINK
WWW.YOUTUBE.COM/@KINGPINTATTOOSUPPLY



VISIT OUR SOCIAL

O @PRIMETATTOOSUPPLYCO












SINGLE SET INCLUDES:

- (1) PRIME Machine
- (1) PRIME 2000mAh Battery
- (1) 2FT USB-C Charging Cable
- (1) PRIME Tool

BUNDLE SET INCLUDES:


- (1) PRIME Machine
- (2) PRIME 2000mAh Battery
- (1) 2FT USB-C Charging Cable
- (1) PRIME Tool
- (1) Magnetic RCA Converter
- (1) 2-Port Critical Docking Station w/ 6ft Charging Cable & Wall Adapter
- (1) 34mm Prime Disposable Grip
- (1) Sample Set of PRIME Needle Cartridges 5RL / 7RL /9M /9CM

HOW TO CHARGE:

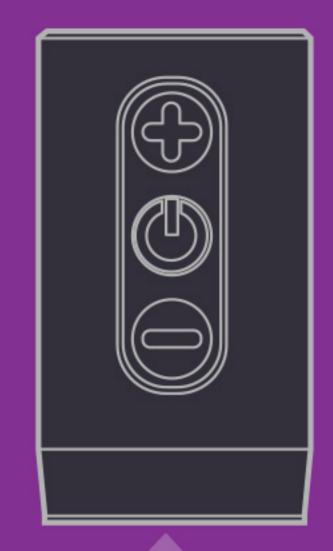

DOCKING STATION

Place PRIME Battery into Docking Station & plug USB-C charging cable/wall adapter to power source

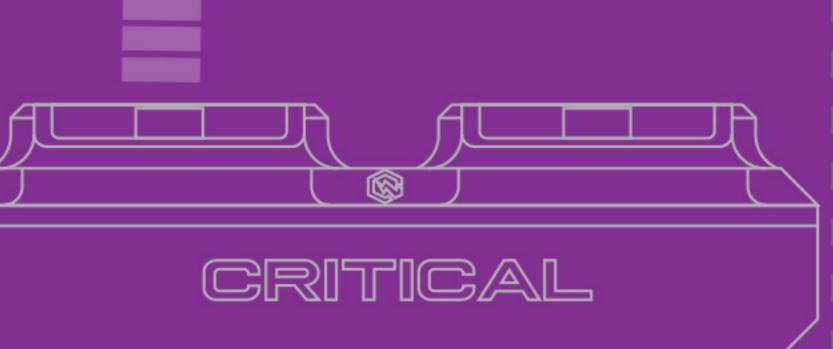


*PRIME Battery can be charged directly to USB-C cable




*Refer to VIDEO QR for instructions

PLUNGER HOUSING (SECTION VIEW) —

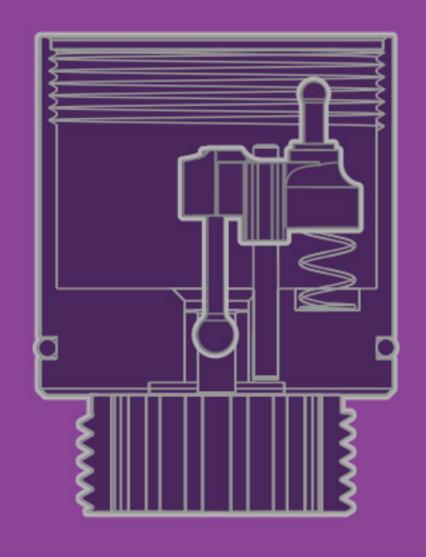


HOW TO DISASSEMBLE:

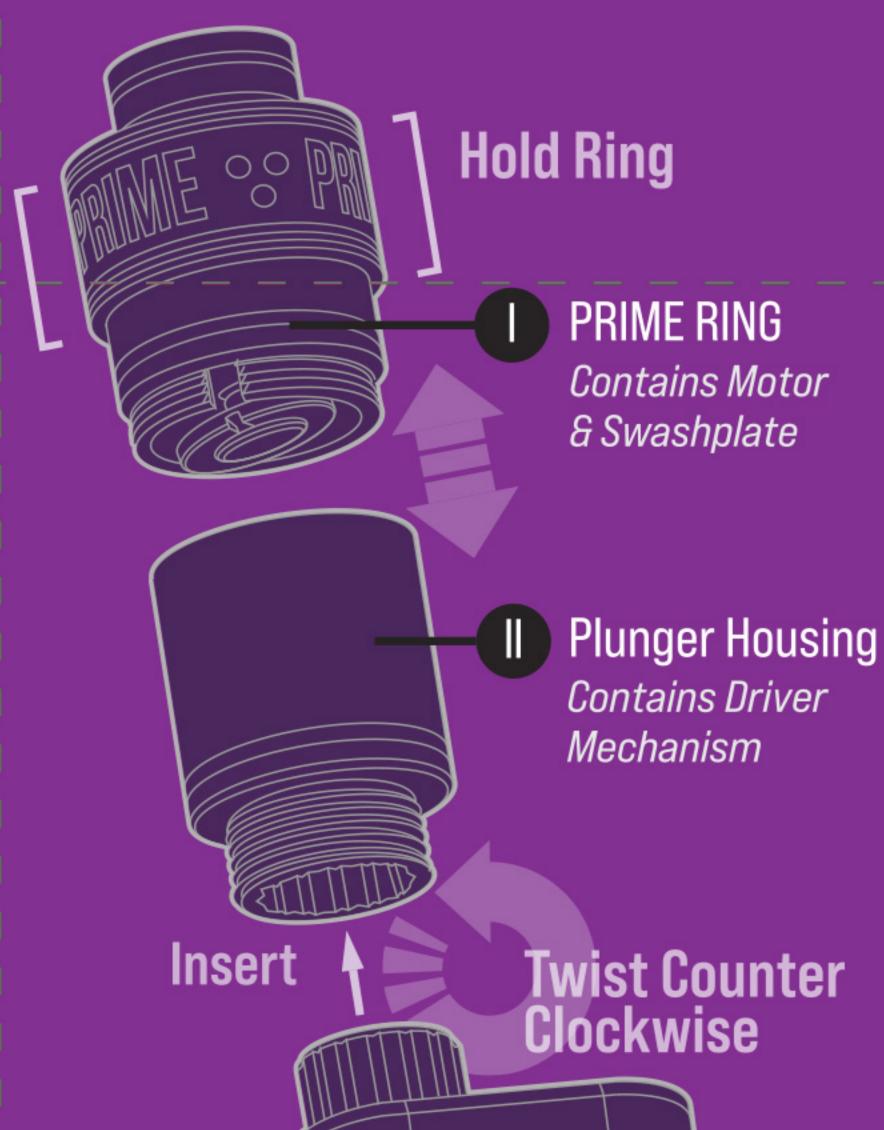

PRIME TOOL

Special tool required to disassemble and reassemble machine

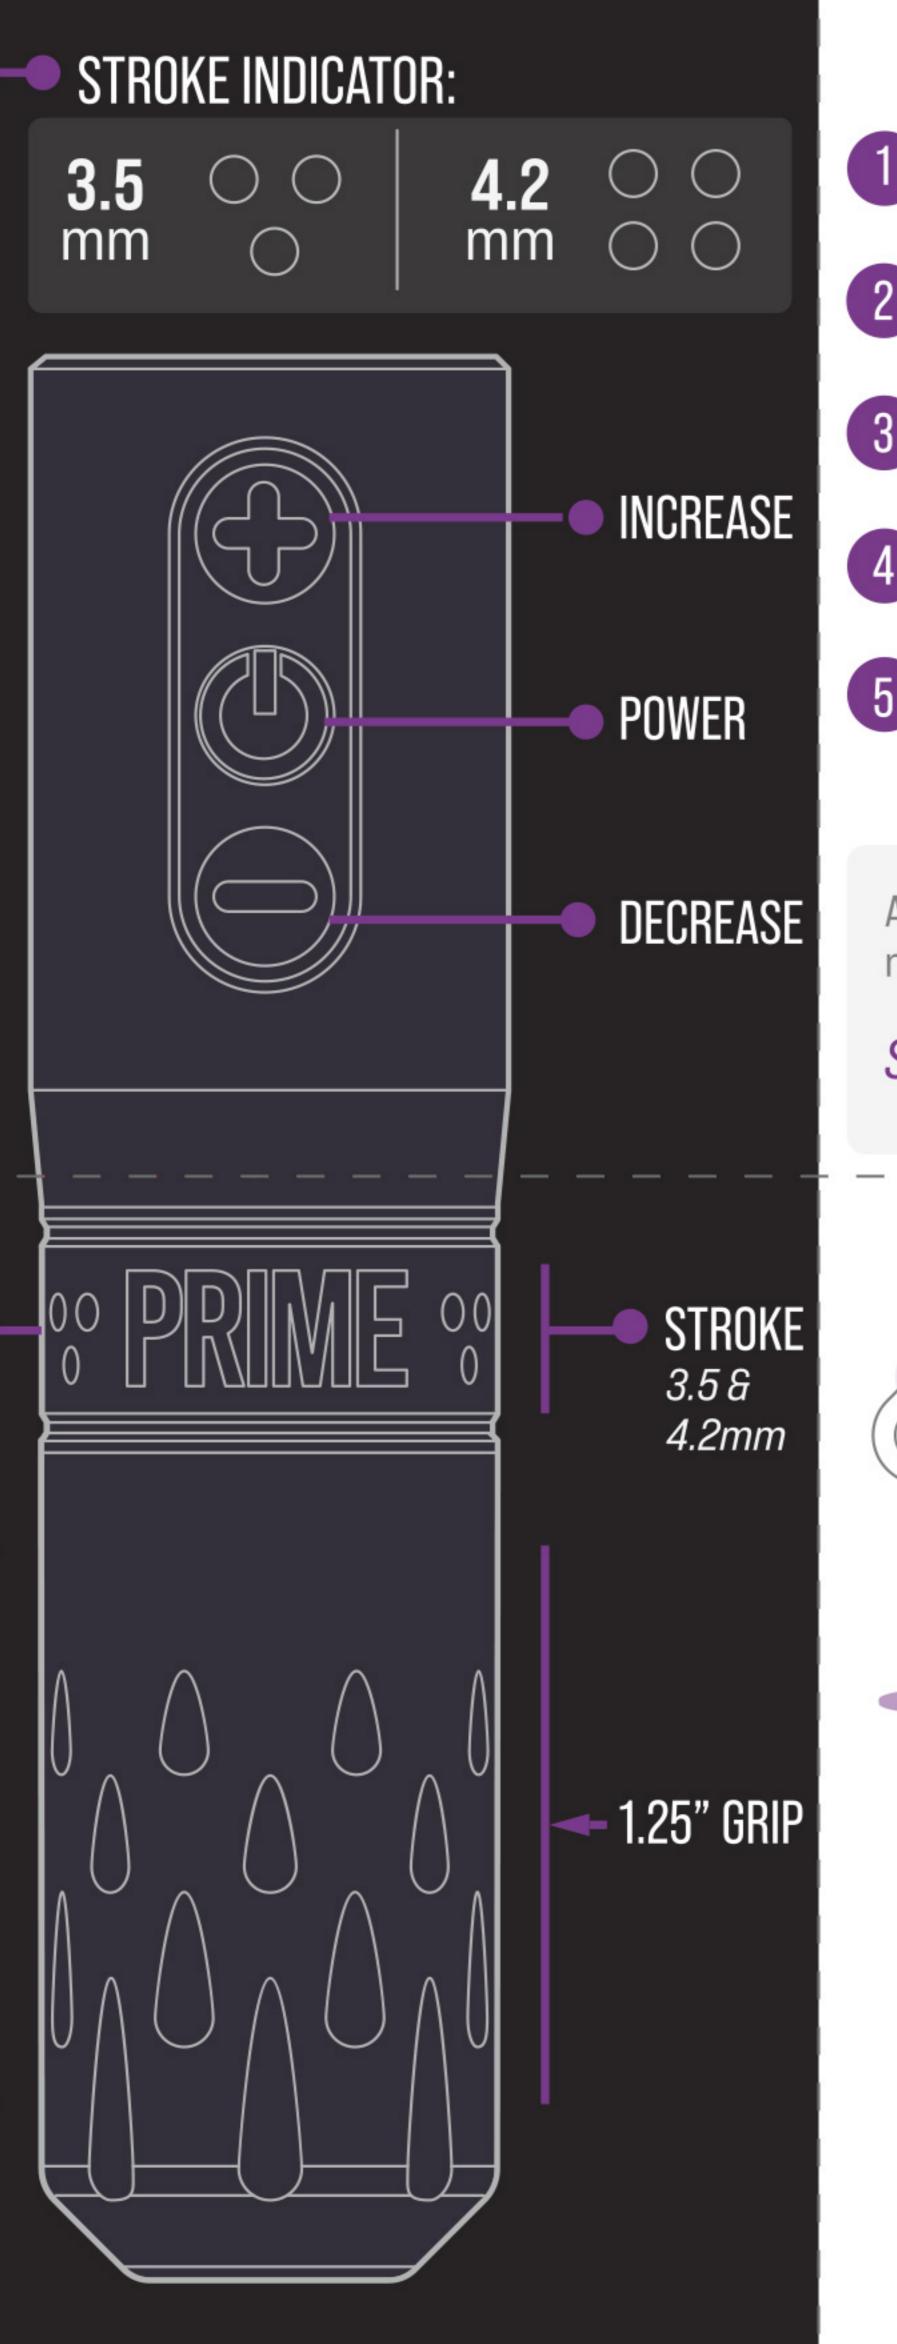

HOW TO USE:

- Attach PRIME battery to machine
- Turn Device ON: Hold power button for 3 seconds
- Select desired voltage by using +/- button
- Start device: Click power button once
- 5 Turn OFF: Hold power button for 3 seconds

Activate Jump Start mode if the needles are not moving when you turn on the machine.


Simultaneously click








INTERCHANGEABLE BATTERY

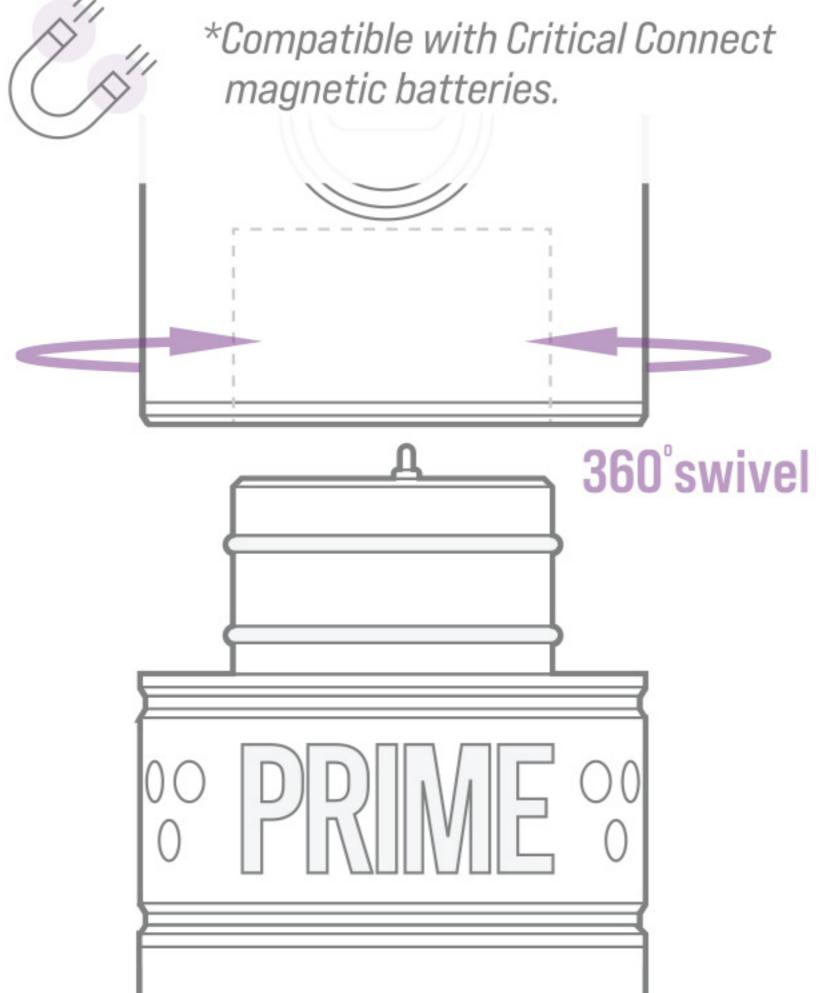

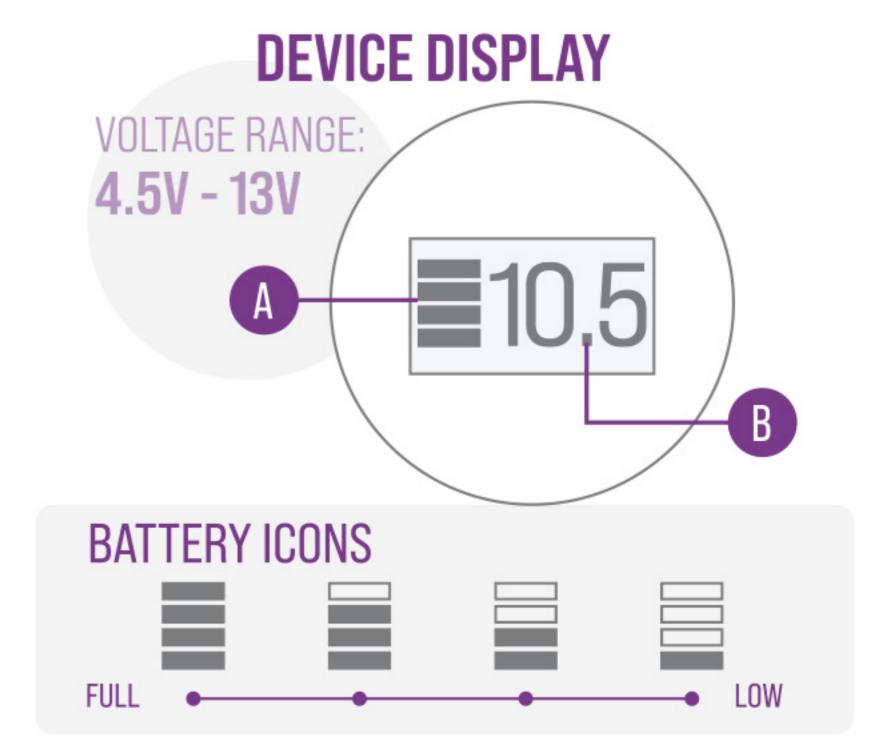

- **BATTERY INDICATOR** At 5% charge, a low battery icon appears with 2 separate beeps.
- **OUTPUT INDICATOR** Flashing decimal point informs user device is in use

