



QUICK START GUIDE

TABLE OF CONTENTS

FEATURES	3
GRIP OPTIONS	4
POWER ATTACHMENTS	5
BATTERY BASICS	6
DISPLAY LAYOUT	7
SETTINGS MENU	8
SETTINGS DEFINED	9
SESSION RUN MENU	10



FEATURES

1.5" COLOR DISPLAY

Upgraded V3 Battery

INDUSTRY FIRST

Precision Strike Technology

3.5 STROKE

Green Housing

4.2 STROKE

Black Housing

DIMENSIONS

34mm (1.33") x 131mm (5.15") 37mm (max battery width)

OVERALL WEIGHT

6.2 oz (pen, battery, 34mm grip)

VIBRATION
DAMPENING
SOLUTION

GRIP OPTIONS



POWER ATTACHMENTS



BATTERY BASICS



VIDEO TUTORIAI

LARGE CAPACITY BATTERY

Up to 15 hours of tattooing *



HOME

POWER ON/OFF: 3 Second Hold

SELECT OR OUTPUT POWER: 1 Click

HOME STANDBY MODE: Double Click to Enter/Exit'

USB-C CHARGING POINT

^{*} tattoo duration could change due to battery charge and voltage usage.

DISPLAY LAYOUT



SETTINGS MENU

Settings

Critical Connect: OFF

Jumpstart: OFF

Pedal Mode: CONT

Timer Mode: VIS

Billing Mode: SESS

Hourly Rate: \$0

Button Layout: RT

Product Information

Settings

Critical Connect: ON
Jumpstart: ON
Pedal Mode: MTRY
Timer Mode: HID
Billing Mode: RUN
Hourly Rate: \$0000
Button Layout: LFT
Product Information

(DEFAULT SETTINGS)

(ALTERNATE SETTINGS)

COMMAND	BUTTONS	ACTION
TO ENTER SETTINGS MENU FROM MAIN MENU	L1) + R1	3 SEC HOLD
SCROLL UP	L1 OR R1	
SCROLL DOWN	L2 OR R2	1 - CLICK
BACK BUTTON OR RETURN TO MAIN MENU	CRITICAL	2 - CLICK

SETTINGS DEFINED

CRITICAL CONNECT:

Connect or Disconnect from Bluetooth (Critical Connect Footswitch Required)

JUMPSTART:

Turn Jumpstart On or Off

PEDAL MODE:

If using a footswitch, you can change your output mode on the pedal to either continuous or momentary power.

TIMER MODE:

You can make your Run/Session timer visible on the main menu or hide it with a play/pause symbol.

BILLING MODE:

If you want to track your session time and/or hourly rate, you can do so two ways. The Session timer will record the entire session from when you manually start the timer and pause it, like a stopwatch. The Run timer will record only when the battery is active and outputting power.

HOURLY RATE:

You can update your hourly charge rate here.

BUTTON LAYOUT:

You can switch your primary buttons to either the Left or Right side to change the voltages.



Critical Connect: ON

Jumpstart: ON

Pedal Mode: MTRY

Timer Mode: HID

Billing Mode: RUN

Hourly Rate: \$0000 Button Layout: LFT

Product Information

SESSION RUN MENU



Session Rate

000:00 \$0000

HOURS : MINUTES

TIME X HOURLY RATE = SUM Run Rate

000:00 \$0000

** Run Rate occurs when machine indicates the battery is outputting power.

COMMAND	BUTTONS	ACTION
TO START/PAUSE TIMER (SESSION MODE ONLY) - WHILE ON THE MAIN PAGE	(L2) + (R2)	1 - CLICK
TO ENTER 'SESSION/RUN MENU' FROM MAIN PAGE	(L2) + (R2)	3 SEC HOLD
TO CLEAR OR RESET THE TIMER - WHILE IN THE SESSION/RUN MENU	(L2) + (R2)	3 SEC HOLD
TO EXIT SESSION/RUN MENU TO RETURN TO MAIN PAGE	CRITICAL	2 - CLICK

POWER TO THE ARTIST®





WWW.CRITICALTATTOO.COM

f 0 @criticaltattoosupply

EMAIL: INFO@CRITICALTATTOO.COM

DESIGNED IN CALIFORNIA | MADE IN CHINA

US PATENT 10471246, 202030724065.7, 29/736,884 AND OTHER US PATENTS PENDING

AU PATENT 2019359618 AND OTHER AU PATENTS PENDING

CN PATENT 202030297770.3 AND OTHER CN PATENTS PENDING

EU PATENT 008363311-0002 AND OTHER EU PATENTS PENDING

CA PATENTS PENDING





PHONE: 877-271-1446







FCC ID: 2A3ORCTC-CV3:

Applicable SKU: CTC-TFS-35, CTC-TFS-42, CTC-TSM-35, CTC-TSM-42

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be deter mined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction