



# BATTERY PACK



### **BATTERY PACK**



Votage Range 4.5V - 13V

Weight: 2.1 oz Length: 2.19" Diameter:1.45"

### **ENHANCED WITH** CRITICAL CORE



### PRECISE VOLTAGE

No "Sag" in voltage drop during any part of the tattoo session



#### LOW BATTERY INDICATOR

At 5% charge life, a low battery icon is displayed along with a beep for 5 seconds at every minute



### **OUTPUT INDICATOR**

Flashing decimal point informs user device is in use



#### TEMPERATURE PROTECTION

Power shuts off if temperature ever reaches at unsafe levels (176°F)



### CRITICAL CORE

Smart & accurate



#### VERSATILE CHARGE CONNECTION

Easy charge connection with any USB-C connection

### **HOW TO USE:**

- Attach power pack to tattoo machine
- Turn device on by holding power button 3 seconds
- Select desired voltage by using +/- button
- Start device by clicking power button1 time
- 5 Stop device by clicking power button 1 time
- Turn device off by holding power button 3 seconds

### OLED SCREEN

#### WHEN CHARGING

Screen will remain on while charging, will display battery status


Screen will idle once fully charged after 60 seconds

### CHARGING

Use USB Type C Connector

Universal Battery Dock (Sold Separately)

## HOW TO PAIR BATTERY TO FOOT SWITCH

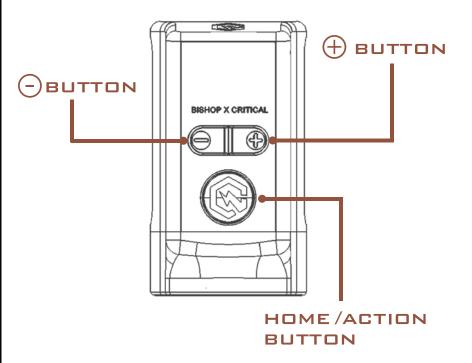

- Any Critical Connect Battery (up to 4)
- 1x Critical Connect Foot Switch



# TO ACCESS BLUETOOTH MENU

- 1 Hold both and Hold Buttons for 3 seconds to enter Bluetooth Menu
- 2 Click (+) 1 time for Search Mode
- Quickly tap Foot Switch (sold separately)1 time to pair with battery pack
- 4 Click Button 🕲 1 time to return to Home Menu

### **BLUETOOTH MENU SYMBOLS**



**NOT PAIRED** 



**SEARCH MODE** 




**DEVICE NOT FOUND** 



**BLUFTOOTH PAIRED** 

## HOME SCREEN BATTERY TO FOOT SWITCH

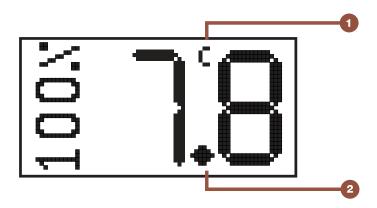

- CRITICAL CONNECT INDICATOR
  "C" Symbol will be visible on home screen when battery is paired with Foot Switch
- MOMENTARY/CONTINUOUS MODE Click both the and once to toggle between modes on the Foot Switch
  - Solid decimal for continuous
  - Hollow decimal for momentary

## **HOW TO PAIR**

### MULTIPLE BATTERIES



- Pair 1st battery to Foot Switch
- 2 Double click 🕲 to enter "standby" mode
- Turn on or exit standby by double clicking ( on 2nd device
- Pair 2nd battery to Foot Switch

Pair and switch between up to 4 batteries and 1 Foot Switch

Only 1 battery can be operated at a time per Foot Switch. All batteries not in use should be on standby mode or off.

## **COMPATIBLE PRODUCT**

(SOLD SEPARATELY)

## FOOT SWITCH



## **COMPATIBLE PRODUCT**

(SOLD SEPARATELY)

## BATTERY DOCK



## VIDEO TUTORIAL



SCAN QR CODE FOR VIDEO LINK



# POWERED BY CREATIVE FORCES









US PATENT 10471246, 29/736,884 AU PATENT 2019359618 CN PATENT 202030297770.3 CA PATENT 196581 Additional US, AU, CN, CA, EU Patents Pending