

## Hidden Deck Fastening System • Installation Instructions – CAMO™ Marksman Pro™

With the CAMO HIDDEN DECK FASTENING SYSTEM (CAMO System), you create a beautiful, fastener-free deck surface using any treated wood, hardwood, cedar, composite or PVC deck board.

The CAMO Marksman Pro is used to guide the CAMO screw into the side of the deck board into the joist. It can be used on any nominal 1" x 6" solid deck board. No pre-drilling is necessary, and the Marksman Pro provides automatic 3/16" spacing between deck boards.

Before beginning installation of your deck, you will need the following:

- CAMO Hidden Fasteners
- CAMO Driver Bit (included with CAMO Hidden Fasteners)
- CAMO Marksman Pro Tool
- Drill (set drill speed to highest setting for maximum driving efficiency)
- Optional: "L brackets" or 2-1/2" x #7 Pro-Fit® Platinum Series Trimhead Screws (for starter board)

### CAMO MARKSMAN PRO SCHEMATIC:



### ADJUSTING THE TOOL:



**Adjust the CAMO Marksman Pro to fit the boards you are using:** Loosen the thumb dial at the rear of the tool to adjust the CAMO spacer teeth to fit the width of your deck boards. The middle setting fits most standard nominal 1" x 6" deck boards.

### STARTER BOARD:

To begin deck installation, lay your first deck board (the starter board) in position. If the starter board runs parallel to the house or other structure, it may be necessary to face fasten the board. If so, we recommend using 2 1/2" Pro-Fit® Platinum Series premium trim head screws.

**TIP:** You can secure the starter board in several ways:

- (1) face fasten the first board or board and a half
- (2) face fasten only the edge adjacent to the house/structure - to do this, lay out the location for the CAMO fasteners that will be driven TOWARD the house/structure; with the Marksman Pro tool in place on one end of the starter board, maintain slight downward pressure on the Tool Handle. Load one CAMO screw into the screw guide. No pre-drilling is necessary. Prestart the screw about 1/2 inch into the board; squeeze the Trigger Handle to remove the Marksman Pro; continue the length of the board; position the deck board with the pre-started screws on the outside edge; with the board snug to the house/structure, finish driving the CAMO screws. Finish the board by face fastening the inside edge of the board
- (3) avoid face fastening by using "L brackets" to fasten the starter board from below the deck to the joists.

Once you have secured the starter board, proceed with installing the remainder of the deck boards using the CAMO System.

### SET:



Beginning on one end of the deck board, squeeze the Trigger Handle of the Marksman Pro and set the tool over the deck board. Release the Trigger Handle allowing the Spacer Teeth to contract and grip the deck board.

With the CAMO Marksman Pro tool in place on deck the board, maintain slight downward pressure on the tool and push the deck board snugly against the starter board. Make sure that the tool feet are flat on the surface of the deck board and that the tool is centered over the joist. The Spacer Teeth automatically create a 3/16" gap between the boards.

### LOAD:



With the tool set on the board, place one CAMO hidden fastener into the screw guides on both ends of the Marksman Pro tool. Note: if the tool is not set on the deck board, the screws will slide out of the screw guides.

### DRIVE:



Set drill to highest speed. A high RPM drill is recommended.

Begin on the "outside edge" at the end of the unfastened deck board (the edge furthest away from the installed deck board or starter board). **No pre-drilling is required.**

Start the CAMO screw with gentle pressure, running the drill at full speed throughout. The CAMO screw is designed to spin and auger out material for approximately 1/2 inch to prevent splitting. Once the screw is started, you may gently increase pressure and the screw will bite and drive home quickly.

When the shoulder of the CAMO bit reaches the tool screw guide, the depth of drive is automatically set and you are finished driving the fastener. You cannot over drive the screw.

**TIP: LET THE SCREW DO THE WORK!** You do not need to force the screw in.

Once you have fastened the first screw on the outside edge, you may drive the CAMO screw on the inside edge of the board repeating the same drive instructions.

Move directly to the next joist and repeat the drive instructions; remember to start on the outside edge of the deck board. Continue down the length of the deck board until the entire plank is installed. Do not skip any joists.

### ATTENTION:



To ensure proper performance of the CAMO Marksman Pro, it is important to regularly check the Screw Guides for deck material build-up. If material is present, use the Clearing Tool to clear the Screw Guide. If you are installing IPE or other dense deck product, you will want to perform this action more frequently.

**Butt Joints:** Follow deck board manufacturers' suggested spacing and fastening installation method for butt joint situations. It may be necessary to block joist at the butt joint depending on the type of decking you are installing.

**45° Angle Installations:** Position the Marksman over the edge of the "high side" of the joist so that the fastener remains completely in joist when fully driven.

To view an installation video or for more information, go to [www.camofasteners.com](http://www.camofasteners.com) or contact us at (800) 968-6245.

**national nail corp.**  
more than just nails