

# User Manual: Bike Chain Lock



## Instructions to reset and use:

### Step 1

Dial the combination wheels to initial password 00000 to open the lock.

### Step 2

While open rotate the reset knob 90 degrees clockwise (the reset knob can't be rotated if the password is wrong).

### Step 3

Set your preferred combination.

### Step 4

Remember the password and rotate the reset knob 90 degrees counterclockwise to lock the password.

### Step 5

Scramble all the numbers and then toggle back to the previous set password (Prevent digits from jittering).

### Step 6

Insert the lock latch into the lock unit to complete the password resetting.

#### Note:

If you want a new password, please repeat Steps 1 to 6.