

vive®



5" ALTERNATING PRESSURE MATTRESS

Owner's Manual
LVA1082

vivehealth.com

OVERVIEW

We are constantly answering questions and recording helpful videos to make using your Vive 5" Alternating Pressure Mattress as easy as possible. Throughout the manual we will include QR codes and links to important videos that you can visit for help.



To see all FAQ's in one place
visit vhealth.link/7cce3

WHAT'S INCLUDED

- 5" Alternating Pressure Mattress
- Mattress Cover with attachment straps
- Air Pump
- Air Tubes
- Patching Kit
- Spare Bladder Replacement

SET UP INSTRUCTIONS



For a video demonstration,
check out vhealth.link/clu

1. Unfold the mattress, and orient on the bed with the CPR valve positioned toward where the patient's right shoulder will be.
2. Attach the mattress cover to the top and bottom of the mattress using the snaps. The cover should be attached with the head icon closest to the CPR valve and the foot icon closest to the air tube connection point.
3. Secure the air mattress to the bed mattress or frame using the nylon straps. Attach the straps loosely.
4. Place the air pump on a table or hang from the foot of the bed with the attached hooks.

5. Connect the inflation tubes from the mattress to the compressor pump's inflating nozzles. Make sure they are properly secured. Tubes can be pulled apart if needed.
6. Connect the compressor pump to a standard 110v US outlet.
7. Check the red CPR valve on the side of the mattress to ensure that it is sealed. Valve should only be opened if the patient on the bed needs resuscitation.
8. Cover the mattress with a fitted bed sheet, if desired.
9. Make sure all connections are secure and press the On/Off switch on the pump. The compressor pump will begin inflating.
10. Adjust the pressure dial to your desired level of inflation, from firm to soft.
NOTE: The mattress will take 40 minutes to inflate fully at the highest pressure setting.

CLEANING AND MAINTENANCE

Pump: Disconnect the pump from the wall outlet before cleaning. Wipe down with a dry cloth.

Mattress: Wipe down with a damp cloth pre-soaked with warm water or a mild disinfectant.

Air dry the mattress without direct exposure to sunlight until the mattress is fully dry before returning the patient to the cleaned area.

The mattress DOES NOT need to be disconnected from the pump to vent air. The mattress will stay inflated even if pump power is lost, so long as the air hoses are not disconnected.

REPAIR GUIDE



For a video demonstration,
check out vhealth.link/sq

For SMALL PUNCTURES: Use the patch kit.

1. Fully deflate the unit.
2. Unzip the mattress cover and locate the puncture.
3. Add glue around the edges of the patch.

4. Firmly place the patch over the puncture. Hold the patch down until the glue is dried.
5. Let stand for a minimum of 2 hours before using the mattress.
6. If needed, apply more glue to the loose edges of the patch to ensure a secure fit.



For a video demonstration, check out
vhealth.link/2eead

For LARGE PUNCTURES: Replace the bladder

1. Fully deflate the mattress.
2. Remove the mattress cover and locate the puncture.
3. Detach the punctured cell from the two hoses within the mattress.
4. Remove punctured cell from the mattress. Replace the cell. Be sure to thread the replacement cell under the clear plastic holder loops.
6. Re-attach the hoses to the cell. Be sure the hoses are securely in place before turning on the unit.
7. Reattach the mattress cover and reactivate the pump to reinflate.

SPECIFICATIONS

Alternating Mattress

- Inflated Length: 77"
- Inflated Width: 34"
- Inflated Height: 4.5"
- Materials: Nylon TPIJ cell, 4-way stretch nylon PU covering

Pump

- Interval Duration: 6 Minutes
- Air Output: 6-7 L/Minutes
- Pressure Range: 35-130 mmHg
- Electrical Power Supply: 110-120 Volts

WARNING

- Maximum weight is 320 pounds.
- Never attempt to change the mattress position while connected to the electrical supply.
- Never leave the mattress or compressor exposed to high levels of humidity or direct sunlight for extended periods of time.
- Never use corrosive cleaning chemicals, acetic solvents or industrial degreasers on the mattress.
- Do not inflate the mattress with the patient already laying on it.

WARRANTY INFORMATION



GOT MORE QUESTIONS?

Check out our list of Frequently Asked Questions at vivehealth.link/7cce3 for helpful answers.



And if that doesn't answer your question, our customer service team would love to help! Feel free to connect with them by phone, e-mail, or chat on our website.



service@vivehealth.com



1-800-487-3808



vivehealth.com