

ULTRA CLEANER

QUICK START GUIDE

PARTS LIST



(A) Water Max Level
(B) ON/OFF Switch
(C) Indication Light

(D) Plastic Cleaning Basket
(E) Watch Stand

HOW TO USE

Step 1:

Open the lid and fill the tank with water up to the fill line (A). For enhanced cleaning, add 1 to 2 teaspoons of dish washing liquid, denture tablet or another soft cleaner to the water.

Step 2:

Place the plastic basket (D) into the tank and add the item to be cleaned into the basket. The item should be completely submerged in the water. NOTE: If you are cleaning a watch, hang the watch stand (E) on the inside of the basket and position the watch on the stand so that the face stays above the water.

Step 3:

Close the lid and plug the unit into a standard 110V outlet.

Step 4:

Press the ON/OFF (B) button to start the standard three minute cleaning cycle. The cleaning cycle indicator light (C) will turn on when the cycle starts and will stay lit through the entire cycle.

Step 5:

The unit will stop cleaning after three minutes. To stop the cleaning cycle before it is finished, press the ON/OFF (B) button.

Step 6:

When the cleaning cycle has ended, unplug the unit and open the lid. Carefully remove the item from the basket (D).

Step 7:

Empty the tank of any water and wipe out completely.

WARNINGS ⚠

- Do not attempt to disassemble this unit.
- Make sure the unit is unplugged before filling with water.
- Never fill the tank above the water fill line.
- Do not plug the unit in with wet hands.
- Do not get the plug, cord or outside of the unit wet.
- Do not immerse this unit in water.
- Do not let this unit run unattended.
- Do not use a detergent that may harm the items you are cleaning.

vive®