

HotSwop PRO – Assembly Instruction

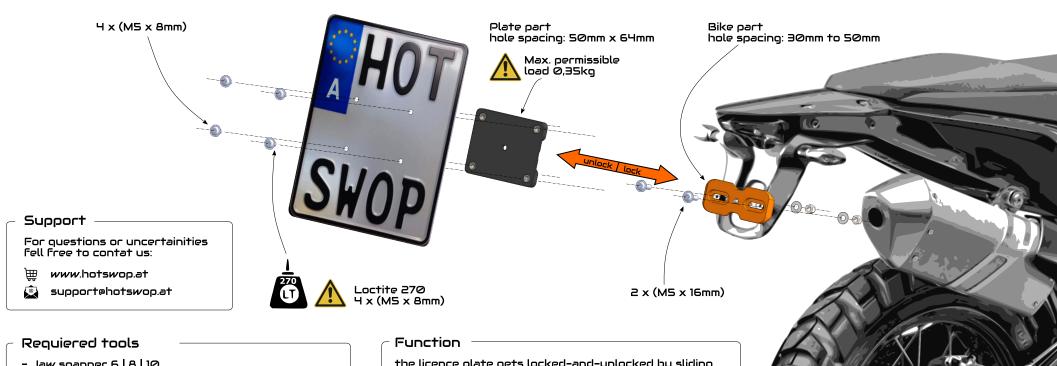

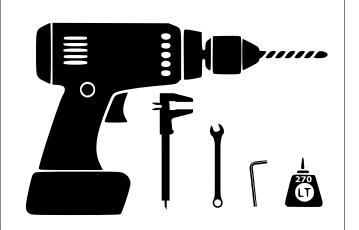

- Jaw spanner 6 | 8 | 10
- Drill Ø5 | optional Ø12
- Allen key 3 | 5 Loctite 270 (high strenght)
- Caliper



the licence plate gets locked-and-unlocked by sliding the Plate part which is mounted on the license plate, onto the Bike part. Then pull the locking bolt, which locks as soon as the plate part is positioned centrally with the bike part.

Safety instructions

Safety-relevant information and work steps are marked in the instructions as shown below and must be followed unconditionallu:



indicates that there is a risk of death or injury in case the procedure is not carried out correctly.

Indicates possible damage of components

Liability -


Any technical modification is prohibited. For damage due to non-observance of the instructions, improper use or installation, no liability is assumed.





HotSwop PRO - Assembly Instruction






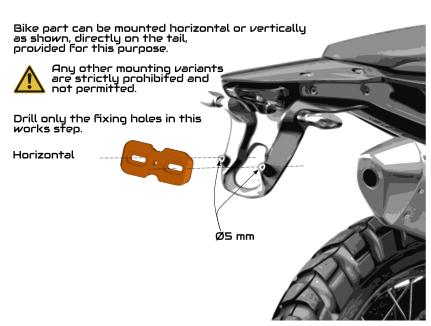

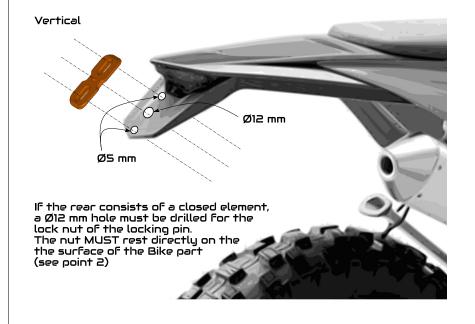

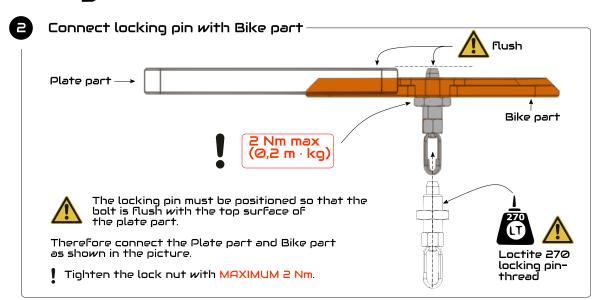

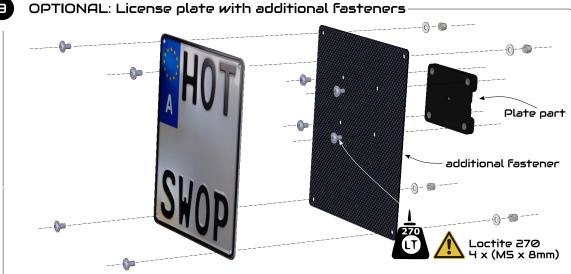

For direct connection of the license plate with the Plate part: see Page 1.



When using additional retaining parts (licence plate holder, aluminium or carbon plates*, etc.), particular care must be taken that the maximum permissible load of the plate part of 0.35 kg is not exceeded.

BENEFIT: If additional retaining elements are used, no central holes are required in the licence plate. Also the licence plate is additionally protected and strengthened.

* Available in the online shop