

How To Setup 2-CH Split Screen

A. Default 2-CH Split Screen Setup Guide

Step-01: Login MDVR Main Menu,=>BASIC=>DISPLAY=>Main Output setup=> Apply

Main Output Mode

- 1x1: Single Display after Starting
- 2x2: 4-CH Split Display after Starting
- 1x2: 2-CH Split Display after Starting
- 2x1: 2-CH Split Display after Starting

After Setup Main Output Mode, The Display will auto adjust and then you can setup the video channels for 2-CH display at random.

For Example, CH1&CH3/ CH1&CH2 ect for 2-CH Split Screen.

Step-02: After setup above, Restart MDVR, The Video will be auto 2-CH Split Screen

B. Mutil-Display Mode on Monitor

Step-01: MDVR start and Call MDVR Control Bar like the picture below

Click Switch Screen Button

Step-02: After click Swithc screen button, it will show like the picture belows:

- Single Split Screen Display
- 2-CH Split Screen-Up&Down show
Click 1st Time, Display 1-2CH,
Double Click, Display 3-4CH
- 2-CH Split Screen-Left&Right show
Click 1st Time, Display 1-2CH,
Double Click, Display 3-4CH
- 4-CH Split Screen Display

Noted: This kind of Setup only can not be used for default 2-CH Split Screen for MDVR Starting and only for Diplay. After Restart MDVR, it will be back to default Split screen Mode