 


Gold 1080P 2-4 Dash Camera Quick Start Guide

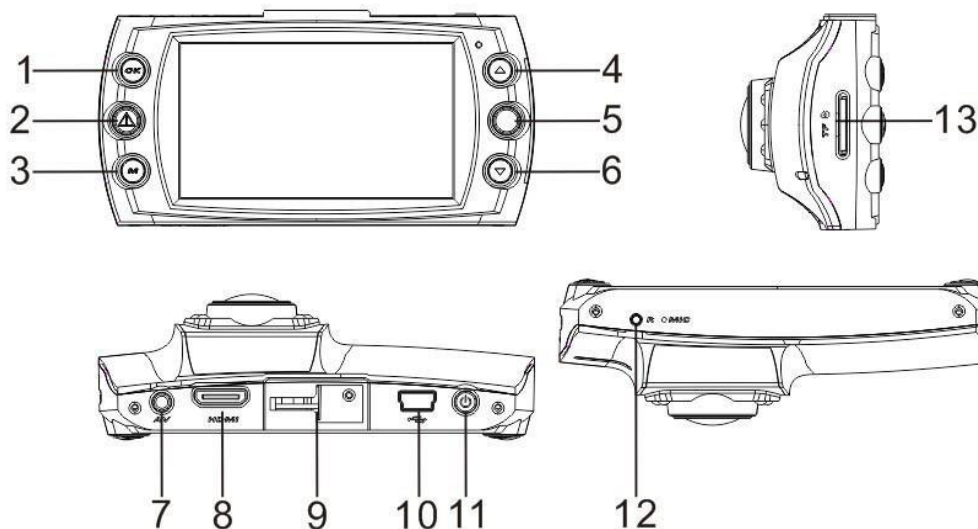

DESCRIPTION OF BUTTONS

1. OK
2. Manual Lock
3. Menu
4. Up arrow
5. Park Monitor
6. Down arrow
7. Outside Camera Port
8. HDMI
9. Mount Entry
10. USB PORT
11. Power Key
12. Master Reset
13. SD card slot

INITIAL STARTUP SETTINGS

It is recommended that you FORMATT SD cards.

- Pressing top left “ok” button, make sure camera is not recording.
- Once camera is not recording, press bottom left, “m” button
- On menu screen, using top right arrow button, press 3x or until you have highlighted “Format” Press top left “ok” button- press top right arrow button to highlight “ok” option and then press top left “ok” button to format card. SD card is now formatted and if you format SD card in the future, it will erase everything that is currently on card.

Setup instructions to keep dash camera from freezing:

- Pressing top left “ok” button, make sure camera is not recording.
- Once camera is not recording, press bottom left, “m” button
- Press the bottom right down arrow button until “Move Detect” is highlighted
- Press top left “ok” button to make sure box is not checked
- Press the bottom right down arrow button until “Park Monitor” is highlighted
- Press top left “ok” button to make sure box is not checked
- Using bottom right down arrow, highlight G-Sensor.
- Press top left “ok” button and use arrow buttons to highlight “low” and select using top left “ok” button to check “low” setting box.

You are now done with basic initial setup

- Press bottom left “m” button to get back to your main video recording mode.
- Press top left “ok” button to start recording

Master Reset button is located on bottom side of camera:

Using a safety pin, thumbtack, toothpick, etc. Press button for a master reset of 1440P dash camera.

Setting Date and Time:

Make sure camera is not recording

Short press "Menu" button

Short press "DOWN" 14 times or until "Date" is highlighted

Short press "OK" button

Short press "UP" or "DOWN" to change year if needed

Viewing Videos & Pictures:

Make sure camera is in not recording

Long press "Menu" button for 3 to 5 seconds this will put your camera into photo mode (Symbol in the upper left-hand corner should change from a red video camera to a white square.

Long press "Menu" button for 3 to 5 seconds again and camera will switch into video play back mode (The symbol in the upper left-hand corner should change to a light blue square with a play arrow inside)

Short press the "UP" or "DOWN" button to scroll through videos and pictures

Short press "OK" button to play videos

Short Press "Menu" button to delete videos (That are not locked) and pictures

Picture in Picture (Second/Outside Camera Control):

Make sure camera is in not recording

Plug the outside camera into the "Outside Camera Port "(A small picture should appear in the upper right-hand side of the screen)

Short press "UP" button once to make outside camera the main video & the main camera displaying in the smaller box/pic.

Short press "UP" button again to make the outside camera the only picture

Short press "UP" button again to make the main camera the only picture

S.O.S. Lock/Save Recording:

This is used to lock and save files so that they are not recorded over.

Make sure camera is in record mode

While camera is recording short press "Manual Lock Button "(A lock should appear in the upper right-hand corner of the screen)

The video recording is now locked and the only way to erase the video is by formatting the camera. Press OK button to stop locking video. Press OK to start recording.

Move Detect Feature: DO NOT HAVE ON/CHECKED WHILE DRIVING

This is used to monitor the front of the vehicle when it is parked for a short period (Camera must be on for this option to trigger)

Make sure camera is not recording

Short press "Menu" button to enter menu

Short press "DOWN" button 3 times or until "Move Detect" is highlighted

Short press "OK" button to check or uncheck (Checked box means cam is in move detect mode)

Short press "Menu" button to exit menu

Park Monitor: DO NOT HAVE ON/CHECKED WHILE DRIVING

This is used to monitor the vehicle while parked for long periods (Option is triggered when the camera is powered off and feels vibration)

Make sure camera is not recording

Short press "Park Monitor" button to turn the option on or off (middle Red Button on right side of dash camera)

There should be an icon of an eye when the option is on

There should be an icon of an eye crossed out when the option is off