

1440P Dash Camera Quick Start Guide



Description of Buttons

1. Commercial Grade 3M Mount
2. Car Charger Port
3. Menu button
4. Up arrow
5. Down arrow
6. OK button
7. Speaker
8. Front recording camera lens
9. Master Reset port
10. Blue light indicator
11. Red light indicator
12. Back monitor LCD display
13. SD Card Slot
14. ON/OFF button

1440P Initial Setup Instructions

It is recommended that you FORMATT SD card.

Press bottom left "OK" button, make sure camera is not recording.

- Once camera is not recording, press menu button 2x
- On menu screen, using down arrow button, press 8x or until you highlight "format"
- Press "OK" button- press down arrow button to highlight "FORMAT". Press Ok to format card. SD card is now formatted. If you format SD card in the future, it will erase everything that is currently on card.
- We recommend formatting card once a month.

Setup instructions to keep dash camera from freezing:

- Menu button once. Press down arrow 5x to highlight "motion Detection". Press ok and turn Off
- Press down arrow button 8x until "G-Sensor" is highlighted, Press Ok and set to "LOW", Press OK
- Press down arrow button 9x until "Park Monitor" is highlighted and then turn off
-

You are now done with initial setup.

- Press Menu button to get back to your main video mode.
- Press "OK" button to start recording

Master Reset port is located on right side of camera

Using a safety pin, thumbtack, toothpick, etc. Press inside hole for a master reset of 1440P dash camera.